


# INSTALLATION GUIDE

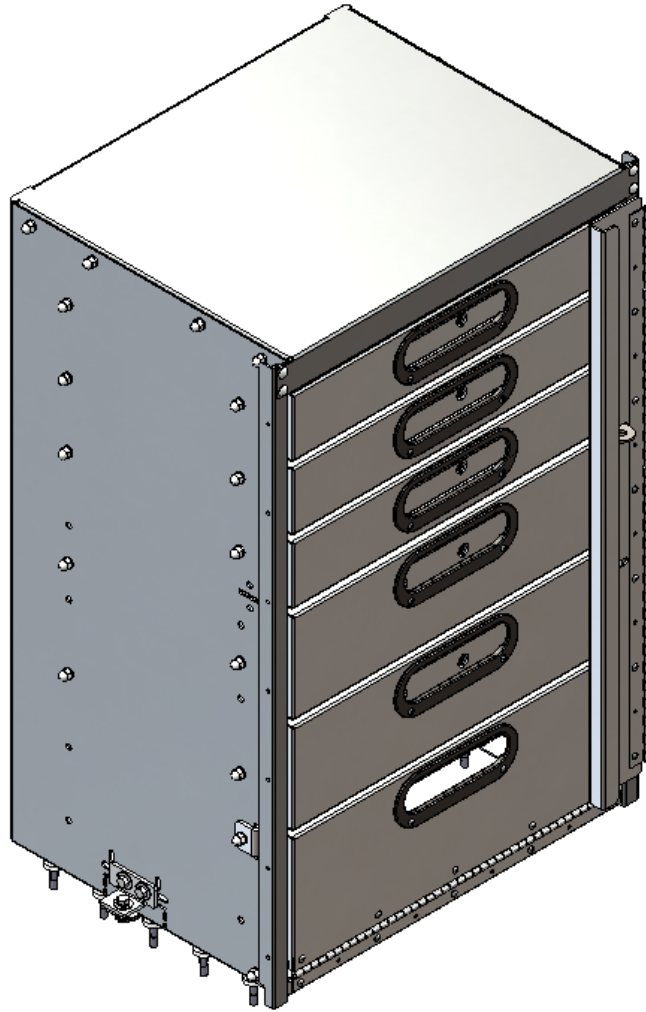

## 5060-5 Drawer Cabinet

5 Drawers (Aluminum)



# QUICK START GUIDE


## Phase 1 - Assembly

❑ 1.1 Setup.....	3 - 4
❑ 1.2 Drawer Cabinet Assembly.....	5

## Phase 2 - Installation

❑ 2.1 Drawer Cabinet Installation.....	6 - 11
--	--------

# REQUIRED ITEMS

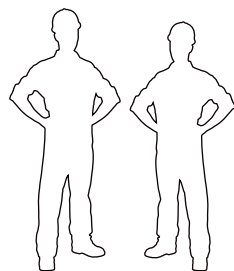


**2  
PERSONS**

- ❑ Cordless Impact
- ❑ Cordless Drill
- ❑ Tape Measure
- ❑ Marker
- ❑ 1/2" Socket
- ❑ 3/8" Drill Bit
- ❑ 7/16" Socket
- ❑ 1" Hole Saw
- ❑ Knife
- ❑ Plus Nut Tool

# PHASE 1 – ASSEMBLY

## 1.1 SETUP

1.1.1 Unpack components; compare with the bill of materials.

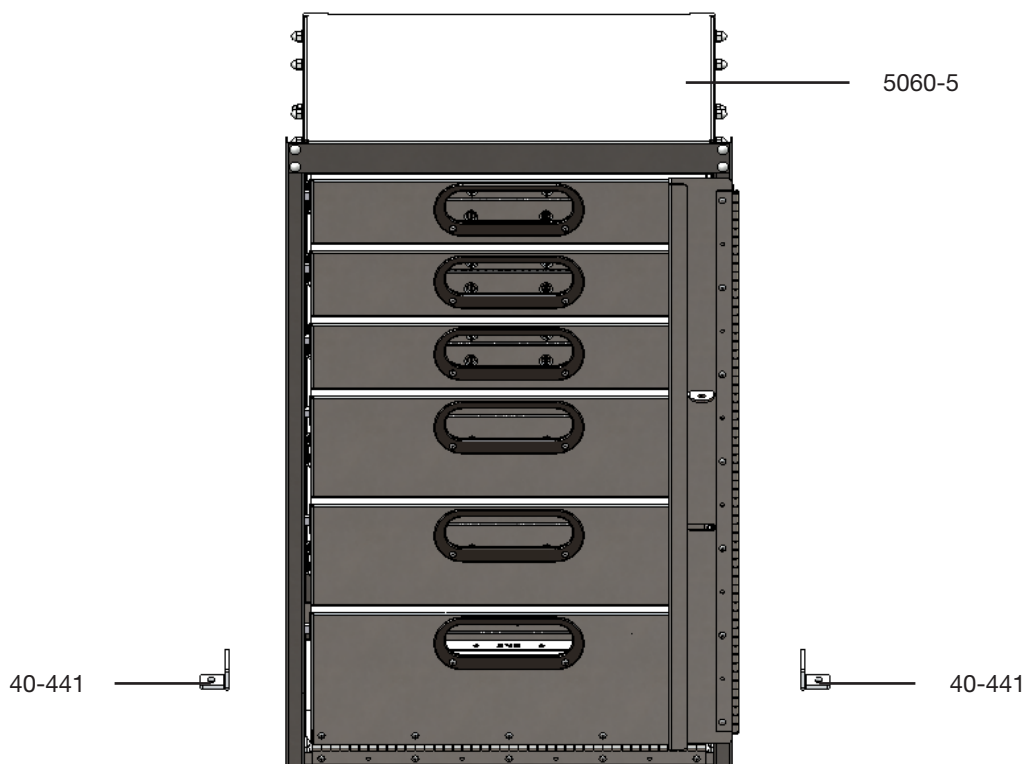


1.1.2 Verify all parts are present.

### BILL OF MATERIALS

Item No.	Description	Qty.
40-441	Mounting Track Installation Bracket	2
5060-5	Drawer Cabinet	1
94-8001	Assembly Fastener Kit	1
96-5003	Install Fastener Kit	1

### 1.1.3 Fastener kits.




#### 94-8001 Fastener Kit




#### Fastener Assembly

- |    |   |          |  |
|----|---|----------|--|
| 4x |  | # 90-204 | Hex Bolt<br>5/16"-18 x 3/4"<br>GR-5 ZINC |
| 4x |  | # 94-116 | Serrated Nut<br>5/16"-18<br>ZINC         |
| 4x |  | # 98-116 | Flat Washer<br>5/16" x 18<br>ZINC        |

#### 4x ( FOR MOUNTING KITS ONLY )

- |   |                      |              |
|---|----------------------|--------------|
|  | #90-204 Hex Bolt     | 5/16" x 3/4" |
|  | #98-116 Flat Washer  |              |
|  | #94-116 Serrated Nut |              |






#### 96-5003 Fastener Kit







#### Fastener Assembly

- |     |   |          |  |
|-----|---|----------|--|
| 2x  |    | # 90-208 | Hex Bolt<br>5/16"-18 x 1"<br>GR-5 ZINC               |
| 2x  |    | # 90-114 | Hex Bolt<br>1/4"-20 x 1"<br>GR-5 ZINC                |
| 10x |  | # 90-130 | Hex Bolt<br>1/4"-20 x 2"<br>GR-5 ZINC                |
| 12x |  | # 94-130 | Plusnut .250   |
| 2x  |  | # 94-150 | Channel Nut w/ Spring<br>5/16"                       |
| 12x |  | # 98-112 | Flat Washer<br>1/4", O.D 3/4"<br>ZINC                |
| 2x  |  | # 98-116 | Flat Washer<br>5/16" - 18<br>ZINC                    |
| 12x |  | # 98-118 | Lock Washer<br>Regular 1/4"<br>ZINC                  |
| 2x  |  | # 98-122 | Lock Washer<br>5/16"<br>ZINC                         |
| 30x |  | # 98-157 | Spacer<br>0.375" ID, x 1.0" OD x 0.25" LONG<br>NYLON |





#### 10x

- |   |  |           |
|---|--|-----------|
|    | #90-130 Hex Bolt   | 1/4" x 2" |
|  | #98-118 Lock Washer  |           |
|  | #98-112 Flat Washer  |           |
|  | #98-157 Spacers<br>( QTY = GAP BETWEEN FLOOR AND END PANEL ) |           |
|  | #94-130 Plus nut   |           |

#### 2x

- |   |                     |           |
|---|---------------------|-----------|
|  | #90-114 Hex Bolt    | 1/4" x 1" |
|  | #98-118 Lock Washer |           |
|  | #98-112 Flat Washer |           |
|  | #94-130 Plus nut    |           |



#### 2x ( FOR MOUNTING KITS ONLY )

- |   |                     |            |
|---|---------------------|------------|
|  | #90-208 Hex Bolt    | 5/16" x 1" |
|  | #98-122 Lock Washer |            |
|  | #98-116 Flat Washer |            |
|  | #94-150 Channel Nut |            |

# PHASE 1 – ASSEMBLY

## 1.2 DRAWER CABINET ASSEMBLY

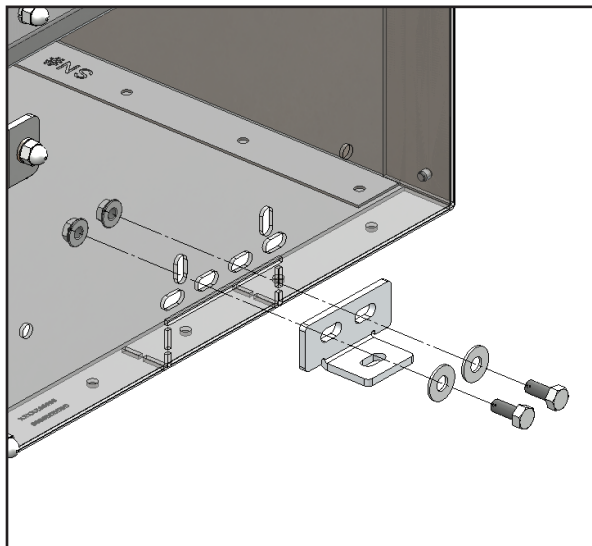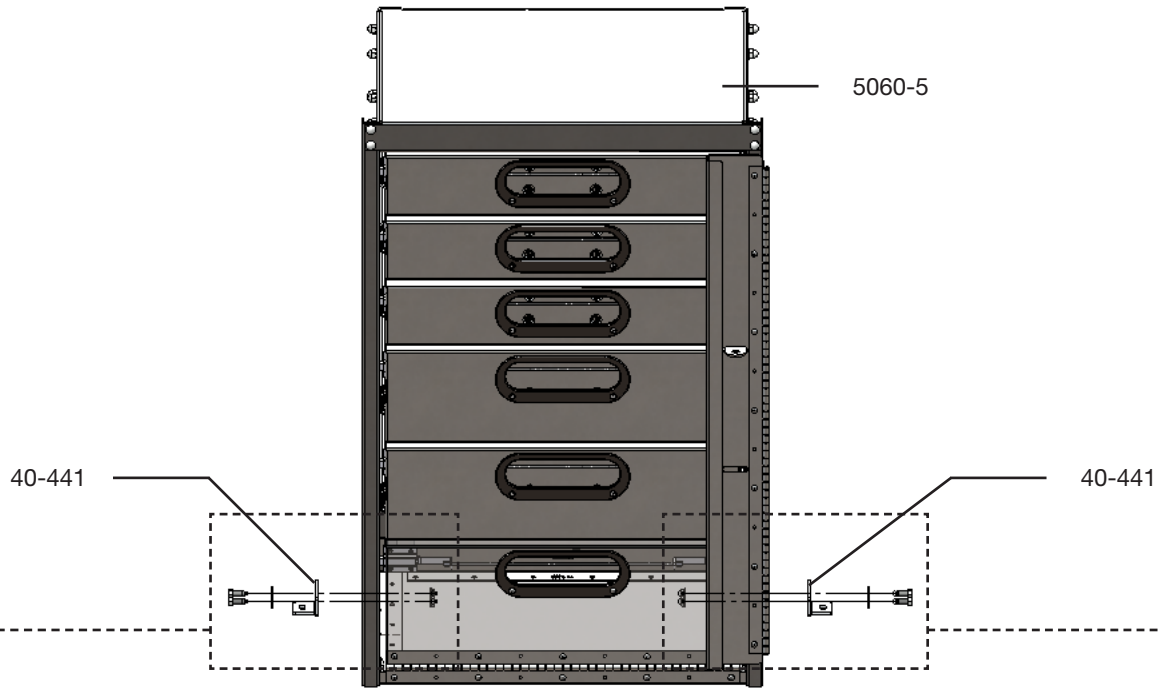


- 1.2.1**
- Remove all the PVC from all the parts.
  - If you have mounting kits attach the mounting track installation brackets.



**NOTE:** Don't do this step if you don't have mounting kits or mounting track.

### HARDWARE USED

**4x** HAND-TIGHTEN THE BOLTS


- |   |                               |
|---|-------------------------------|
|  | #90-204 Hex Bolt 5/16" x 3/4" |
|  | #98-116 Flat Washer           |
|  | #94-116 Serrated Nut          |

# PHASE 2 – INSTALLATION



## 2.1 DRAWER CABINET INSTALLATION

2.1.1 Sample vehicle package picture with 5060-5 drawer cabinet.

G717

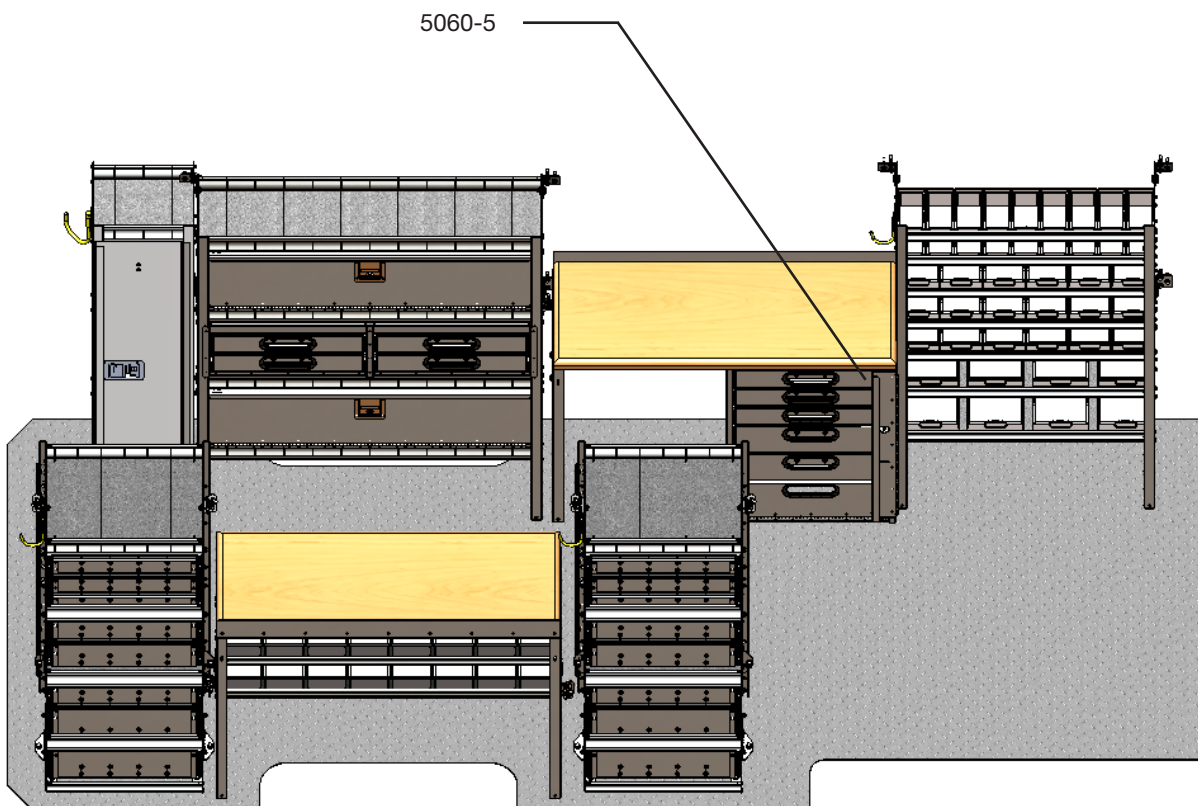

2.1.2 Remove all the drawers by pushing down or pulling up the black pin on the sliders.

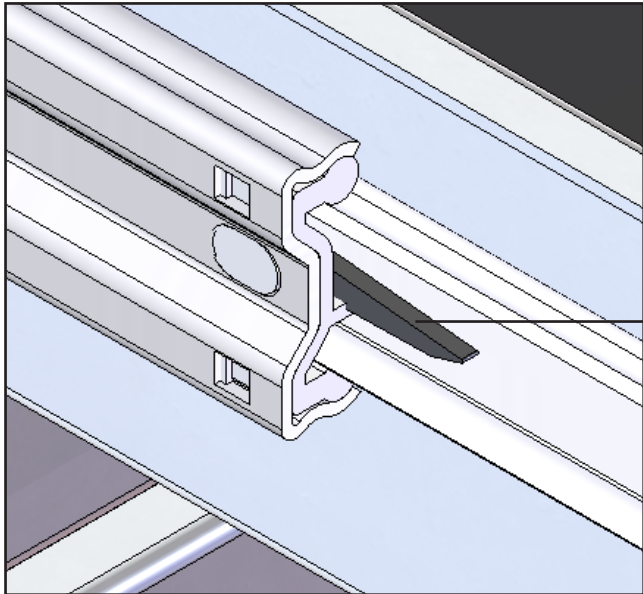
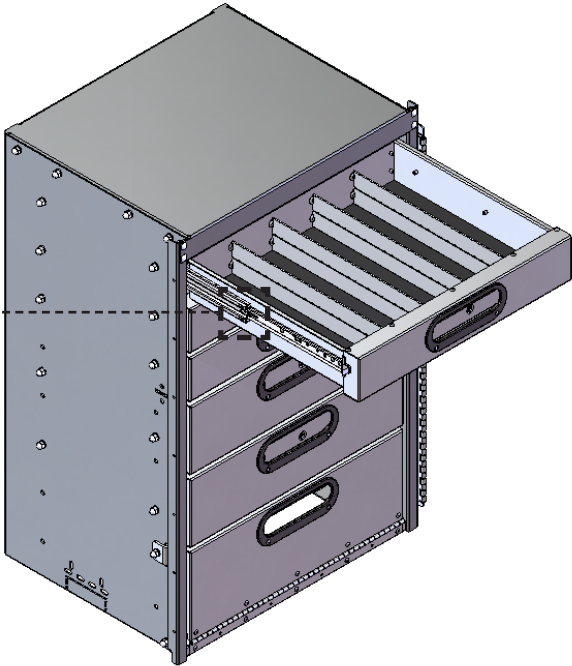


Remove the 5 drawers.

Left Slider - Pull up to remove  
Right Slider - Push down to remove

**2.1.3** Lift the drawer cabinet inside the van, then put it in place.

**NOTE:** Always start install from front of the vehicle to rear.

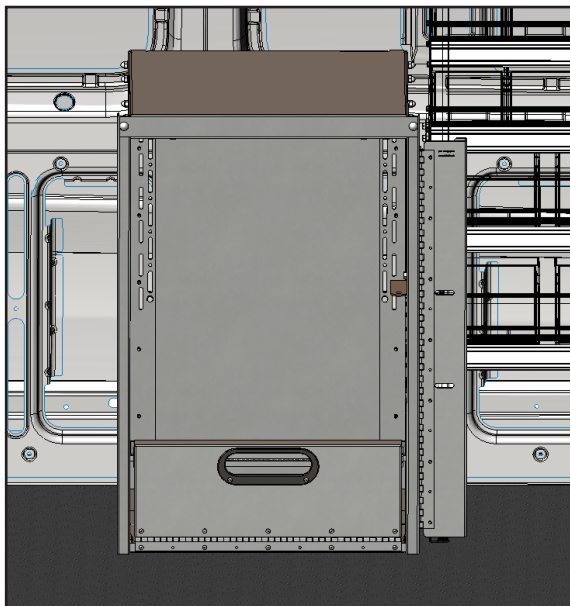
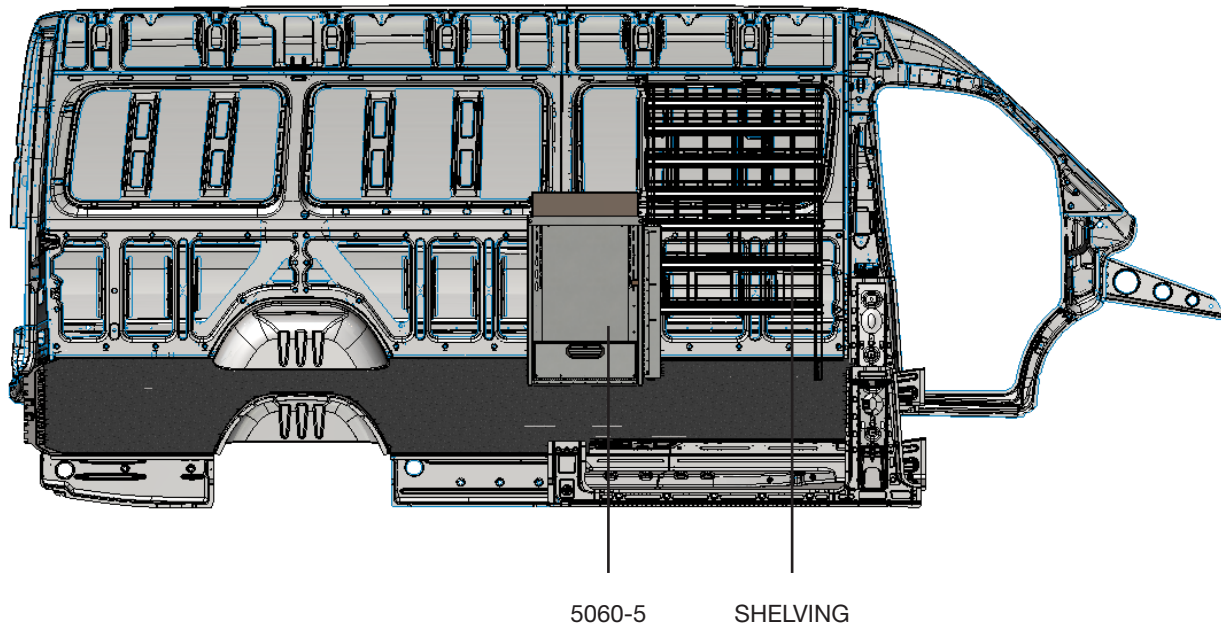


Put the drawer cabinet in place.

**NOTE:** The position of the drawer cabinet depends on your package.



**2.1.4** Mark the ten bottom holes on the vehicle floor and the two back holes on the horizontal rim.

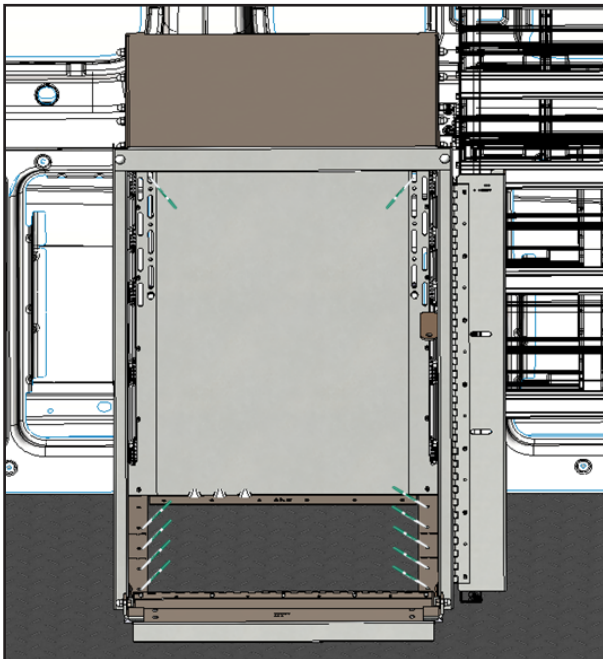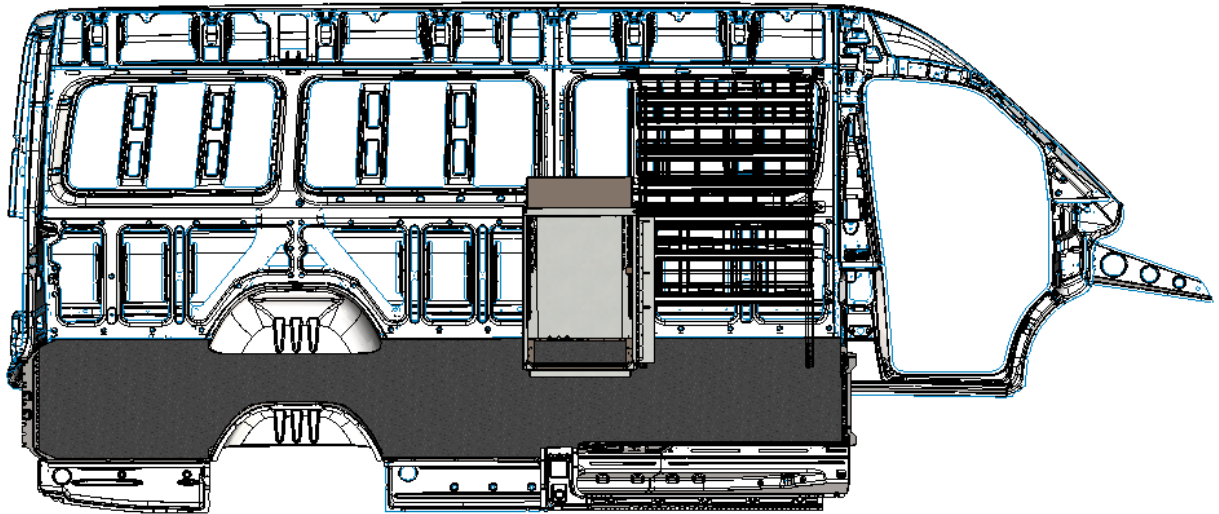



#### TOOLS

- Marker

**NOTE:** Mark the two holes on the rear panel that line up with the horizontal rail of the vehicle, and if you don't have a mounting kit with a floor track, mark the ten bottom holes on the floor.

- 2.1.5** • Lift the drawer cabinet on the side.  
• Drill all the marks using 3/8" drill bit, then attach plus nuts to the holes.

**NOTE:** Before drilling, ensure that you will not hit any critical parts of the vehicle like the **Gas tank**, **Wiring Harness** and **Hose**.

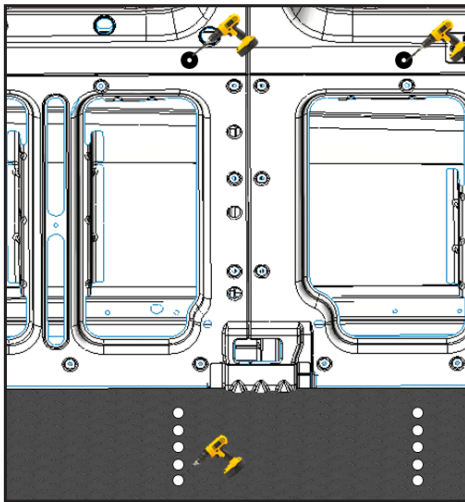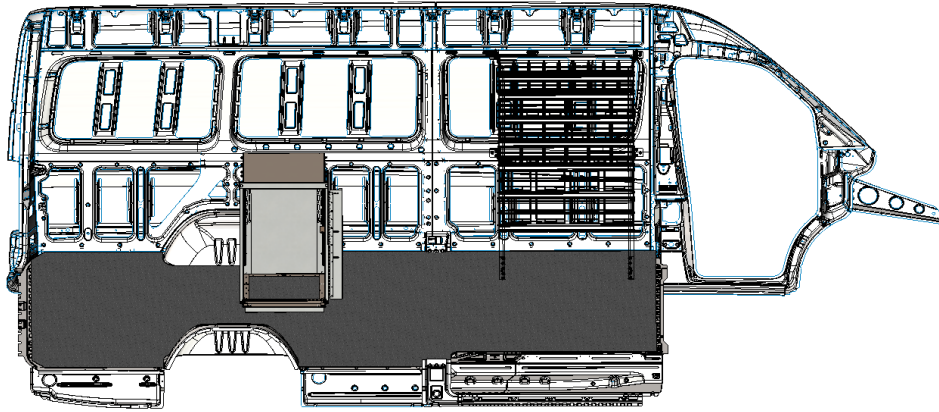


Drill all the marks using 3/8" drill bit.

**NOTE:** If the vehicle has wood or rubber floor, drill the floor using 1" hole saw, then drill the vehicle floor using 3/8" drill bit.

**TOOLS**

- ☐ Cordless Drill
- ☐ 3/8" Drill Bit
- ☐ 1" Hole Saw

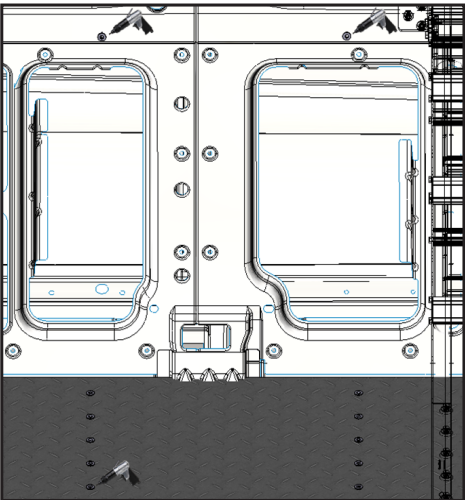

Attach plus nuts to the holes.

**TOOLS**

- ☐ Plus Nut Tool

**HARDWARE USED**


**12x**




#94-130 Plus Nut .250

2.1.6 Install the drawer cabinet to the van, then slide the drawers back to the drawers cabinet.

**NOTE:** After installing the locker make sure that all bolts are tightened.

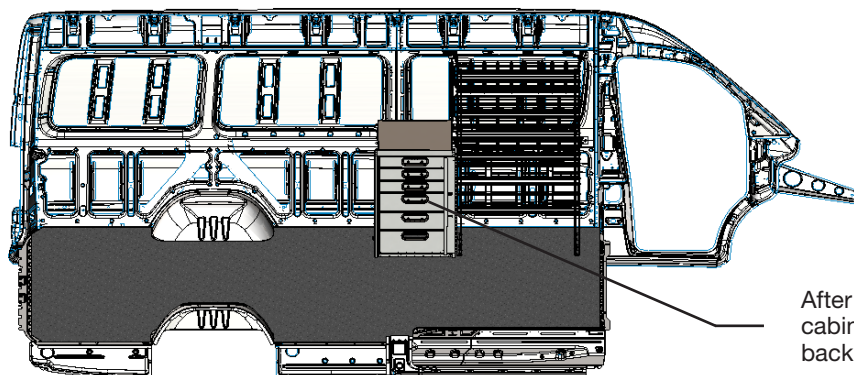

After installing the drawer cabinet, slide the drawers back.

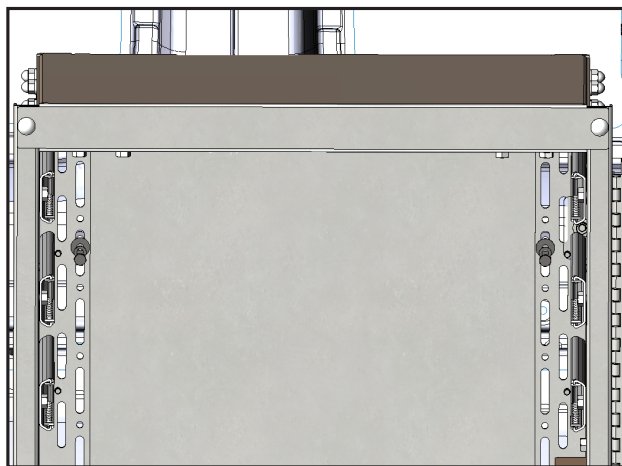

#### TOOLS

- ☐ Cordless Impact
- ☐ 7/16" Socket

#### HARDWARE USED

2x




#90-114 Hex Bolt 1/4" x 1"

#98-118 Lock Washer

#98-112 Flat Washer

#94-130 Plusnut (Already Installed)

**NOTE:** The number of spacers depends on the gap between the floor and end panel.

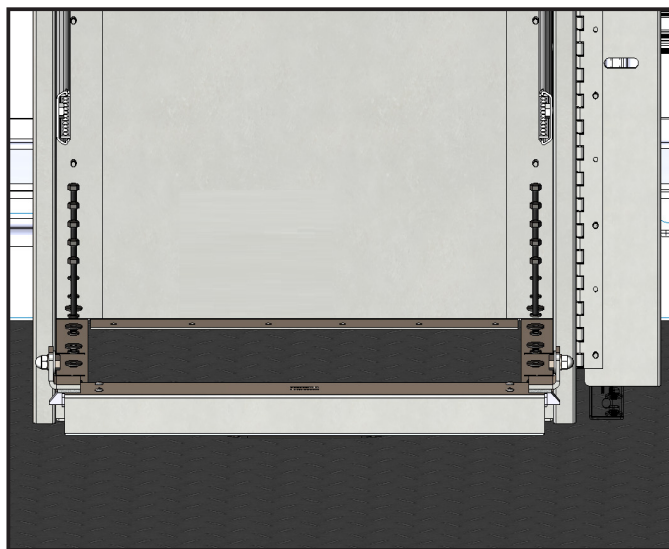

#### TOOLS

- ☐ Cordless Impact
- ☐ 7/16" Socket

#### HARDWARE USED

10x




#90-130 Hex Bolt 1/4" x 2"

#98-118 Lock Washer

#98-112 Flat Washer

#98-157 Spacers

#94-130 Plusnut (Already Installed)

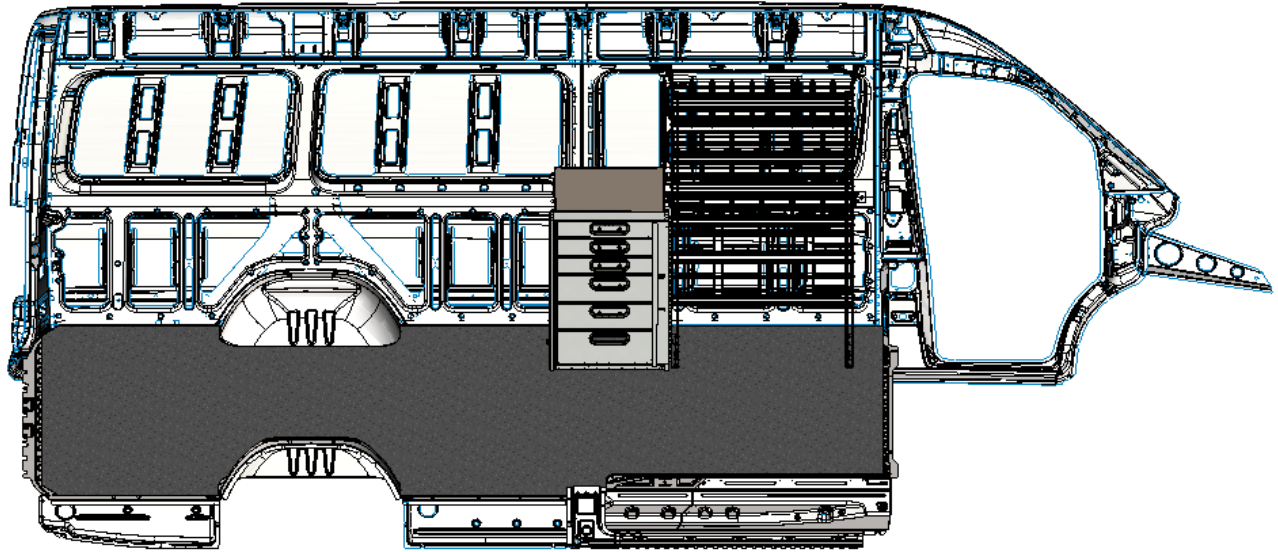

**“You have successfully installed your  
5060-5 Drawer Cabinet**

**Thank you for doing business with us.”**

For any feedback or suggestions you may have, please contact: [\*\*cs@rangerdesign.com\*\*](mailto:cs@rangerdesign.com)

