



## PRODUCT INFO


---

Part #: H1752W  
System: H1 Series  
Material: Aluminum  
Fitment: Ford Transit Cargo Van 2015-On  
Color: White

## REQUIRED TOOLS

---

Power Tool With Phillips Head

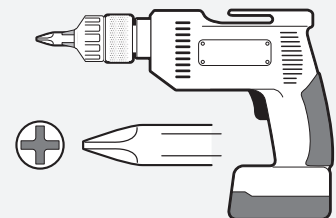

1/2" Wrench



**PART#****DESCRIPTION****QTY****ITEM**

items not drawn to scale

W008

5/16" X 3/4" WASHER

4



W022

5/16" LOCK WASHER


4



B018

1 3/4" X 5/16" CARRIAGE BOLT


2



B201

TAP SCREW


8



B246

M8-35 HEX BOLT

4



N016

5/16" PLASTIC KNOB

2



H34

H1 MOUNTING BASE

4



A613-54

2" X 1" X 54" CROSS BAR

2



G206

RUBBER SEAT 6"

4



A02

LADDER GUIDE

1



A06

LADDER STOPPER

1



A69

EZ-HOOK &amp; LOOP STRAP

1




BG546

PLASTIC BAR GUARD 46"


2



## Hook & Loop Strap

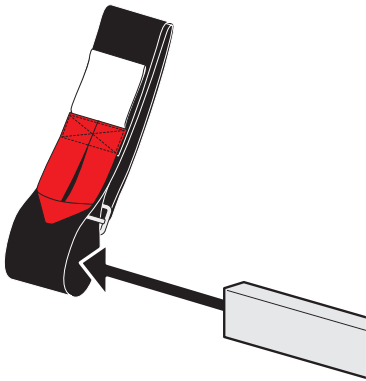

## Directions

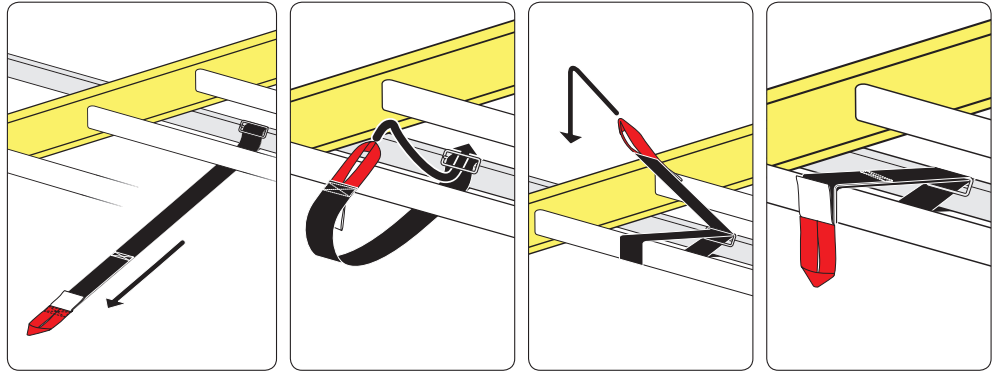

## RUBBER BAR GUARDS

- Press the rubber bar guard into the channels of cross bars
- Leave 4" on each end

