



Van & Truck Cargo System

Vantech USA www.vantech.us




PRODUCT INFO

Part #: J2202W
System: J2000
Material: Aluminum
Fitment: Ford Transit Connect 2014-On
Color: White



















REQUIRED TOOLS

3/16" Allen Key Wrench




1/2" Wrench




PART #	DESCRIPTION	QTY	ITEM ITEM NOT DRAWN TO SCALE
S052	DOUBLE SLIDER 2" BOLT TO BOLT	4	
S062	DOUBLE SLIDER 1 3/8" BOLT TO BOLT	1	
W001	1/4" X 1/2" WASHER	8	
W008	5/16" X 3/4" WASHER	22	
W022	5/16" LOCK WASHER	4	
B065	5/16" X 1" HEX BOLT	2	
B103	1/4" X 1 1/4" BUTTON HEAD ALLEN BOLT	8	
B068	5/16" X 1 3/4" HEX BOLT	4	
N002	5/16" NUT	4	
N005	5/16" NYLON NUT	12	
M11	MOUNTING BASE (STANDARD)	4	
A285-50	2.25" X 1" X 50" CROSS BAR	2	
G203	RUBBER SEAT 2.75"	4	
BG550	RUBBER BAR GUARD 50"	2	
A04	SIDE SUPPORT	4	
A11	LADDER BASE	1	
A15	STOPPER	1	
A69	EZ-HOOK & LOOP STRAP	1	

Hook & Loop Strap


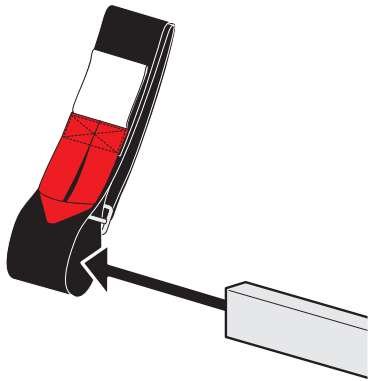


Directions


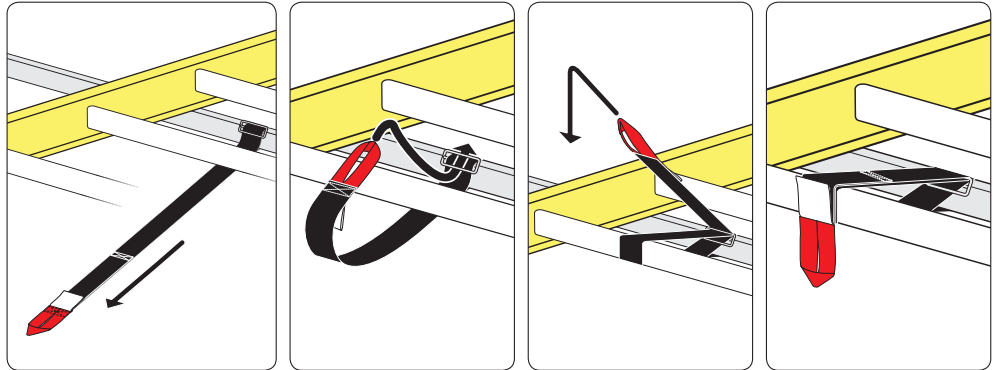


RUBBER BAR GUARD

- Press the rubber bar guard into the channels of cross bars

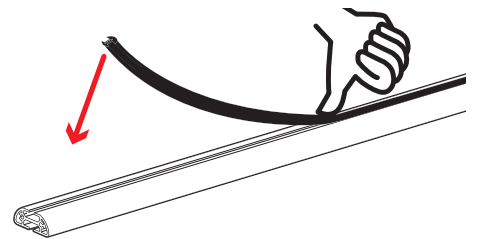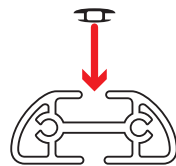

SYSTEM PLACEMENT MUST BE PLACED IN THIS ORDER

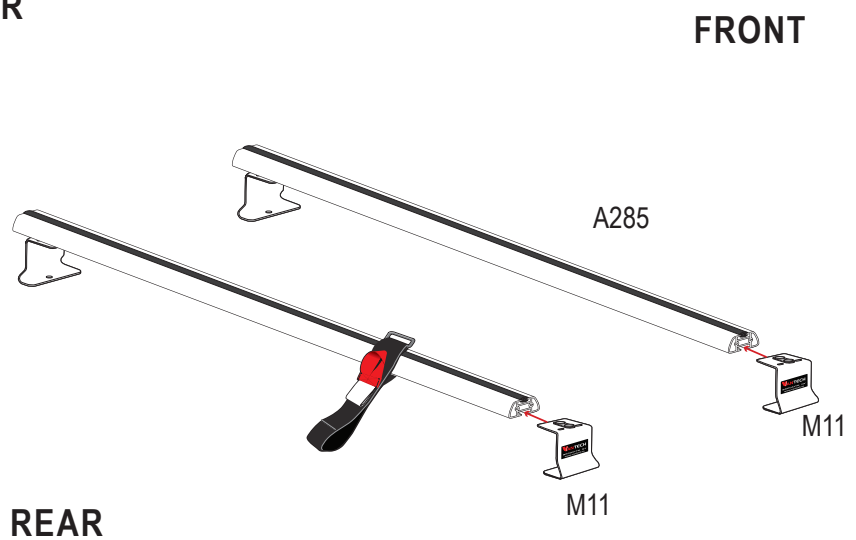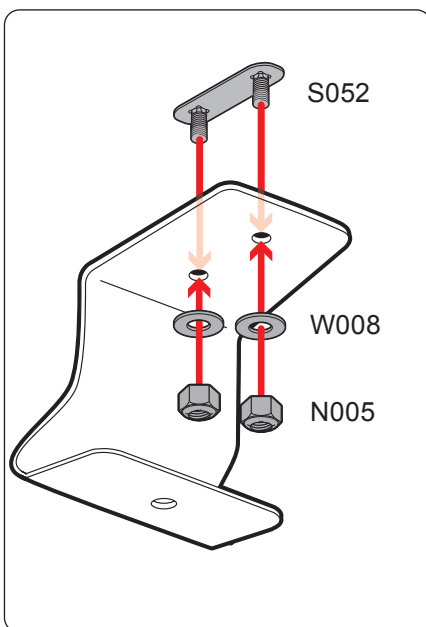

Do not tighten hardware

