

LEGEND FLEET SOLUTIONS


SPRINTER 144" WB LOW ROOF WALL LINERS INSTALLATION INSTRUCTIONS



NOTES:


1. Before commencing, remove all wall liners and "D" Rings already installed in the vehicle.
2. Consult layout PDF and compare vehicle layout allocated Legend.
3. Prepare hardware shown below and have them ready for installation.
4. Wall liners will be installed in the order shown in the instructions.
5. A drill with a Phillips driver is required to install hardware (**C**) #8 Screws, shown below.
6. Reinstall all "D" Rings once the wall liner kit installation is completed.

Hardware

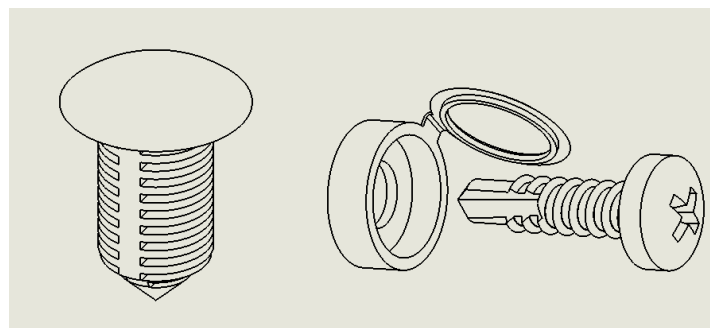

A) Retainer **B) #8 Screw Cap** **C) #8 Screw**

SPRINTER 144" WB LOW ROOF WALL LINERS

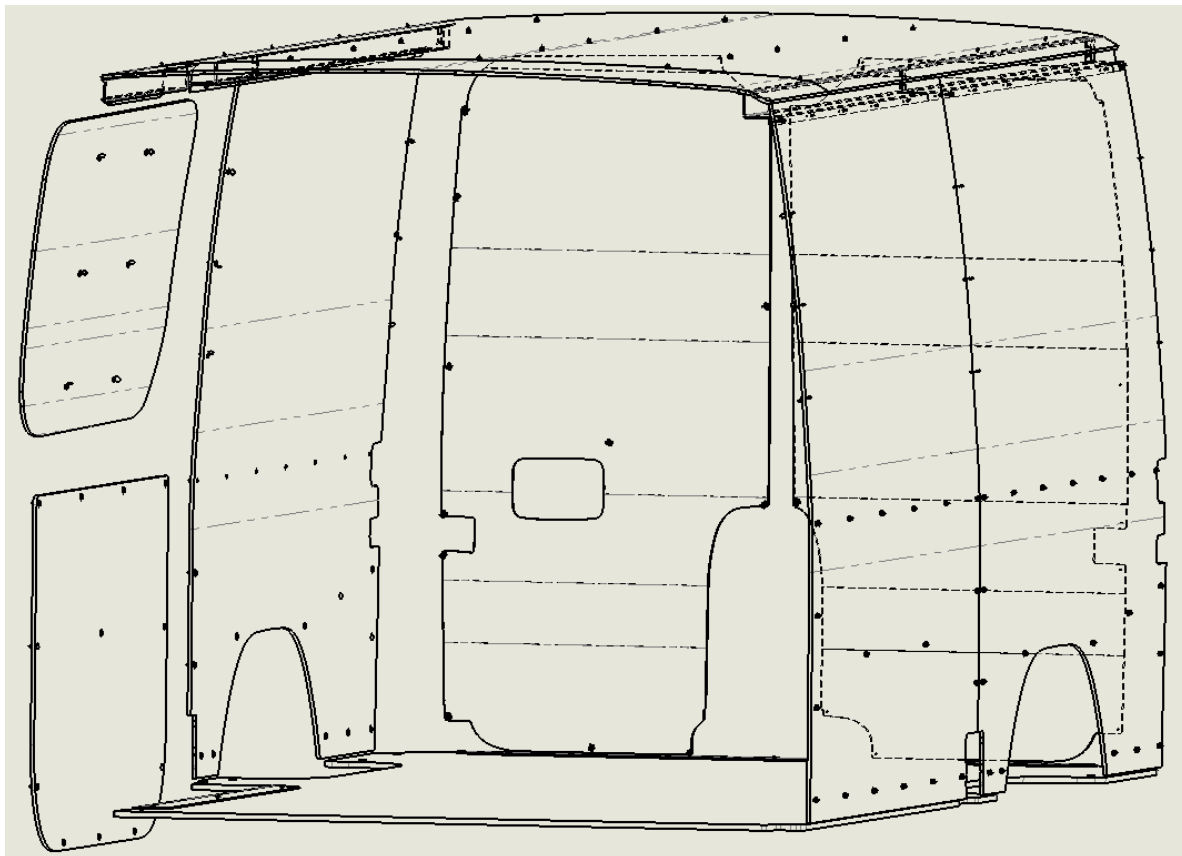

| ITEM NO. | PART NUMBER | DESCRIPTION | QTY. |
|----------|-----------------|---|------|
| 1 | 124-114-2613.LR | GREY REAR DRIVER SIDE PANEL SPRINTER 144" WB LR | 1 |
| 2 | 124-114-2613.LR | GREY REAR PASSENGER SIDE PANEL SPRINTER 144 WB LR | 1 |
| 3 | 125-114-2613.LR | GREY CEILING PANEL FRONT SPRINTER 144" WB LR | 1 |
| 4 | 125-114-2613.LR | GREY CEILING PANEL REAR SPRINTER 144" WB LR | 1 |
| 5 | 124-114-2613.LR | GREY FRONT DRIVER SIDE PANEL SPRINTER 144" WB LR | 1 |
| 6 | 127-151-1010.LR | CEILING SILL C SPRINTER 144" WB LR | 1 |
| 7 | 127-151-1010.LR | CEILING SILL C-1 SPRINTER 144 WB LR | 1 |
| 8 | 127-151-1010.LR | CEILING SILL D SPRINTER 144" WB LR | 1 |
| 9 | 127-151-1010.LR | CEILING SILL A SPRINTER 144 WB LR | 1 |
| 10 | 127-151-1010.LR | CEILING SILL B SPRINTER 144 WB LR | 1 |
| 11 | 127-151-1010.LR | CEILING SILL A-1 SPRINTER 144 WB LR | 1 |
| 12 | 127-151-1010.LR | CEILING SILL B-1 SPRINTER 144 WB LR | 1 |
| 13 | 122-xxx-6441 | FLOOR - SPRINTER 144" | 1 |
| 14 | 108-151-1010 | SILL - FLOOR- REAR - SPRINTER | 1 |
| 15 | 106-151-1010 | SILL - FLOOR - SIDE DOOR - SPRINTER | 1 |
| 16 | SCREW | SCREW - PHIL. PAN HD #8X.75 SELF DRILLING | 108 |
| 17 | 127-151-1010.LR | JOINER PLATE - SILLS - SPRINTER LR | 4 |
| 18 | 103-114-2613.LR | GREY TOP DOOR PANEL SLIDING GOOR SPRINTER LR | 1 |
| 19 | 103-114-2613.LR | GREY BOTTOM PANEL SLIDING DOOR SPRINTER LR | 1 |
| 20 | RETAINER | RETAINER- BLACK NYLON | 88 |
| 21 | SCREW CAP | SCREW CAP | 52 |
| 22 | 103-114-2613.LR | GREY REAR DOOR PANEL PASSENGER SIDE SPRINTER LR | 1 |
| 23 | 103-114-2613.LR | GREY REAR DOOR PANEL DRIVER SIDE SPRINTER LR | 1 |

Note:

Model may differ depending if the vehicle purchased came with an OEM partition or not.



Driver Side Wall Liner Installation

ITEM 5
FRONT
DRIVERS SIDE
PANEL


ITEM 1
REAR DRIVERS
SIDE PANEL

FRONT

REAR

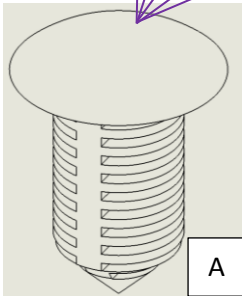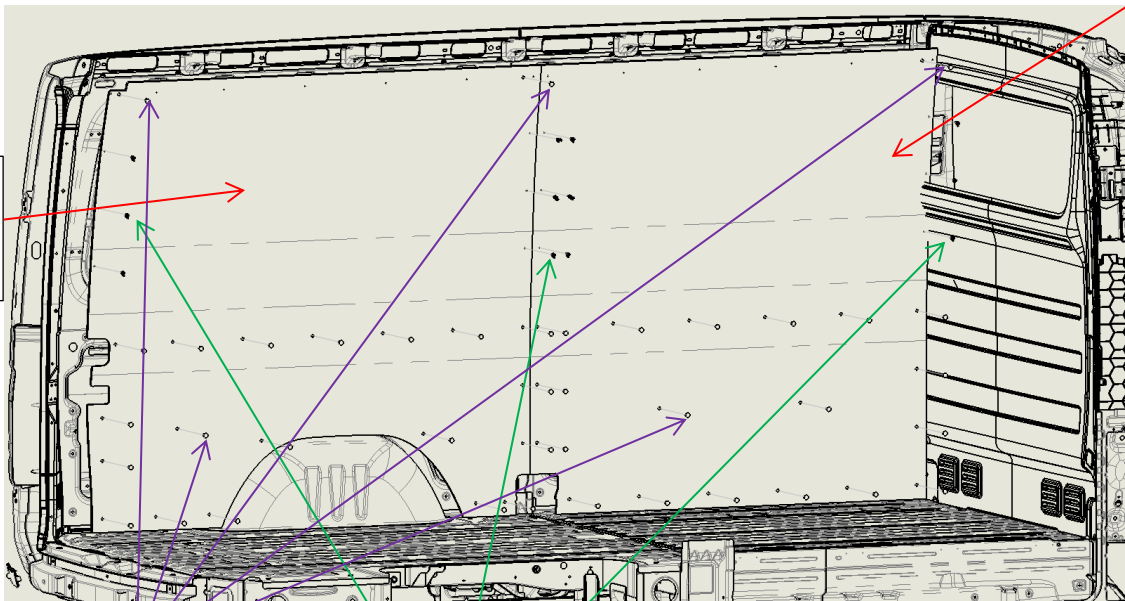

A

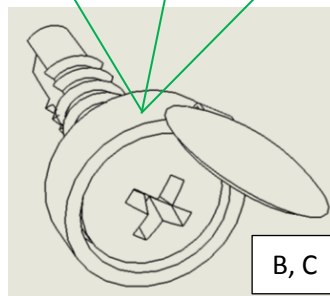

B, C

Note: If a rear view camera option is installed, break and bend downwards at the scored lines at the top section of both panels so it fits under the plastic tubing. It can also be cut off if desired.

1: Install Item 5, Front Driver Side Panel.


- Align notch and edge of panel with the feature on the vehicle driver side front then align opposite side of panel edge with the contour features.
- Install hardware (A) and (B,C), in the holes provided, on the bottom of the panel first, working your way up the panel to the top.

2: Install Item 1, Rear Driver Side Panels.

- Align wheel well edge of the panel with the feature on the vehicle; position the contour of the panel to the vehicle wall.
- Install hardware (A) and (B,C), in the holes provided, on the bottom of the panel first, working your way up the panel to the top.

NOTE: DO NOT INSTALL HARDWARE IN THE HOLES AT THE TOP OF THE PANELS, THESE ARE USED FOR THE SILL INTALLATION



Installation completed

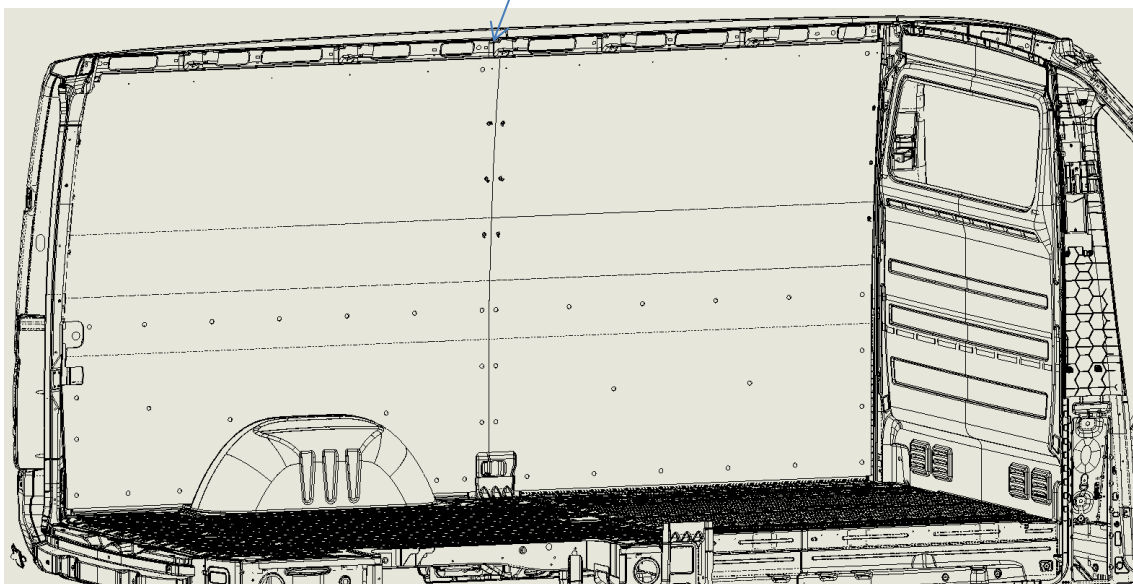

Back Door Wall Liner Installation

ITEM 22
REAR DOOR
PASSENGER SIDE
PANEL

ITEM 23
REAR DOOR
DRIVERS SIDE
PANEL

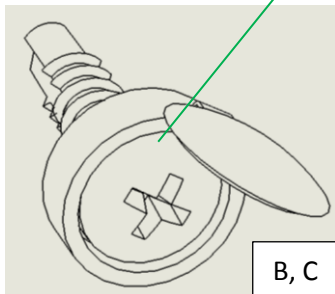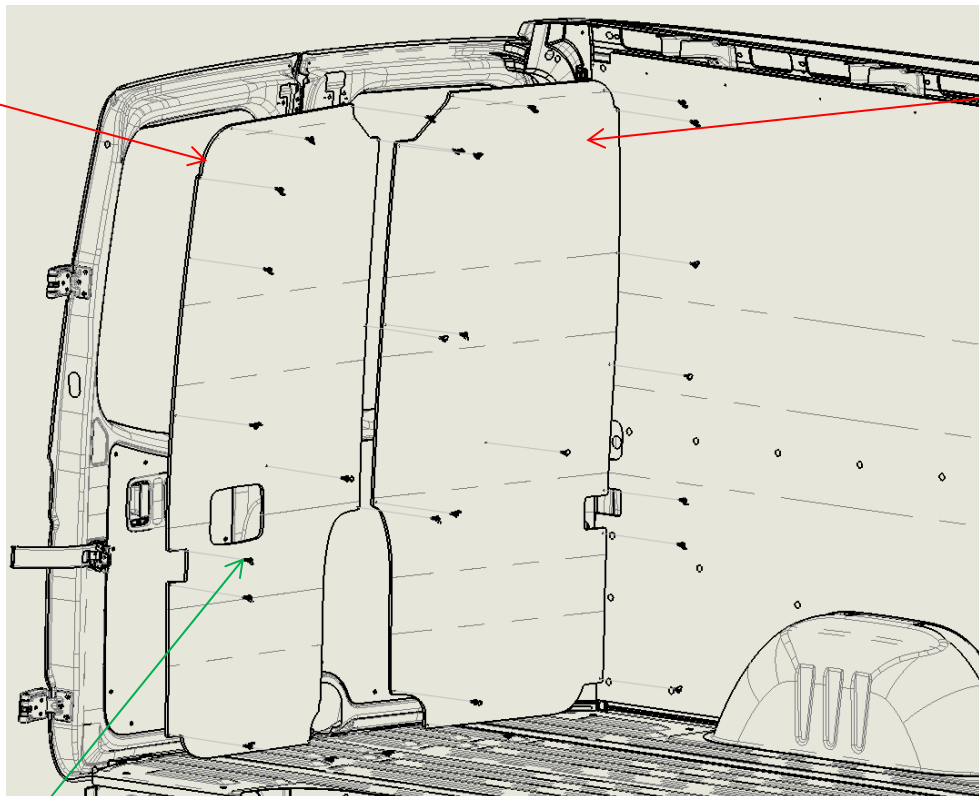

3: Install Item 22 and 23, Rear door panels,

Note: Rear doors must be closed when installing door panels.

- Align the panels with the door contour; **do not mount tight against the door seals.**
- Install hardware (B, C) on the bottom of the panel first, working your way up the panel to the top.

Installation completed



Passenger Side Wall Liner Installation

ITEM 18
UPPER
SLIDING DOOR
PANEL




ITEM 19
BOTTOM
SLIDING DOOR
PANEL

ITEM2 REAR PASSENGER
SIDE PANEL

REAR

FRONT


*DOOR RIBS

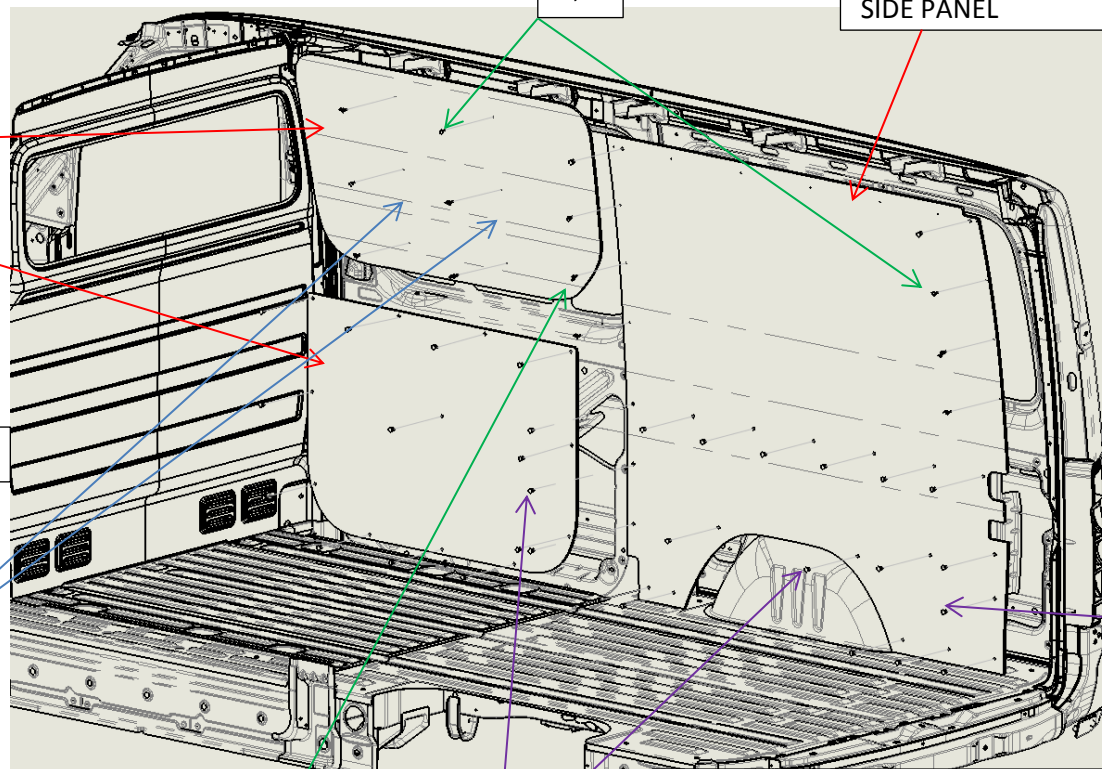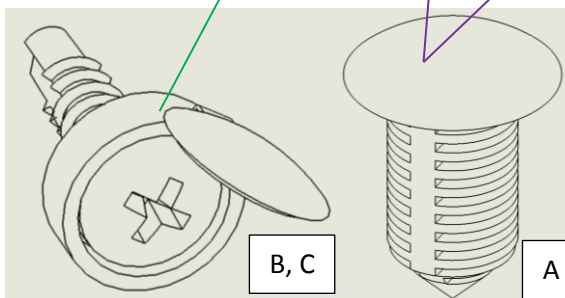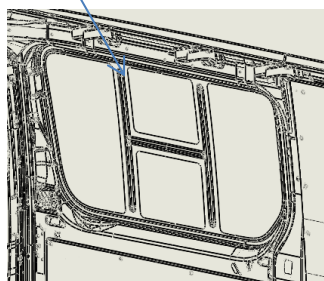

NOTE: DO NOT INSTALL HARDWARE IN THE HOLES AT THE TOP OF THE PANELS; THESE ARE USED FOR THE SILL INTALLATION.

***FOR ITEM 18, TOP SLIDING DOOR PANEL, ALIGN HOLES IN THE PANEL TO THE RIBS OF THE DOOR TO ENSURE PROPER SCREW INSTALLATION.**

Installation completed

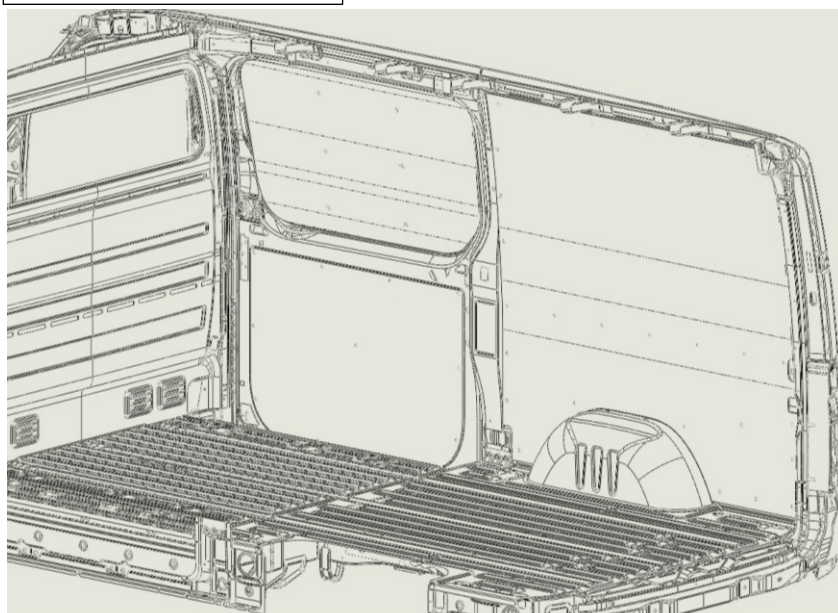

4: Install Item 2, Rear Passenger Side Panel.

- Align wheel well edge of the panel with the feature on the vehicle; position the contour of the panel to the vehicle wall.
- Install hardware (A), in the holes provided, on the bottom of the panel first, working your way up the panel to the top. Install hardware (B, C) in the holes provided in the middle to the top part of the panel


5: Install Item 18, 19, Sliding Door Panel.

First remove OEM bottom panel.

Note: Sliding door must be closed to install panel;

- Insert panel into the sliding door sill cavity, align holes at the bottom panel to the one on the door and insert hardware (A) in all of the holes provided.
- Install hardware (B, C) in the holes provided in the top panel; make sure the panel does not interfere with the door seal.


Ceiling Liner Installation

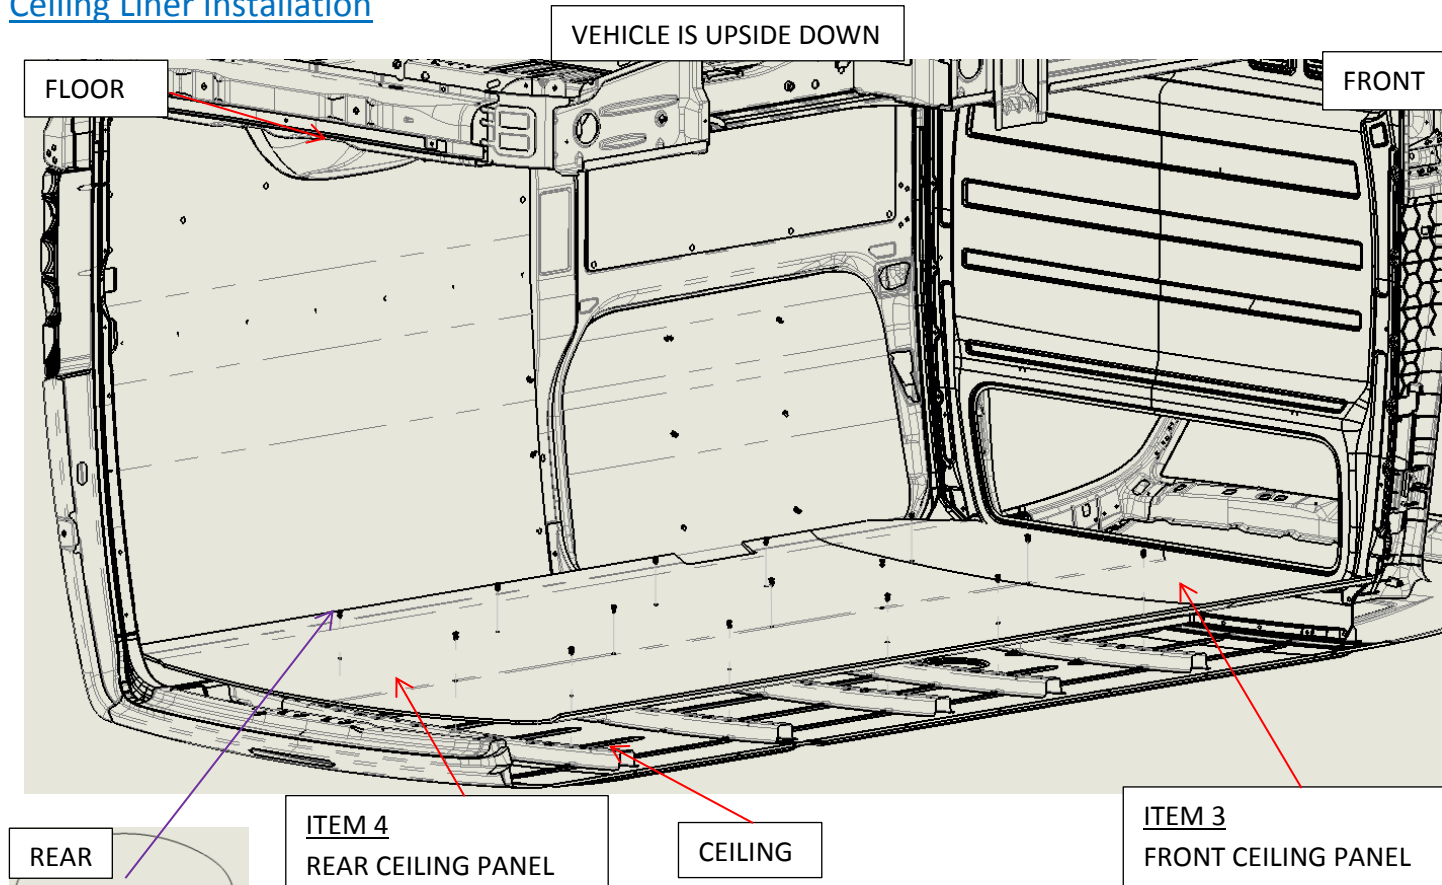

6: Install Item 3 and 4, Ceiling Panels

- Align Ceiling panel with the feature on the vehicle in the front, insert the front of the panel between the headliner and the roof.
- Align the outside holes at the center of the panel with the holes in the ceiling cross bows and install hardware (A) on each side; this will align the panel with the ceiling.
- Push the panel against the ceiling and install hardware (A), in the holes provided starting from the front working your way towards the rear.

Installation completed

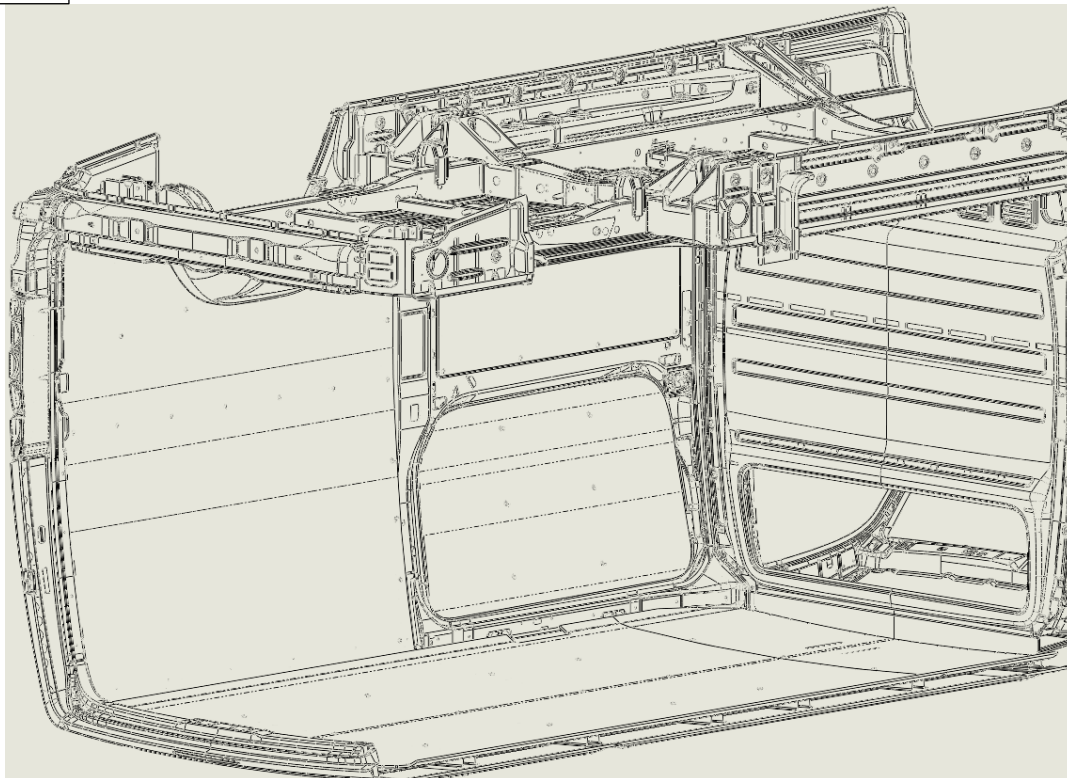

Ceiling Sills Installation

VEHICLE IS UPSIDE DOWN

PASSENGER SIDE

FRONT


ITEM 12
CEILING SILL B-1

ITEM 10
CEILING SILL B

WALL


ITEM 9
CEILING SILL A

ITEM 11
CEILING SILL A-1

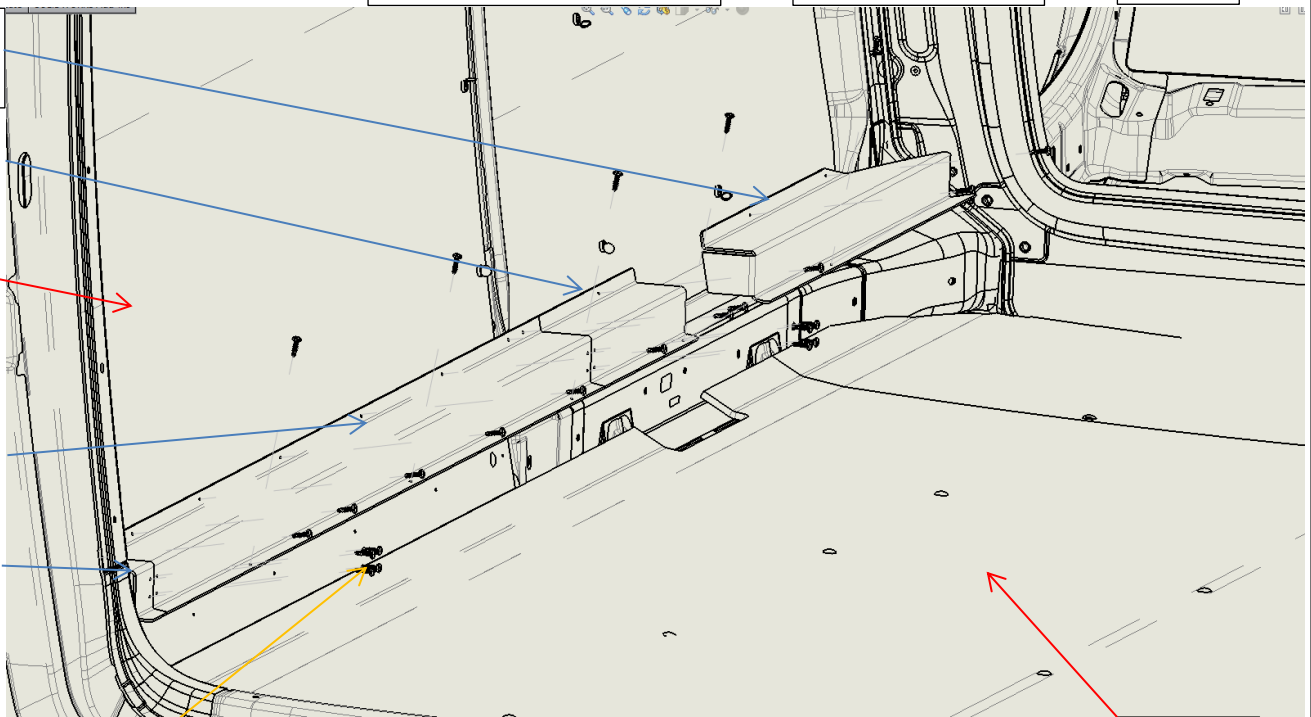

REAR

CEILING

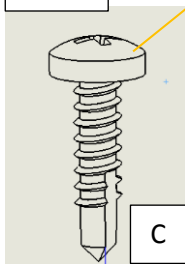

Z: Assemble Item 6, 7, 8 together with the Item 17, Sill Joining Plate (SHOWN BELOW), with hardware (C) in the holes provided.

FOR DRIVER SIDE.

NOTE: ITEM 7 IS NOT USED IF REAR CAMERA OPTION IS INSTALLED


- Assemble Item 9, 10, 11, 12 together with the Item 17, Sill Joining Plate (SHOWN BELOW), with hardware (C) in the holes provided.

FOR PASSENGER SIDE

NOTE: ITEM 11 IS NOT USED IF REAR CAMERA OPTION IS INSTALLED


- Install the Sill assemblies on the Driver side as well as on the Passenger side using hardware (C) in the holes provided on the Sills.

Installation completed

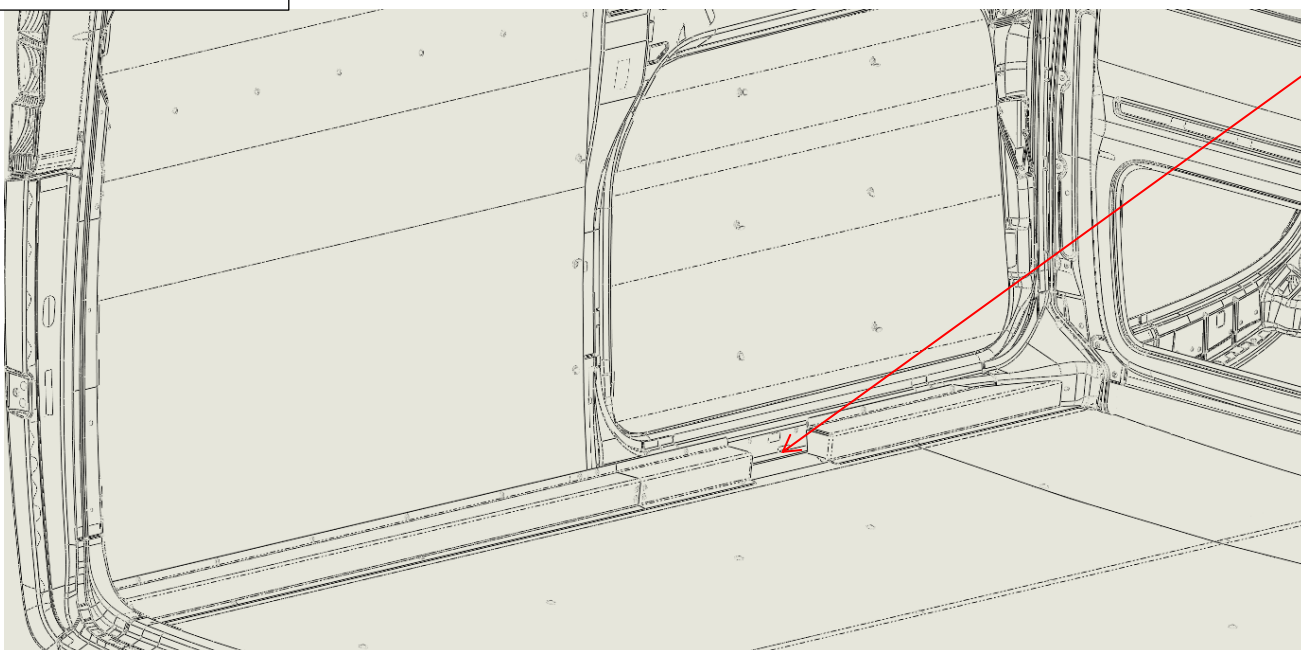


OEM LIGHT

ITEM 17
SILL
JOINING
PLATE

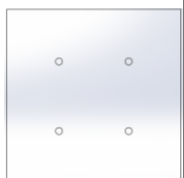

Ceiling Sills Installation Details

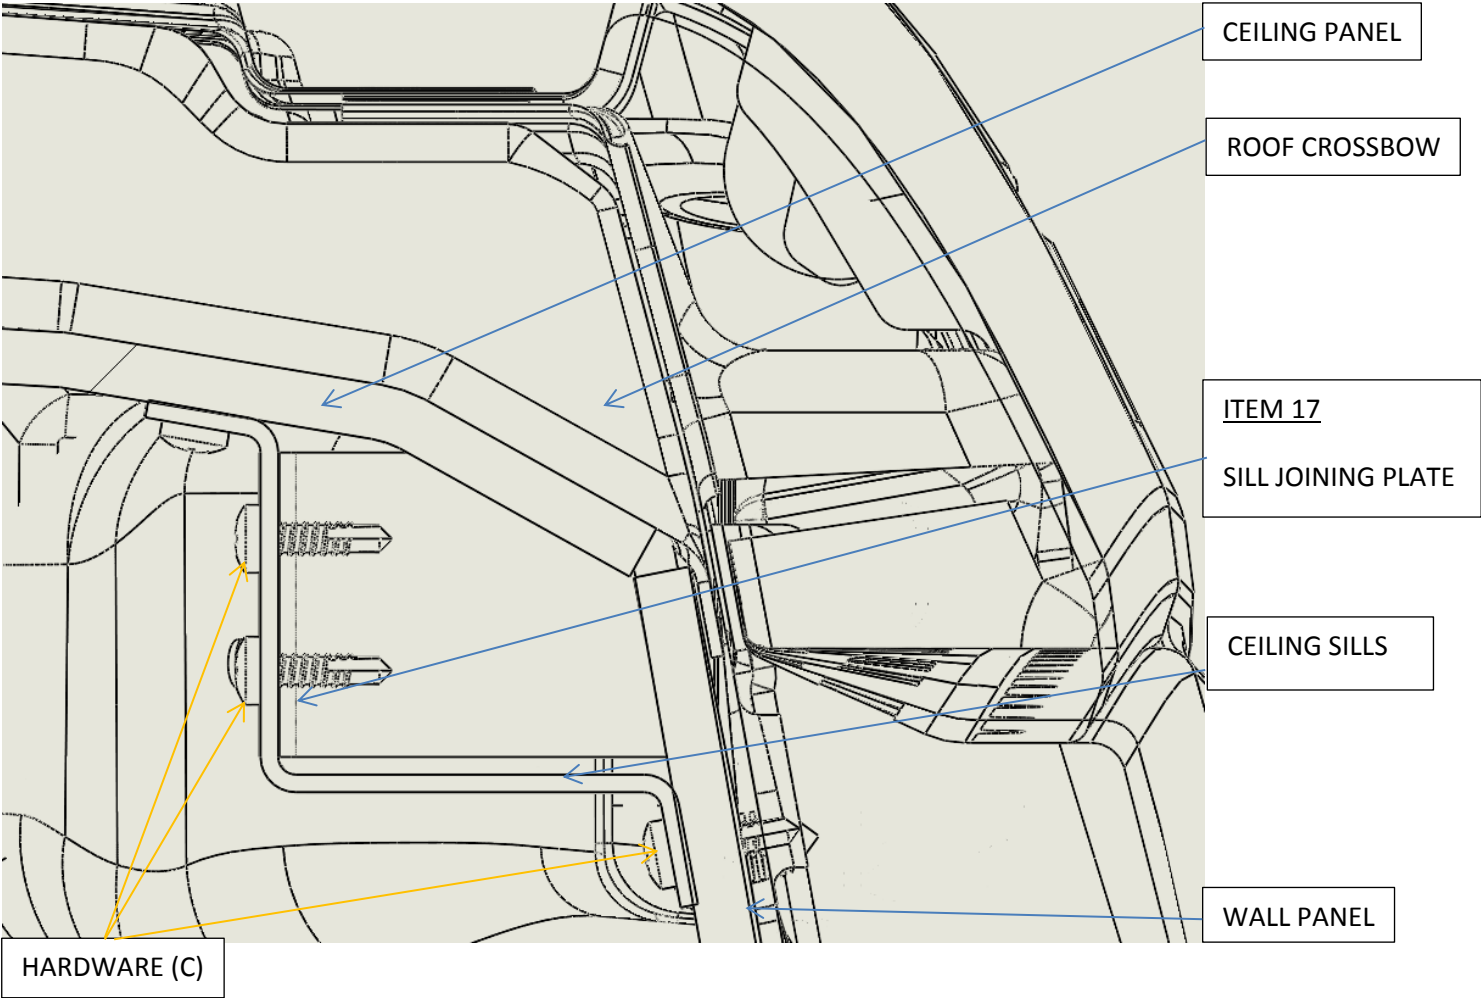

Installation completed


PASSENGER SIDE SILLS

ITEM 12

ITEM 10

ITEM 9

ITEM 11

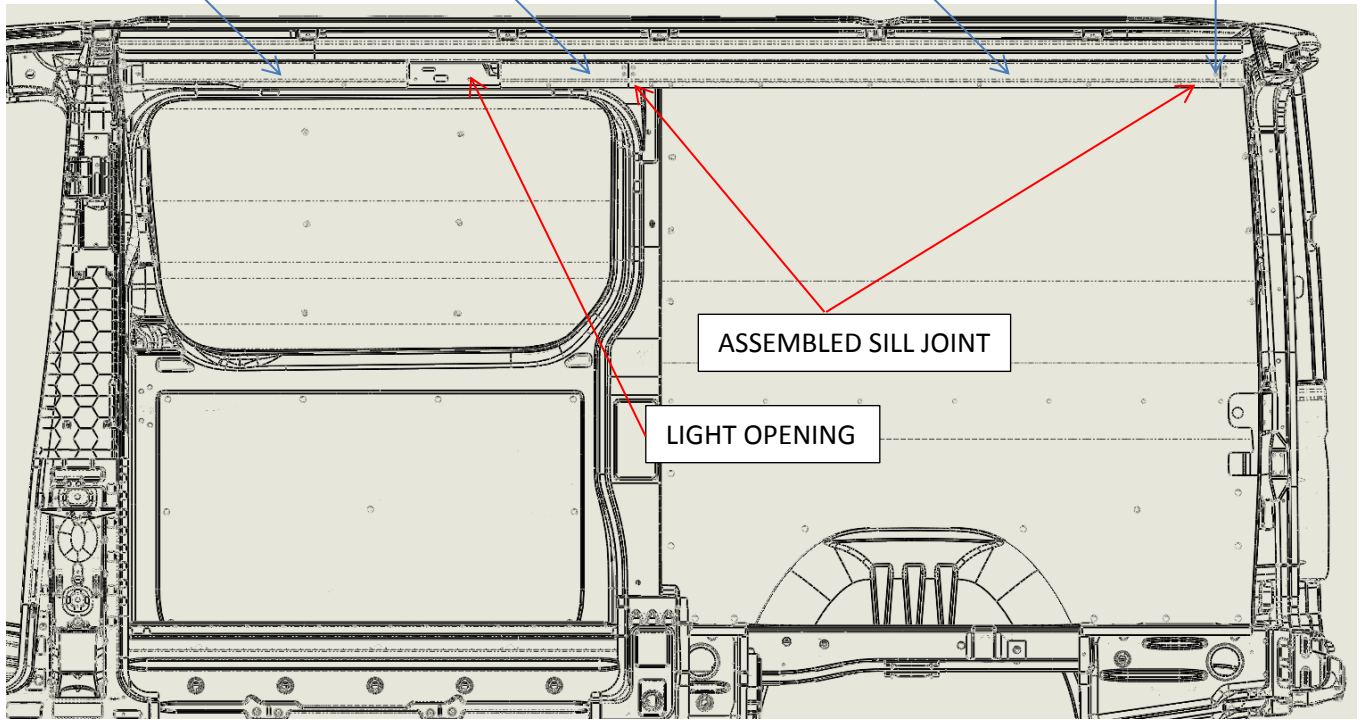


DRIVER SIDE SILLS


ITEM 7

ITEM 6

ITEM 8

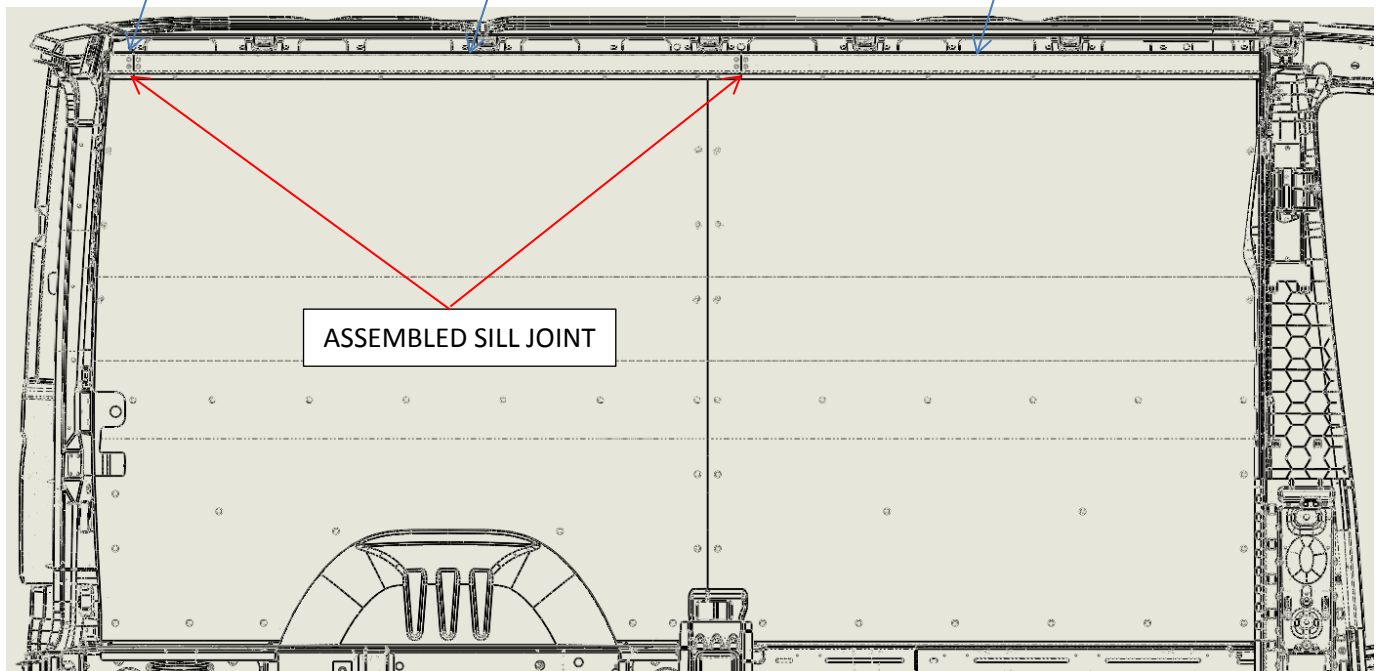

Floor and Floor Sill Installation

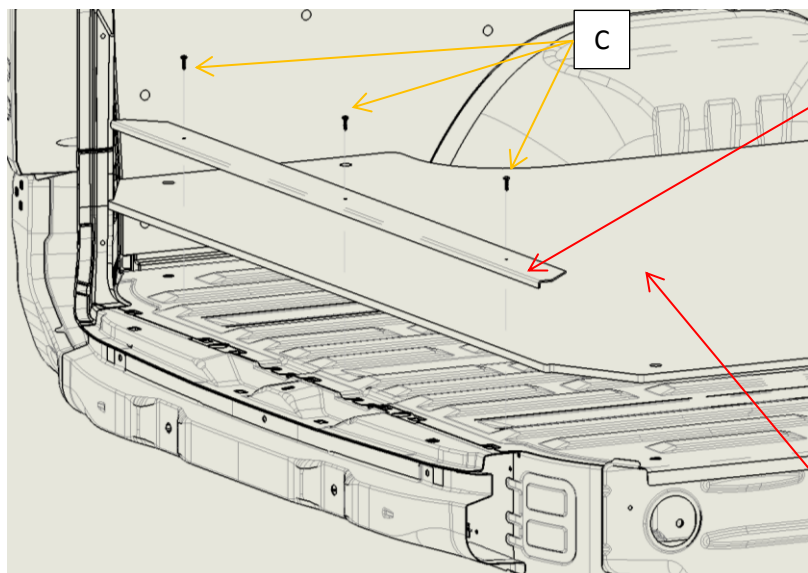


ITEM 14
FLOOR SILL – REAR DOOR


8: Install Items 13, FLOOR and Items 14, 15 FLOOR SILLS.

- Install floor inside the vehicle.
- Align the floor sills in their proper location with the floor edges and install hardware (C).

ITEM 13
FLOOR

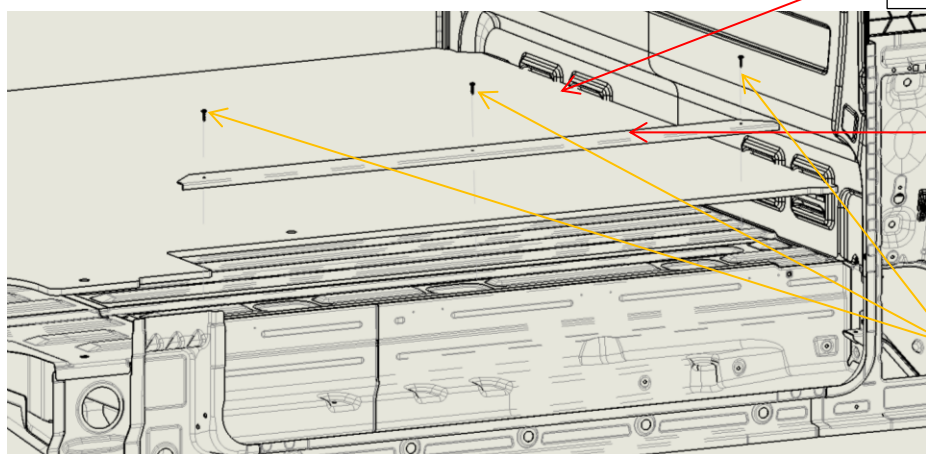

ITEM 15
FLOOR SILL – SLIDING DOOR

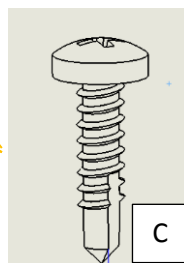

Installation completed

