


## **SPRINTER 170" EXT. WB HIGH ROOF WALL LINERS**

### **INSTALLATION INSTRUCTIONS**




#### **NOTES:**

- 1. Before commencing, remove all wall liners and "D" Rings already installed in the vehicle.
- 2. Consult layout PDF and compare vehicle layout allocated Legend.
- 3. Prepare hardware shown below and have them ready for installation.
- 4. Wall liners will be installed in the order shown in the instructions.
- 5. A drill with a Phillips driver is required to install hardware ( C) #8 Screws, shown below.
- 6. Reinstall all "D" Rings once the wall liner kit installation is completed.

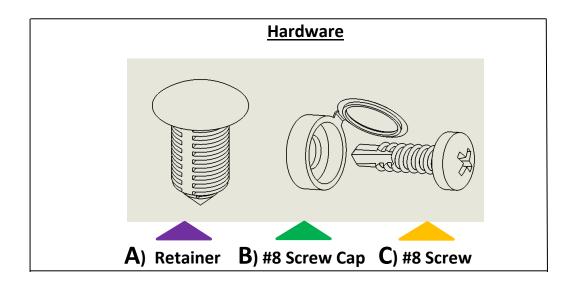


# **SPRINTER 170" EXT. WB HIGH ROOF WALL LINERS**

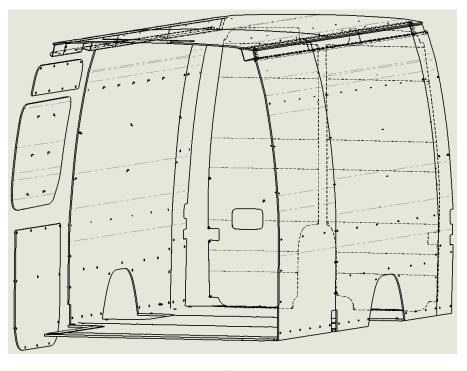

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	103-114-2613.HR	GREY REAR DOOR PANEL DRIVER SIDE SPRINTER HR	1
2	SCREW CAP	SCREW CAP	78
3	SCREW	SCREW - PHIL. PAN HD #8X.75 SELF DRILLING	150
4	103-114-2613.HR	GREY REAR DOOR PANEL PASSENGER SIDE SPRINTER HR	1
5	103-114-2613.HR	GREY UPPER PANEL SLIDING DOOR SPRINTER HR	1
6	103-114-2613.HR	GREY MIDDLE DOOR PANEL SLIDING GOOR SPRINTER HR	1
7	103-114-2613.HR	GREY BOTTOM PANEL SLIDING DOOR SPRINTER HR	1
8	RETAINER	RETAINER- BLACK NYLON	103
9	145-114-2613	GREY CEILING FRONT PANEL SPRINTER 170" EXT WB HR	1
10	145-114-2613	GREY CEILING REAR PANEL SPRINTER 170" EXT WB HR	1
11	144-114-2613	GREY FRONT DRIVER SIDE PANEL SPRINTER 170 EXT WB HR	1
12	144-114-2613	GREY FRONT A DRIVER SIDE PANEL SPRINTER 170 EXT W B HR	1
13	144-114-2613	GREY REAR DRIVER SIDE PANEL SPRINTER 170 EXT WB HR	1
14	147-151-1010	SILL-F SPRINTER 170" EXT WB HR	1
15	147-151-1010	SILL-D-1 SPRINTER 170" EXT W B HR	1
16	147-151-1010	SILL-F-1 SPRINTER 170" EXT WB HR	1
17	147-151-1010	SILL-D SPRINTER 170" EXT WB HR	1
18	147-151-1010	SILL-E SPRINTER 170" EXT WB HR	1
19	627-151-1010	JOINER PLATE- CEILING SILL	9
20	144-114-2613	GREY REAR PASSENGER SIDE PANEL SPRINTER 170 EXT WB HR	1
21	144-114-2613	GREY FRONT PASSENGER SIDE PANEL SPRINTER 170 EXT W B HR	1
22	147-151-1010	SILL-A SPRINTER 170" EXT WB HR	1
23	147-151-1010	SILL-A-1 SPRINTER 170" EXT W B HR	1
24	147-151-1010	SILL-B SPRINTER 170" EXT WB HR	1
25	147-151-1010	SILL-C SPRINTER 170" EXT WB HR	1
26	147-151-1010	SILL-C-1 SPRINTER 170" EXT WB HR	1
27	108-151-1010	SILL - FLOOR- REAR - SPRINTER	1
28	145-114-2613	CEILING BRACKET SPRINTER 170" EXT WB HR	1
29	142-xx-6641	FLOOR #1 - SPRINTER 170" EXT WB	1
30	142-xx-6641	FLOOR #3 - SPRINTER 170" EXT WB	1
31	142-xxx-6641	FLOOR #4- SPRINTER 170" EXT WB	1
32	142-xx-6641	FLOOR #2 - SPRINTER 170" EXT WB	1
33	106-151-1010	SILL - FLOOR - SIDE DOOR - SPRINTER	1

#### Note:


Model may differ depending if the vehicle purchased came with an OEM partition or not.

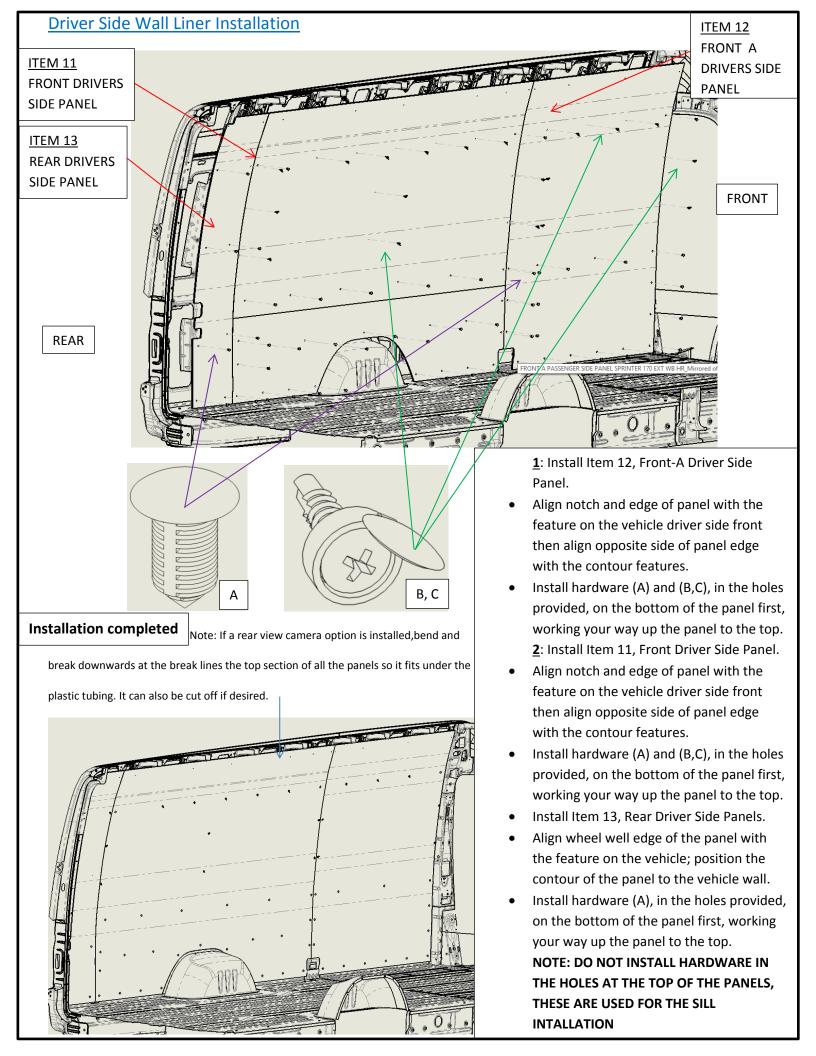

#### **Back Door Wall Liner Installation**

ITEM 4
REAR DOOR
PASSENGER SIDE
PANEL



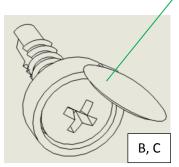



3: Install Item 1 and 4, Rear door panels,


**Note**: Rear doors must be closed when installing door panels.

- Align the panels with the door contour; do not mount tight against the door seals.
- Install hardware (B, C) on the bottom of the panel first, working your way up the panel to the top.

Installation completed

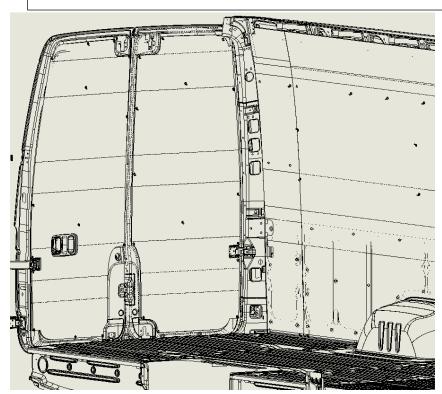


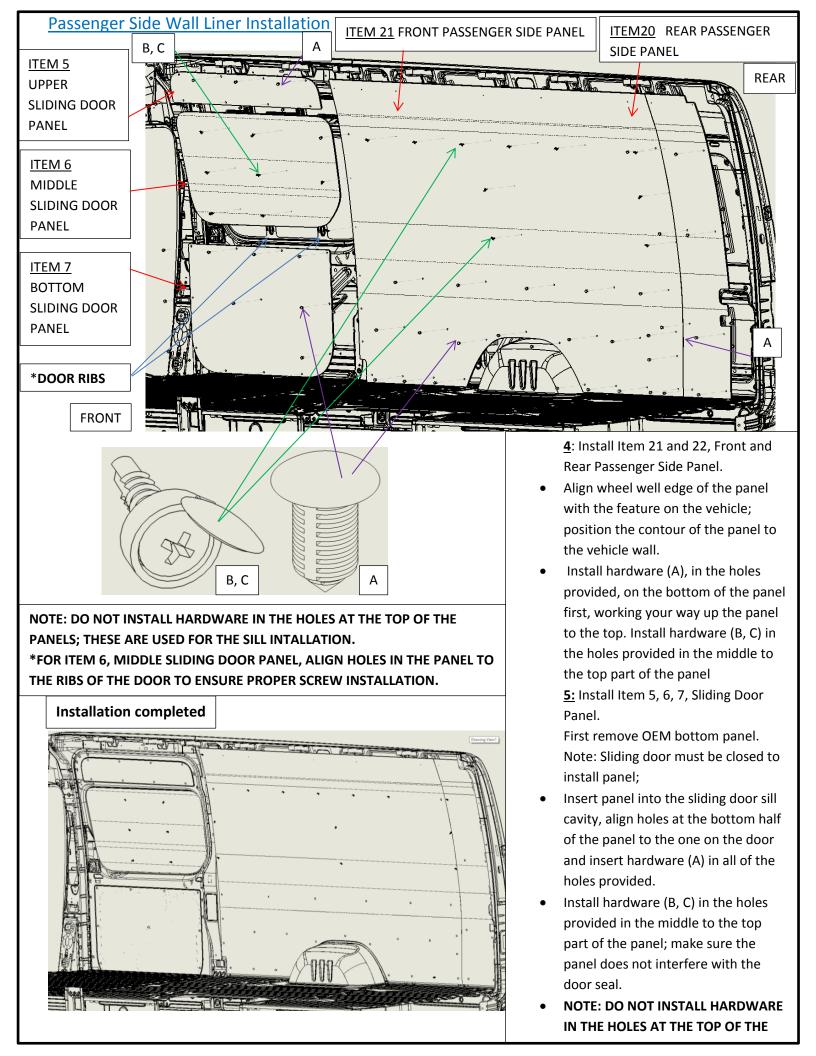


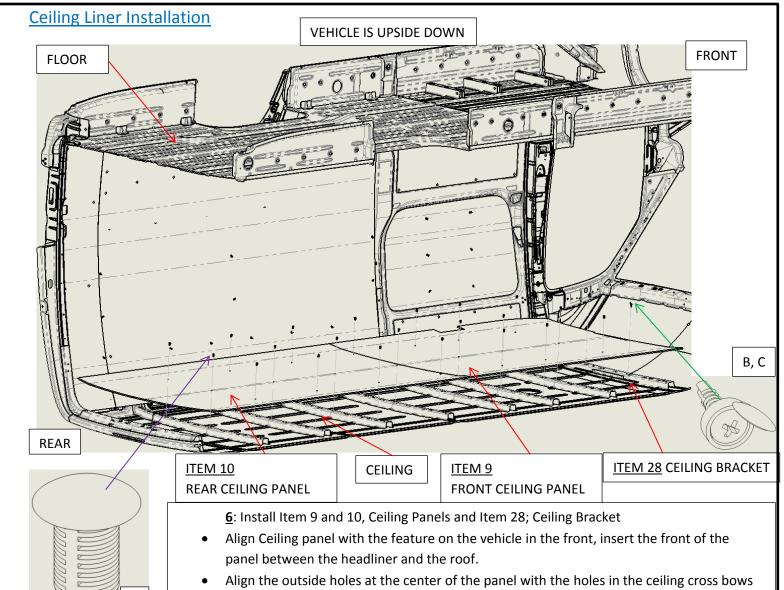


**Installation completed** 

- and install hardware (A) on each side; this will align the panel with the ceiling.
- Push the panel against the ceiling and install hardware (A), in the holes provided starting from the front working your way towards the rear.
- Install Item 28 Ceiling bracket to the OEM partition and Ceiling panel with hardware (B,C).

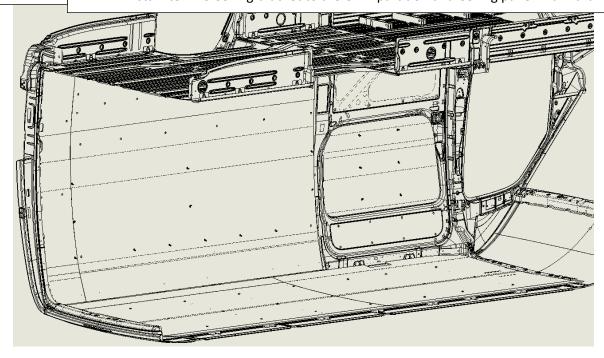


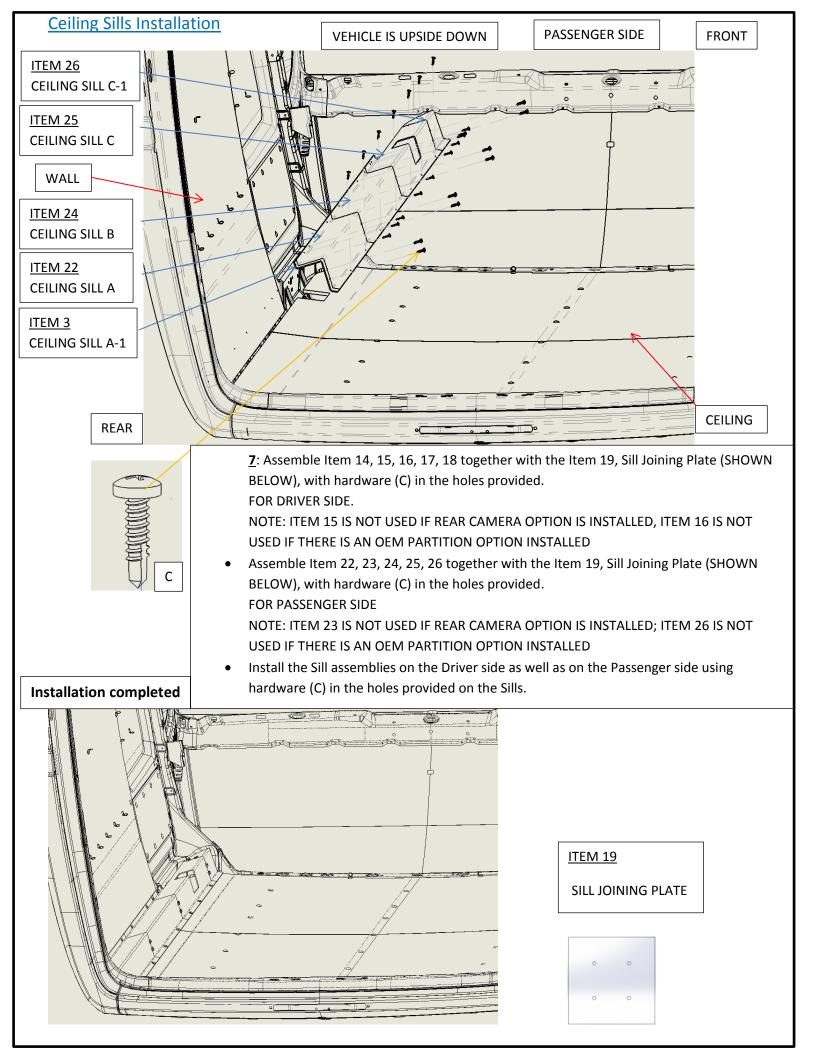


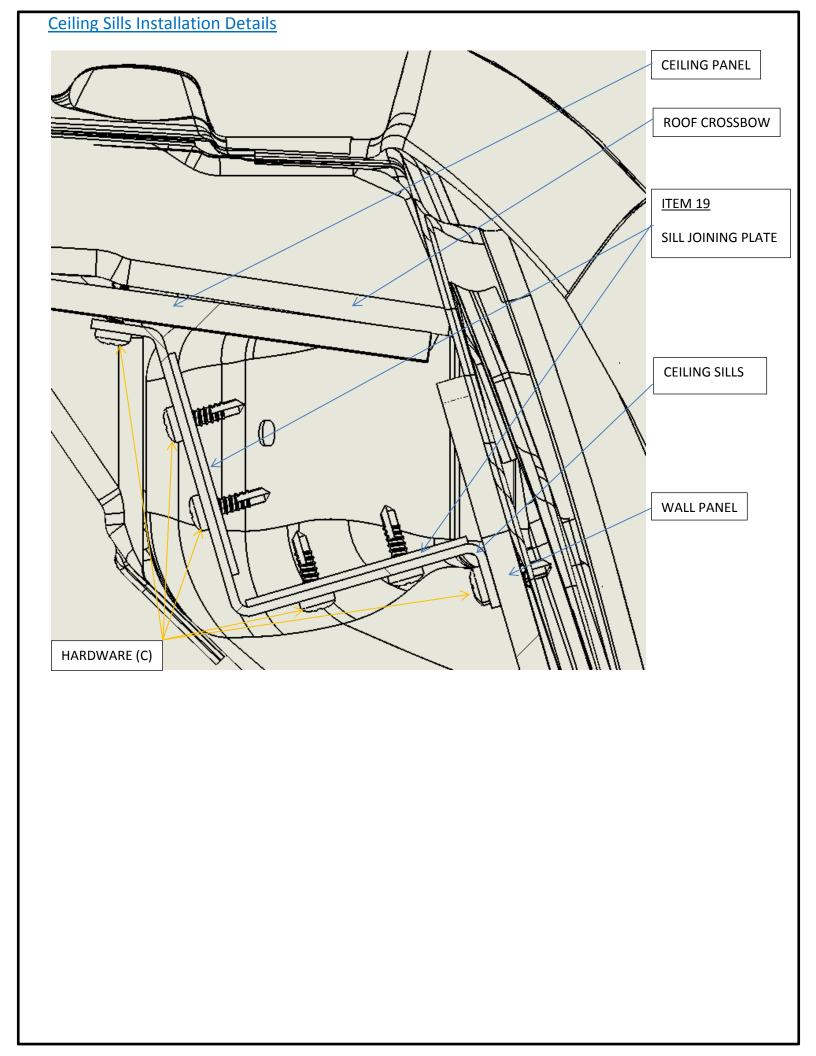

#### Installation completed

#### PASSENGER SIDE

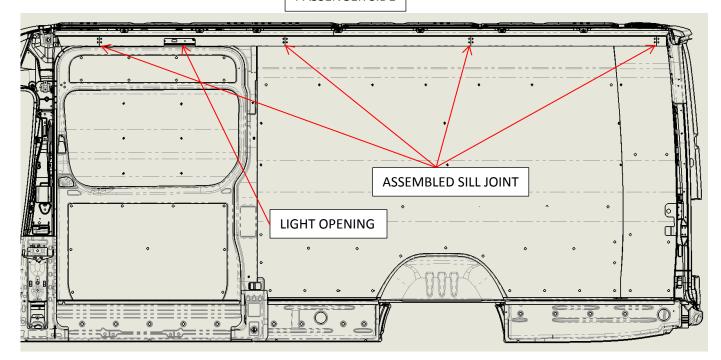

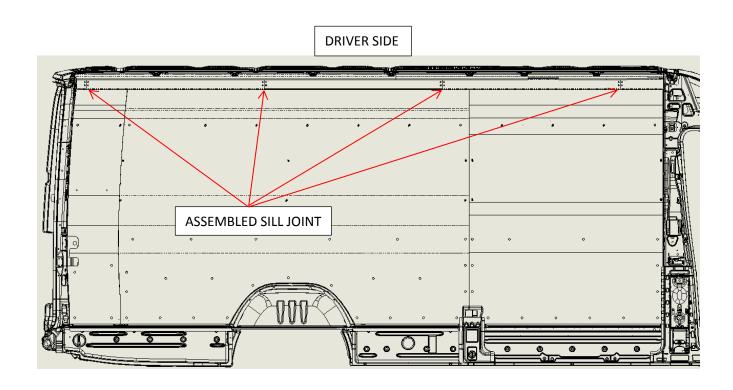

# Floor and Floor Sill Installation С <u>ITEM 27</u> FLOOR SILL – REAR DOOR **8**: Install Items 29, 30, 31, 32, FLOOR and Items 27, 33 FLOOR SILLS. Install floor inside the vehicle. Align the floor sills in their proper location with the floor edges and install hardware (C). <u>ITEM</u> 29, 30, 31, 32 FLOOR <u>ITEM 33</u> FLOOR SILL – SLIDING DOOR

#### Installation completed

