


INSTALLATION GUIDE



3010-FTH CONTOURED PARTITION

Transit Partition (Aluminum)

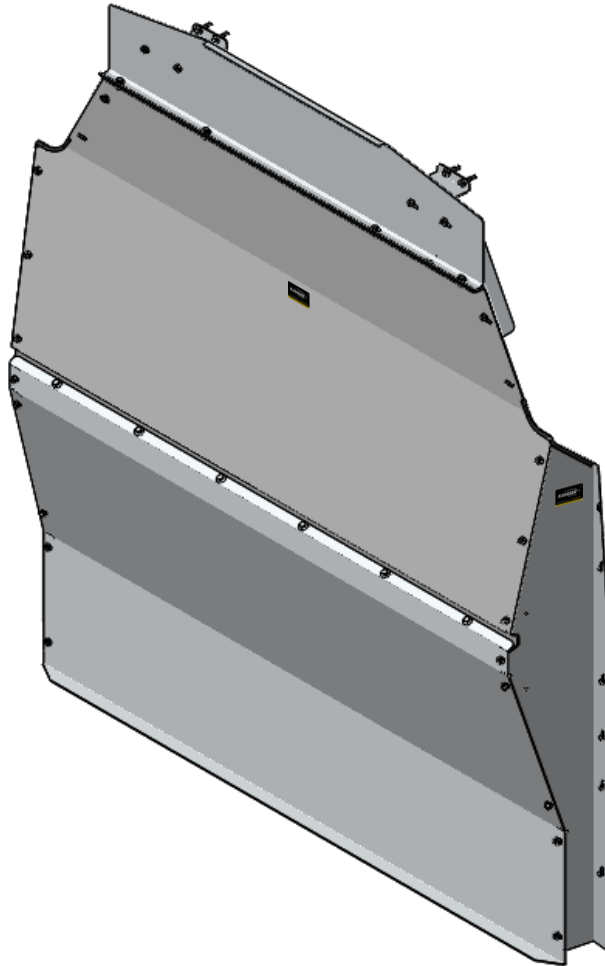

QUICK START GUIDE


Phase 1 - Assembly

- ❑ 1.1 Setup..... 3
 - ❑ 1.1.1 Unpack components; compare with the bill of materials..... 3
 - ❑ 1.1.2 Verify all parts are present..... 3
 - ❑ 1.1.3 Identify the assembly and installation fastener bags..... 4
- ❑ 1.2 Partition assembly..... 5
 - ❑ 1.2.1 Remove all the PVC from all the parts, then attach the upper panel to the lower panel..... 5
 - ❑ 1.2.2 Attach both wings to the upper and lower panels..... 5
 - ❑ 1.2.3 Attach the passenger and driver side ceiling brackets on the upper panel..... 6
 - ❑ 1.2.4 Attach the edge trims on these locations..... 6

Phase 2 - Installation

- ❑ 2.1 Tips on how to attach a plusnut..... 7
 - ❑ 2.1.1 Attach plusnut using plusnut gun..... 7
 - ❑ 2.1.2 Attach plusnut using 6490 plusnut tool..... 7
- ❑ 2.2 Vehicle preparation..... 8
 - ❑ 2.2.1 Ceiling preparation..... 8
 - ❑ 2.2.2 Driver and passenger sides preparation..... 9
- ❑ 2.3 Contoured partition installation..... 10
 - ❑ 2.3.1 Attach both wings to the van..... 10
 - ❑ 2.3.2 Attach the driver and passenger side ceiling brackets to the van..... 11
 - ❑ 2.3.3 Attach the top panel to the upper panel..... 11
 - ❑ 2.3.4 Attach the top panel to the passenger and driver side ceiling brackets..... 12
 - ❑ 2.3.5 Apply the warning label on the passenger side panel..... 13

REQUIRED ITEMS

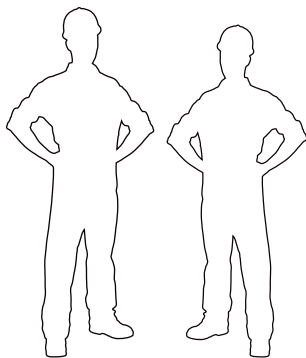


2
PERSONS

- ❑ Cordless Impact
- ❑ Cordless Drill
- ❑ Cutter
- ❑ Mallet
- ❑ Marker
- ❑ Plusnut Tool
- ❑ Tape Measure
- ❑ 3/8" Drill Bit
- ❑ 7/16" Socket
- ❑ 1/2" Socket
- ❑ 9/16" Wrench
- ❑ 10mm Socket

PHASE 1 – ASSEMBLY

1.1 SETUP

1.1.1 Unpack components; compare with the bill of materials.

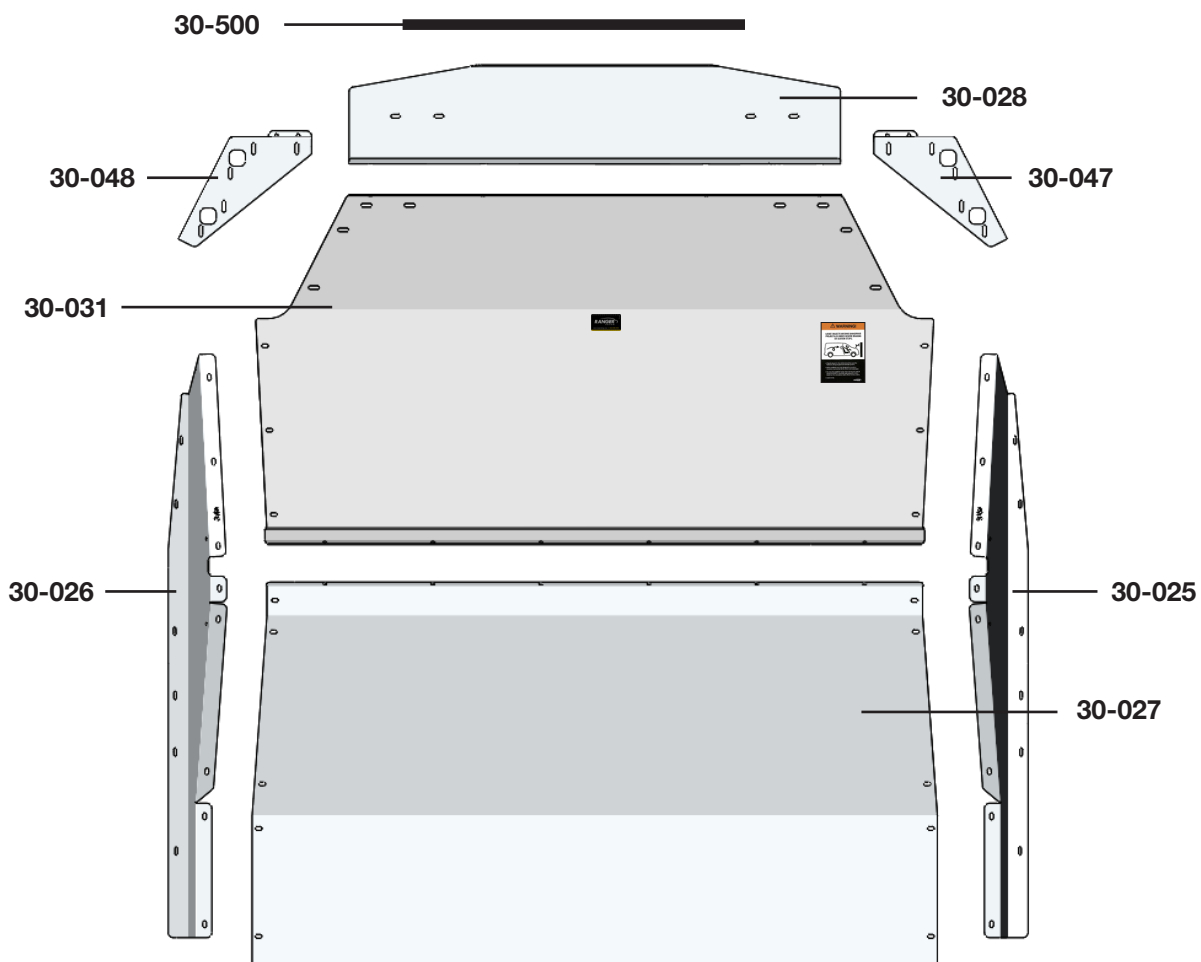


1.1.2 Verify all parts are present.

Item No.	Description	Qty.
30-025	Passenger Side Wing	1
30-026	Driver Side Wing	1
30-027	Lower Panel	1
30-028	Top Panel	1
30-031	Upper Panel	1
30-047	Passenger Side Ceiling Bracket	1
30-048	Driver Side Ceiling Bracket	1
30-500	Edge Trim (QTY in Inches)	21
79-932	Bilingual Warning Label	1
94-3025	Assembly Fastener Bag	1
96-3011	Installation Fastener Bag	1

1.1.3 Identify the **Assembly** and **Installation** fastener bags.

Assembly Fastener Bag



Hardware Assembly

10x		# 90-204	Hex Bolt 5/16"-18 x 3/4" GR-5 ZINC
24x		# 90-484	Carriage Bolt 5/16"-18 x 5/8" ZINC
34x		# 94-116	Serrated Nut 5/16"-18 ZINC
10x		# 98-116	Flat Washer 5/16", 7/8" OD ZINC

10x



#90-204 Hex Bolt 5/16" x 3/4"



#98-116 Flat Washer



#94-116 Serrated Nut

24x




#90-484 Carriage Bolt 5/16" x 5/8"



#94-116 Serrated Nut

Installation Fastener Bag



Hardware Assembly

9x		# 90-118	Hex Bolt 1/4"-20 x 1-1/4" GR-5 ZINC
5x		# 90-971	Hex Bolt M6-1.0 x 20mm 1022 BO
9x		# 94-130	Plusnut .250
9x		# 98-112	Flat Washer 1/4", 3/4" OD ZINC
9x		# 98-118	Lock Washer Regular 1/4" ZINC

9x



#90-118 Hex Bolt 1/4" x 1-1/4"



#98-118 Lock Washer



#98-112 Flat Washer



#94-130 Plusnut .250

5x





#90-971 Hex Bolt M6-1.0 x 20mm

PHASE 1 – ASSEMBLY

1.2 PARTITION ASSEMBLY

1.2.1 Remove all the PVC from all the parts, then attach the upper panel to the lower panel.

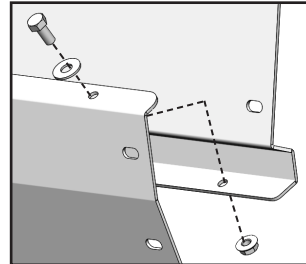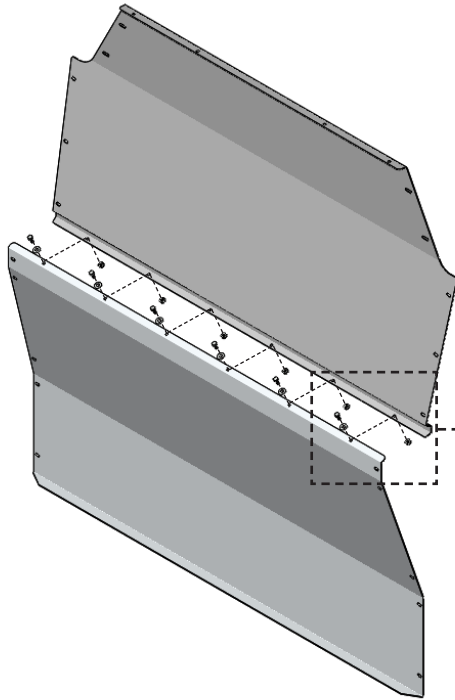

TOOLS



- ☐ Cordless Impact
- ☐ 1/2" Socket

HARDWARE USED

6x

-  #90-204 Hex Bolt 5/16" x 3/4"
-  #98-116 Flat Washer
-  #94-116 Serrated Nut

1.2.2 Attach both wings to the upper and lower panels.

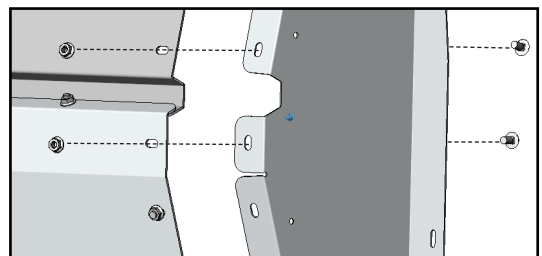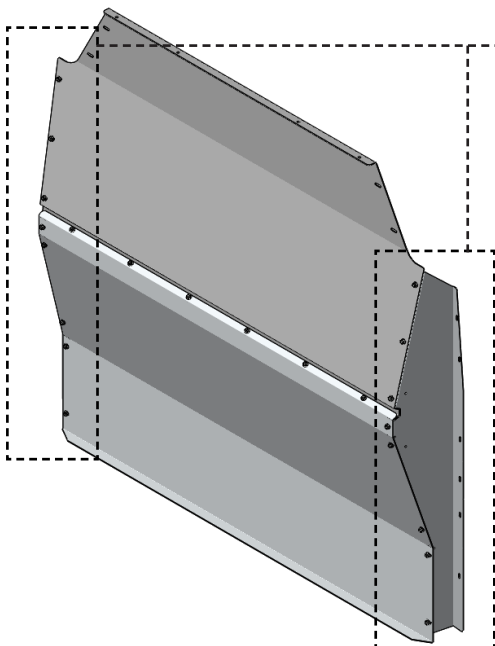

TOOLS



- ☐ Cordless Impact
- ☐ 1/2" Socket

HARDWARE USED

16x

-  #90-484 Carriage Bolt 5/16" x 5/8"
-  #94-116 Serrated Nut

1.2.3 Attach the passenger and driver side ceiling brackets on the upper panel.

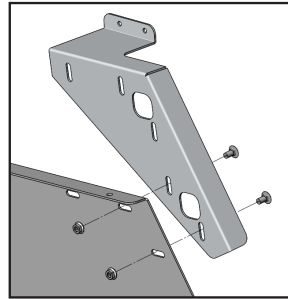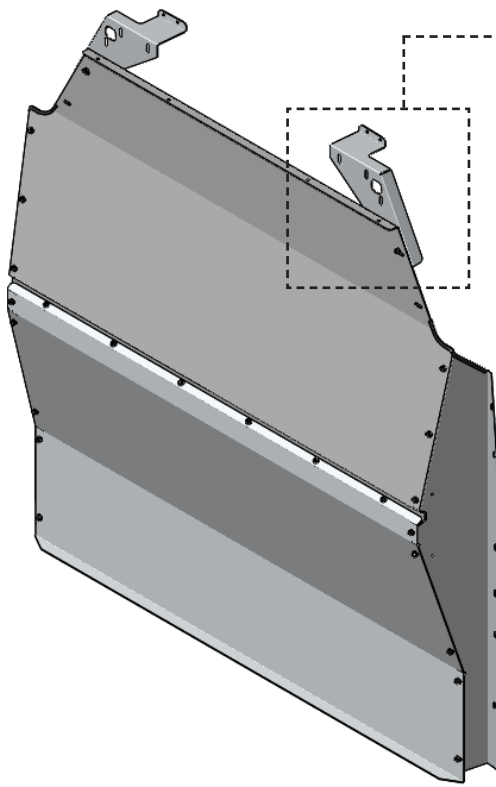

TOOLS

- Cordless Impact
- 1/2" Socket

HARDWARE USED

4x





#90-484 Carriage Bolt 5/16" x 5/8"



#94-116 Serrated Nut

1.2.4 Attach the edge trims on these locations.

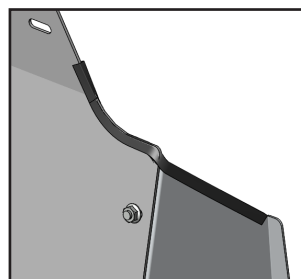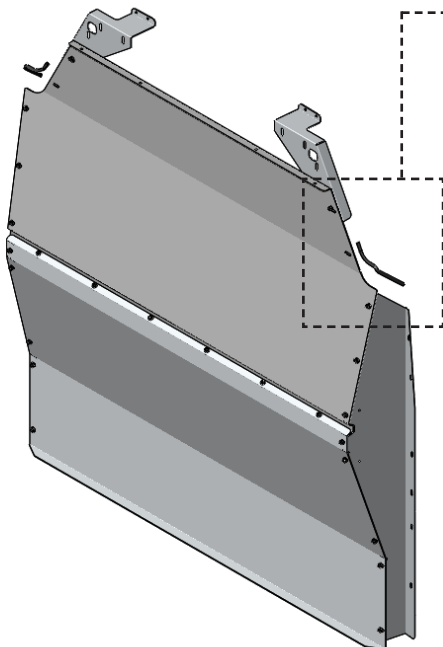

TOOLS


- Mallet
- Cutter

PHASE 2 – INSTALLATION


2.1 TIPS ON HOW TO ATTACH A PLUSNUT

2.1.1 Attach the plusnut using the plusnut gun.

TIPS: Put the plusnut on the plusnut gun, then attach the plusnut in the hole by turning the gun forward until the plusnut locks, then remove the gun by turning in reverse.

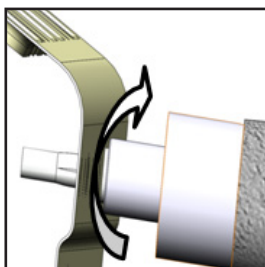

FORWARD

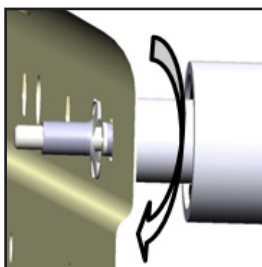


REVERSE

2.1.2 Attach the plusnut using the 6490 plusnut tool.

NOTE: The hardware used for the 6490 plusnut tool is not included in the fastener bag. The 6490 plusnut tool can be ordered separately upon demand at no charge.

6490



HARDWARE USED

-  Flat washer 1/4"
-  Flat washer 1/4" BS x 3/4" OD

TOOLS

- ☐ Cordless Impact
- ☐ 7/16" Socket
- ☐ 9/16" Wrench

TIPS STEP 1:

Assemble the 6490 plusnut tool with the hardware needed, plusnut and the 9/16" wrench as shown.



TIPS STEP 2:

Attach the plusnut in the hole by turning the bolt forward using an impact with a 7/16" socket until the plusnut locks, then remove the bolt by turning the impact in reverse.



FORWARD





REVERSE

PHASE 2 – INSTALLATION

2.2 VEHICLE PREPARATION

2.2.1 Ceiling preparation.

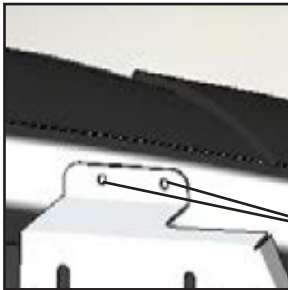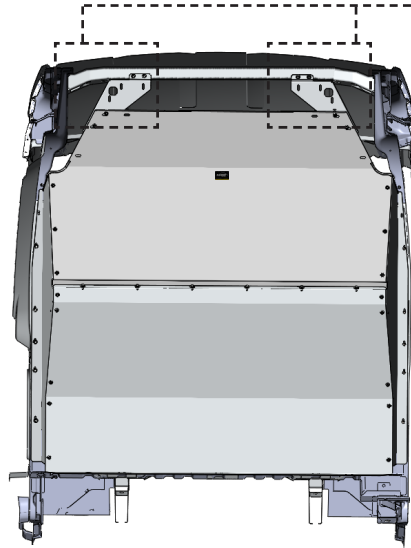

Lift the assembled partition inside the van and put it in place, then put 4 marks on the van through the holes of the driver and passenger side ceiling brackets.

TOOLS

- ☐ Marker



Put the assembled partition on the side, then drill the 4 marks using the 3/8" drill bit or step drill.

TOOLS

- ☐ Cordless Drill
- ☐ 3/8" Drill Bit or Step Drill



Attach plusnuts in the 4 holes.

TOOLS

- ☐ Plusnut Tool


HARDWARE USED

4x



94-130
Plusnut .250

2.2.2 Driver and passenger sides preparation.

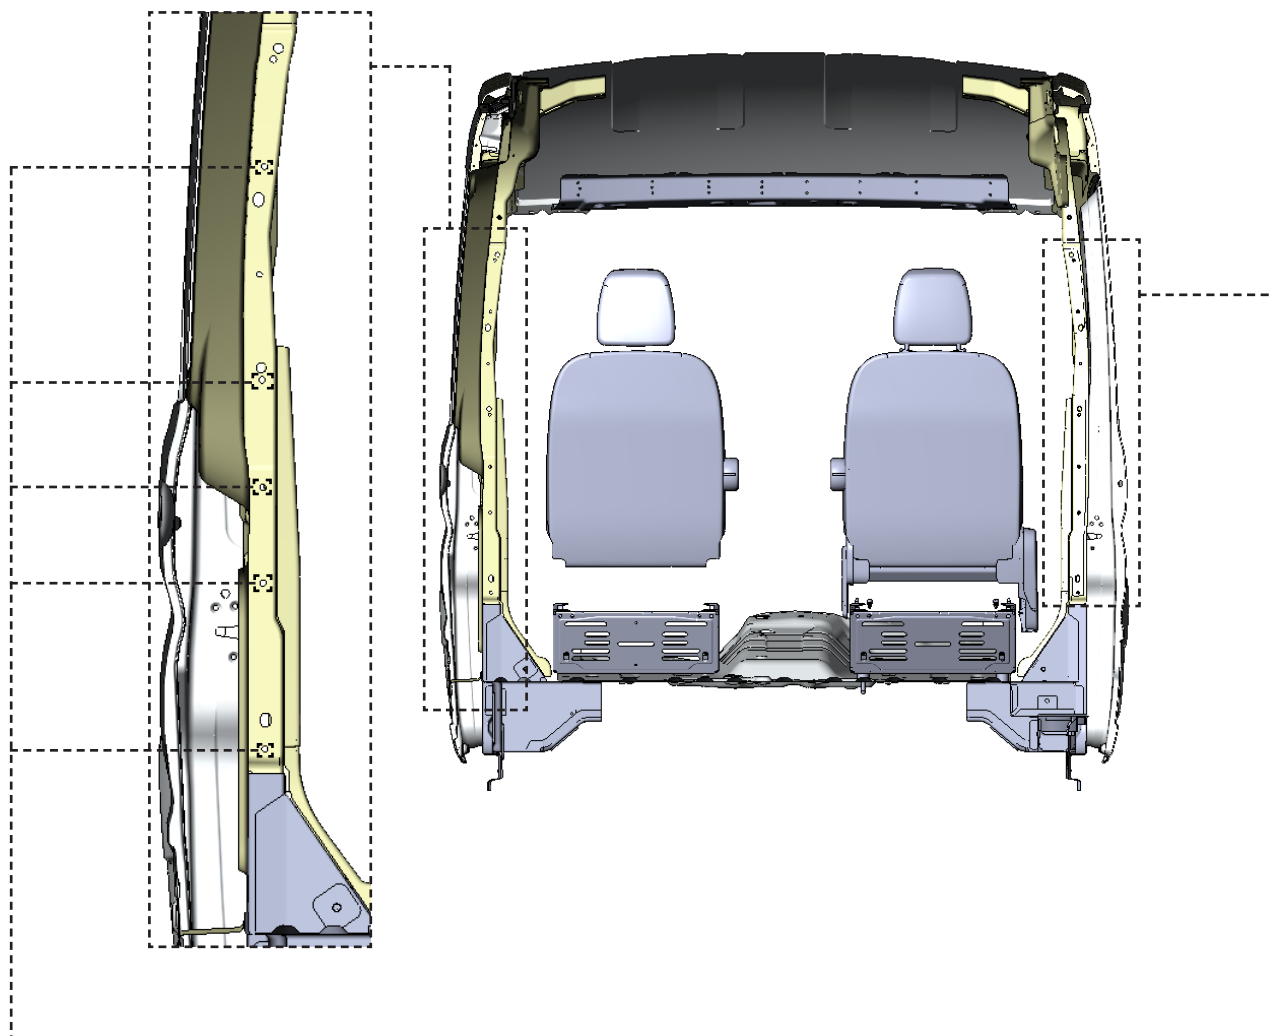

Attach plusnuts on the five factory holes.



TOOLS

- Plusnut Tool

HARDWARE USED

5x



94-130
Plusnut .250

Remove the factory handle in the van.





TOOLS

- Cordless Impact
- 10mm Socket

PHASE 2 – INSTALLATION

2.3 CONTOURED PARTITION INSTALLATION

2.3.1 Attach both wings to the van.

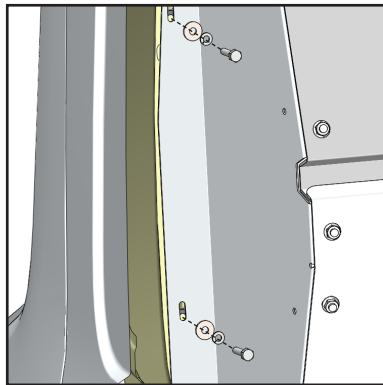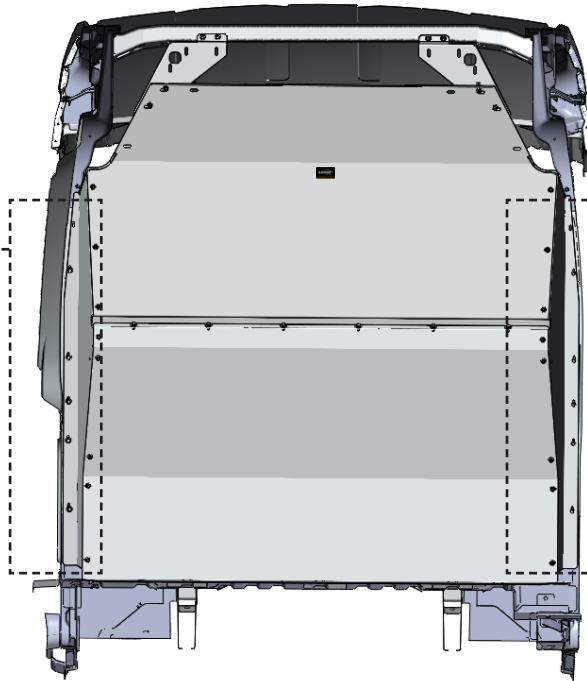


TOOLS

- Cordless Impact
- 7/16" Socket

HARDWARE USED

5x

-  #90-118 Hex Bolt 1/4" x 1-1/4"
-  #98-118 Lock Washer
-  #98-112 Flat Washer

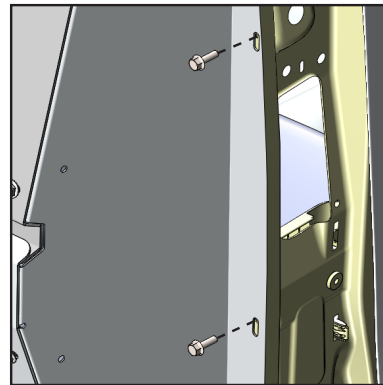

TOOLS



- Cordless Drill
- 10mm Socket

HARDWARE USED

5x

-  #90-971 Hex Bolt M6-1.0 x 20mm

2.3.2 Attach the driver and passenger side ceiling brackets to the van.

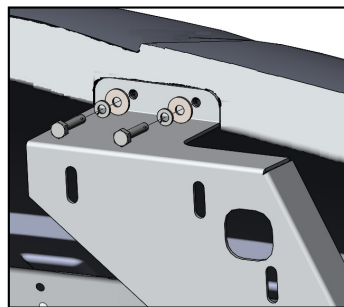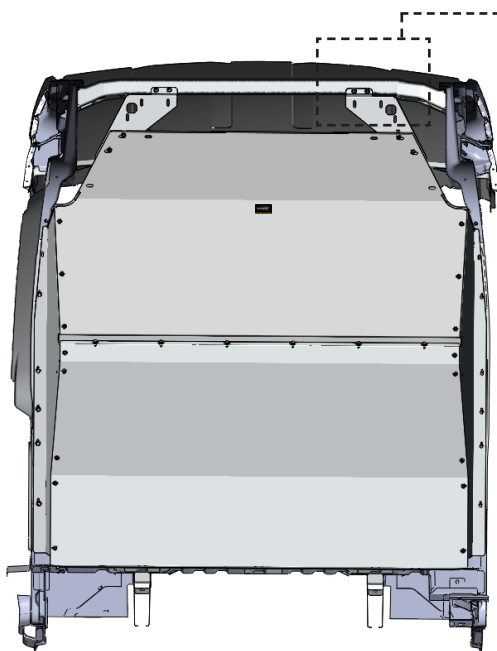

TOOLS

- ☐ Cordless Impact
- ☐ 7/16" Socket

HARDWARE USED

4x



#90-118 Hex Bolt 1/4" x 1-1/4"





#98-118 Lock Washer



#98-112 Flat Washer

2.3.3 Attach the top panel to the upper panel.

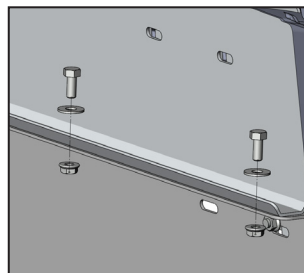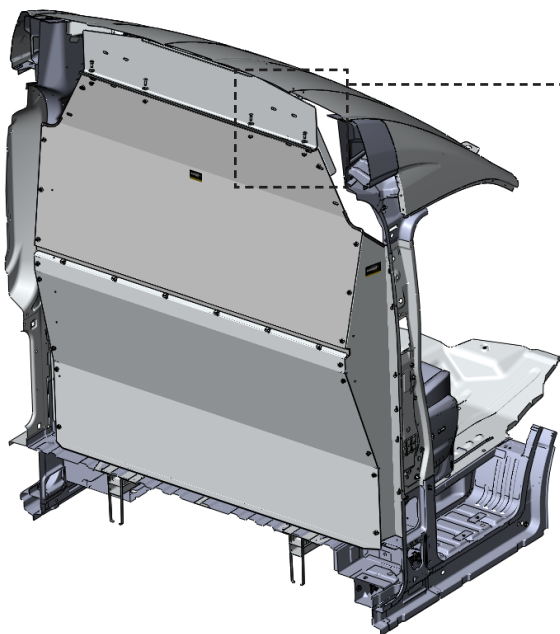

TOOLS

- ☐ Cordless Impact
- ☐ 1/2" Socket

HARDWARE USED

4x



#90-204 Hex Bolt 5/16" x 3/4"





#98-116 Flat Washer



#94-116 Serrated Nut

2.3.4 Attach the top panel to the passenger and driver side ceiling brackets.

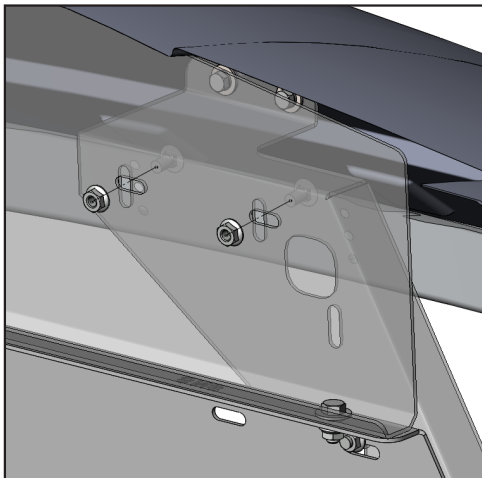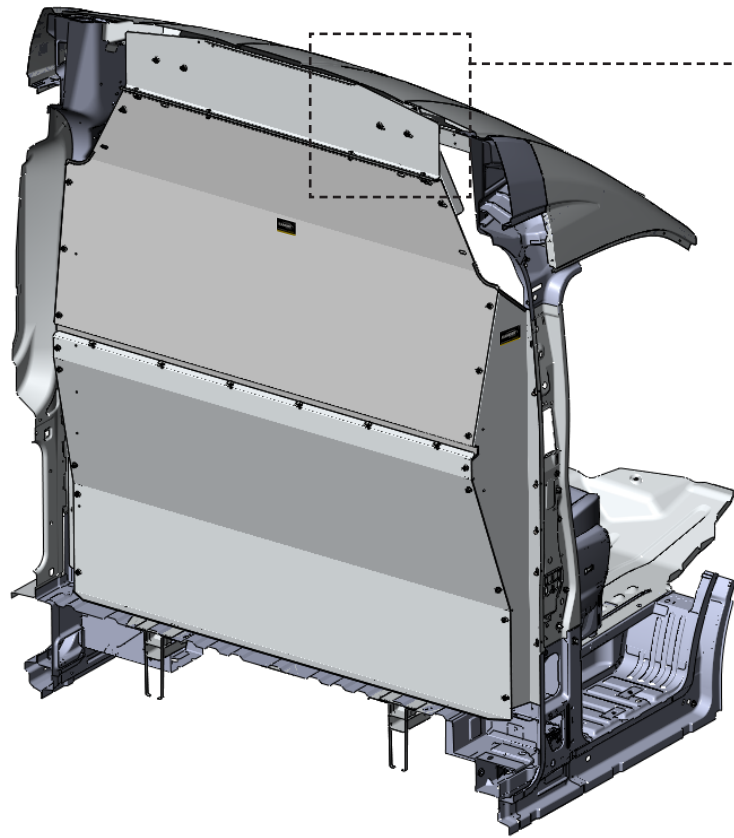

TOOLS

- ☐ Cordless Impact
- ☐ 1/2" Socket

HARDWARE USED

4x




#90-484 Carriage Bolt 5/16" x 5/8"




#94-116 Serrated Nut

2.3.5 Apply the warning label on the passenger side wing.

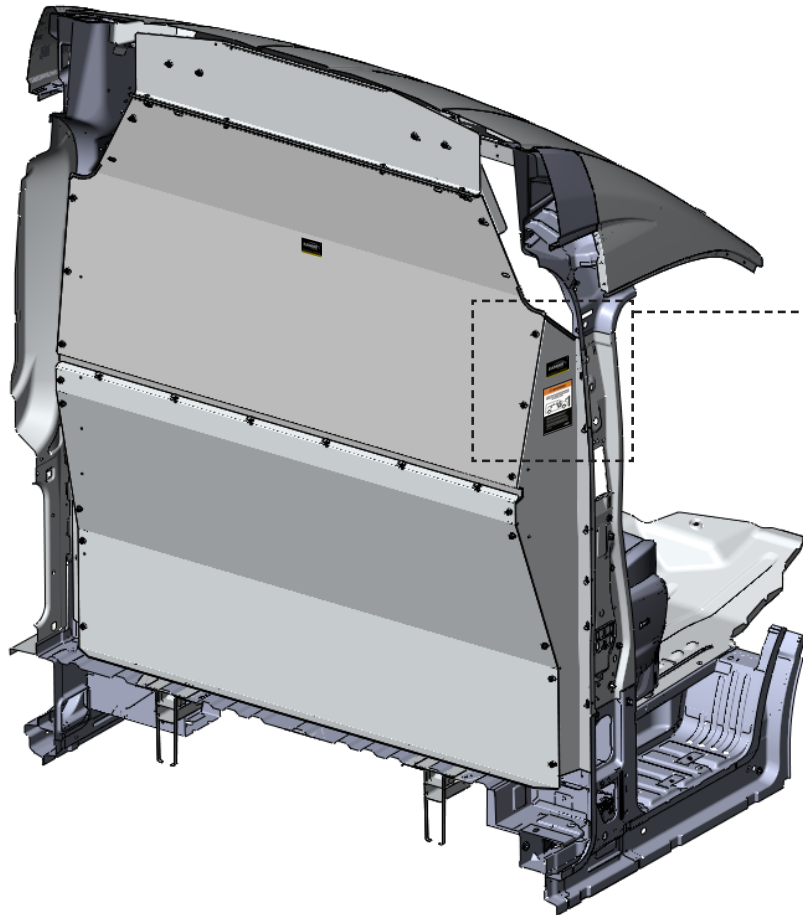

NOTE: English warning label is already attached on the passenger side panel.

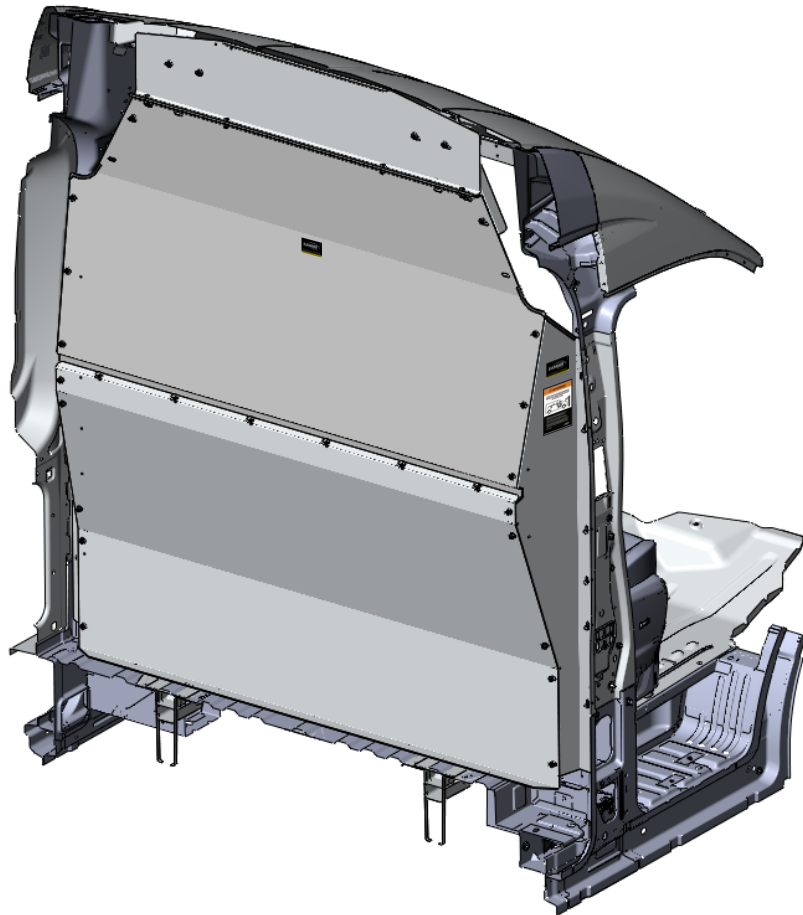

**“Congratulations, you have successfully installed your
Contoured Partition!”**

Thank you for doing business with us.”

