

INSTALLATION GUIDE



3320-TC CONTOURED PARTITION

Transit Connect Partition (Clear Plastic)



QUICK START GUIDE


Phase 1 - Assembly

- ❑ 1.1 Setup..... 3
 - ❑ 1.1.1 Unpack components; compare with the bill of materials..... 3
 - ❑ 1.1.2 Verify all parts are present..... 3
 - ❑ 1.1.3 Identify the assembly and installation fastener bags..... 4
- ❑ 1.2 Partition Assembly..... 5
 - ❑ 1.2.1 Attach the lower panel and mounting track to the upper panel..... 5
 - ❑ 1.2.2 Attach the sides of the upper panel and lower panel together on both sides..... 6

Phase 2 - Installation

- ❑ 2.1 Vehicle preparation..... 6
 - ❑ 2.1.1 Floor preparation..... 6
- ❑ 2.2 Contoured Partition Installation..... 7
 - ❑ 2.2.1 Attach the floor bracket to the van..... 7
 - ❑ 2.2.2 Put the assembled partition in place, then bolt both sides to the van..... 8
 - ❑ 2.2.3 Attach the lower panel to the floor bracket..... 9
 - ❑ 2.2.4 Put the warning label on the indicated location..... 9

REQUIRED ITEMS

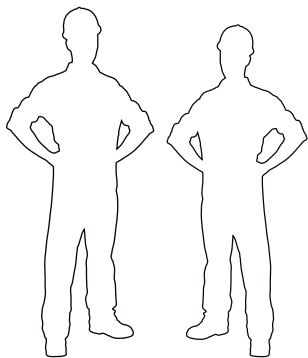


2
PERSONS

- ❑ Cordless Impact
- ❑ Cordless Drill
- ❑ Torque Gun
- ❑ 1/2" Socket
- ❑ 7/16" Socket
- ❑ 10mm Socket
- ❑ T50 Torque Bit

PHASE 1 – ASSEMBLY

1.1 SETUP

1.1.1 Unpack components; compare with the bill of materials.

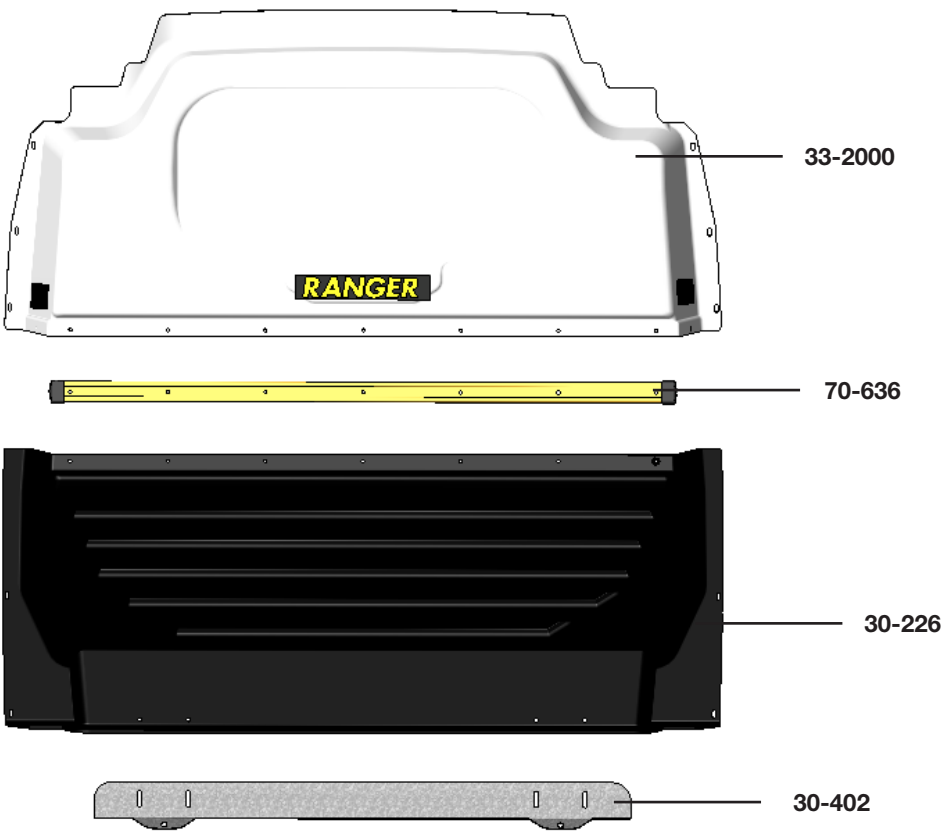

1.1.2 Verify all parts are present.

Item No.	Description	Qty.
30-226	Lower Panel	1
30-402	Floor Bracket	1
70-636	Mounting Track 51"	1
79-932	Warning Label (Bilingual)	1
33-2000	Upper Panel w/ Label	1
94-3006	Assembly Fastener Bag	1
96-3003	Installation Fastener Bag	1

1.1.3 Identify the **Assembly** and **Installation** fastener bags.

Assembly Fastener Bag



Hardware Assembly

2x		# 90-112	Hex Bolt 1/4"-20 x 7/8" GR-5 ZINC
7x		# 90-114	Hex Bolt 1/4"-20 x 1" GR-5 ZINC
4x		# 90-208	Hex Bolt 5/16"-18 x 1" GR-5 ZINC
9x		# 94-112	Serrated Nut 1/4"-20 ZINC
4x		# 94-116	Serrated Nut 5/16"-18 ZINC
9x		# 98-112	Flat Washer 1/4", 3/4" OD ZINC
4x		# 98-116	Flat Washer 5/16", 7/8" OD ZINC

7x



#90-114 Hex Bolt 1/4" x 1"



#98-112 Flat Washer



#94-112 Serrated Nut

2x



#90-112 Hex Bolt 1/4" x 7/8"



#98-112 Flat Washer



#94-112 Serrated Nut

4x



#90-208 Hex Bolt 5/16" x 1"




#98-116 Flat Washer



#94-116 Serrated Nut

Installation Fastener Bag



Hardware Assembly

10x		# 90-971	Hex Bolt M6-1.0 x 20mm 1022 BO
-----	---	----------	--------------------------------------

10x





#90-971 Hex Bolt M6-1.0 x 20mm

PHASE 1 – ASSEMBLY

1.2 PARTITION ASSEMBLY

1.2.1 Attach the lower panel and mounting track to the upper panel.

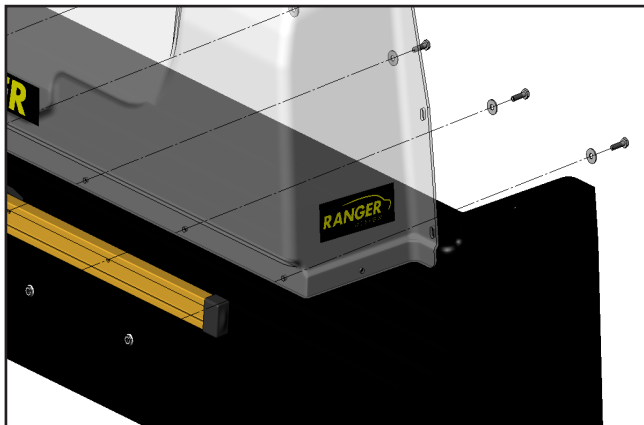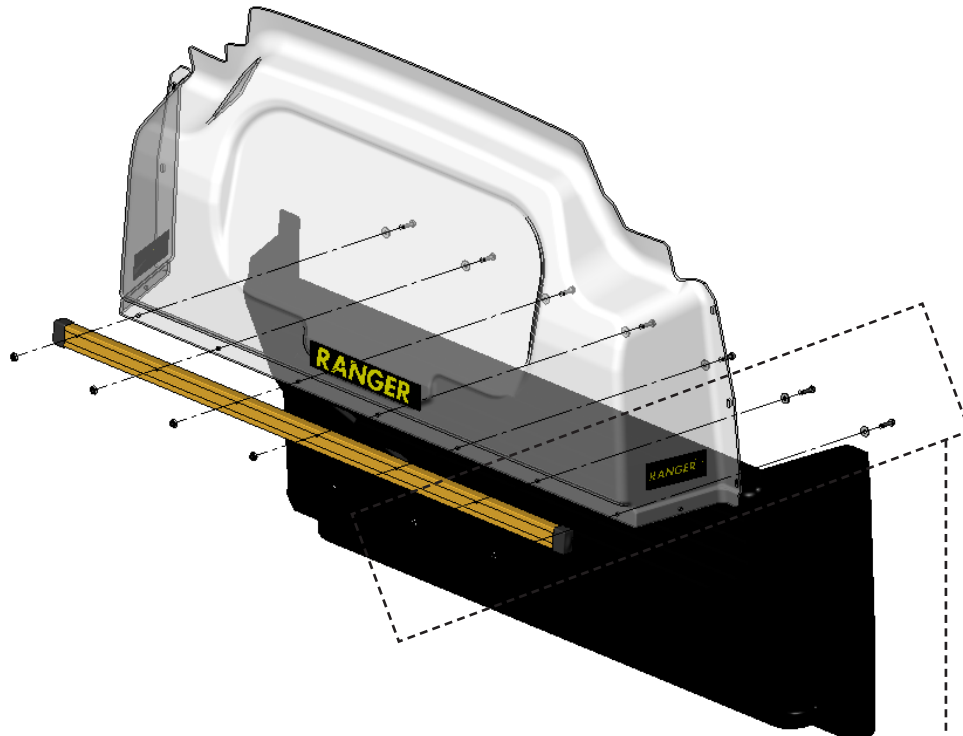

TOOLS

- Cordless Impact
- 7/16" Socket

HARDWARE USED

7x



#90-114 Hex Bolt 1/4" x 1"





#98-112 Flat Washer



#94-112 Serrated Nut

1.2.2 Attach the sides of the upper panel and lower panel together on both sides.

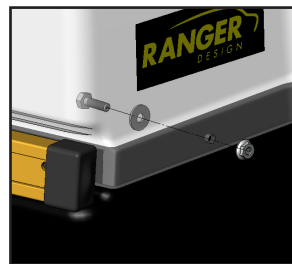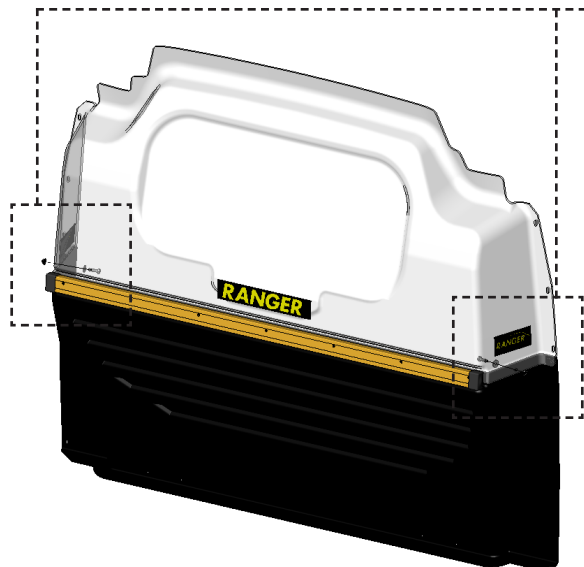

TOOLS

- ☐ Cordless Impact
- ☐ 7/16" Socket

HARDWARE USED

2x



#90-112 Hex Bolt 1/4" x 7/8"



#98-112 Flat Washer




#94-112 Serrated Nut

PHASE 2 – INSTALLATION

2.1 VEHICLE PREPARATION

2.1.1 Floor preparation.

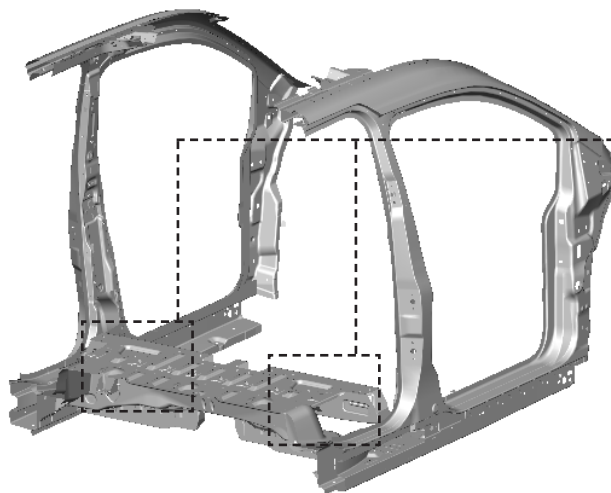

Remove the 2 D-rings, for re-use.




TOOLS

- ☐ Torque Gun
- ☐ T50 Torque Bit

PHASE 2 – INSTALLATION

2.2 CONTOURED PARTITION INSTALLATION

2.2.1 Attach the floor bracket to the van using the 2 D-rings.

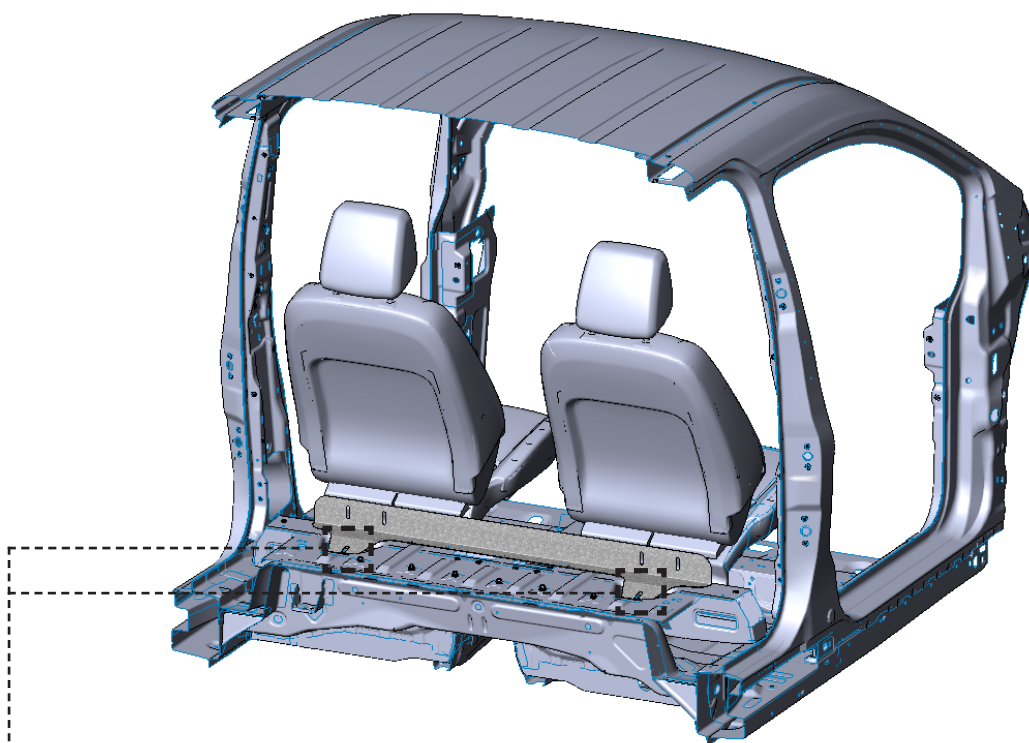

TOOLS

- ☐ Cordless Impact
- ☐ T50 Torque Bit



HARDWARE USED

2x

Use the D-ring Bolts

2.2.2 Put the assembled partition in place, then bolt both sides to the van.

NOTE: Do not tighten the bolt too much to prevent breakage.

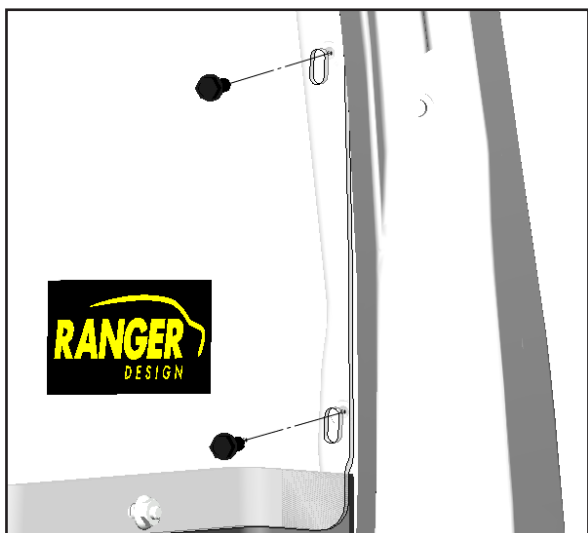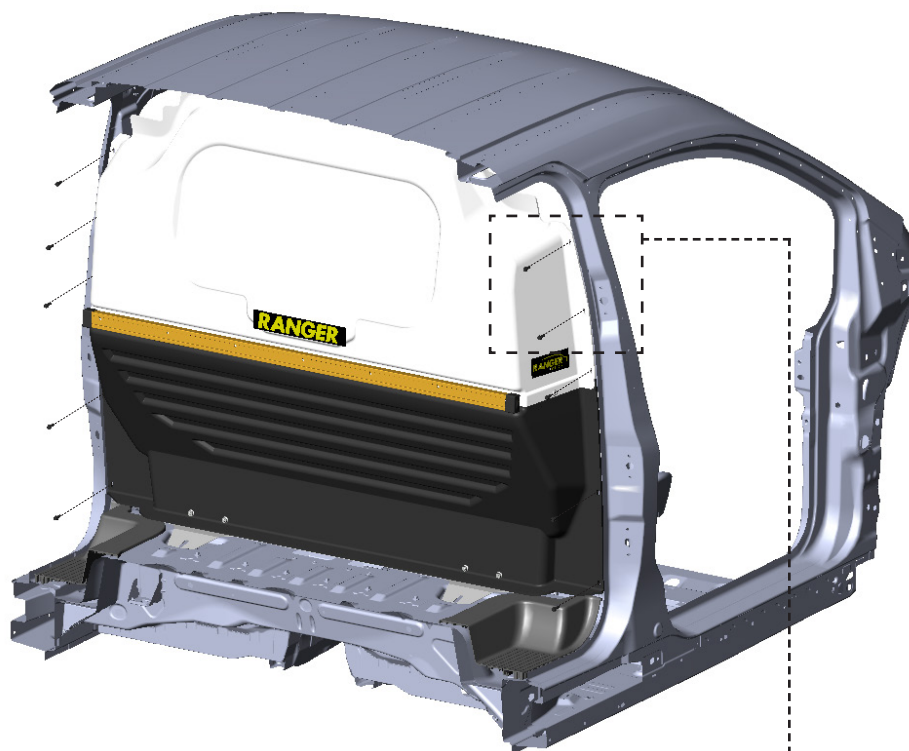

TOOLS

- Cordless Drill
- 10mm Socket


HARDWARE USED

10x



#90-971 Hex Bolt M6-1.0 x 20mm

2.2.3 Attach lower panel to the floor bracket.

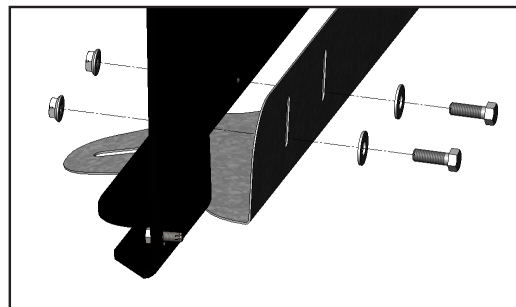

TOOLS

- Cordless Impact
- 1/2" Socket

HARDWARE USED

4x



#90-208 Hex Bolt 5/16" x 1"



#98-116 Flat Washer



#94-116 Serrated Nut

2.2.4 Put the warning label on the indicated location.

NOTE: The english warning label is already attached to the upper panel.



WARNING LABEL



**“Congratulations, you have successfully installed your
Contoured Partition!”**

Thank you for doing business with us.”

For any feedback or suggestions you may have, please contact: cs@rangerdesign.com

