


INSTALLATION GUIDE



C13-E WIRE MESH PARTITION

Transit Connect Partition (Wire Mesh, Steel)

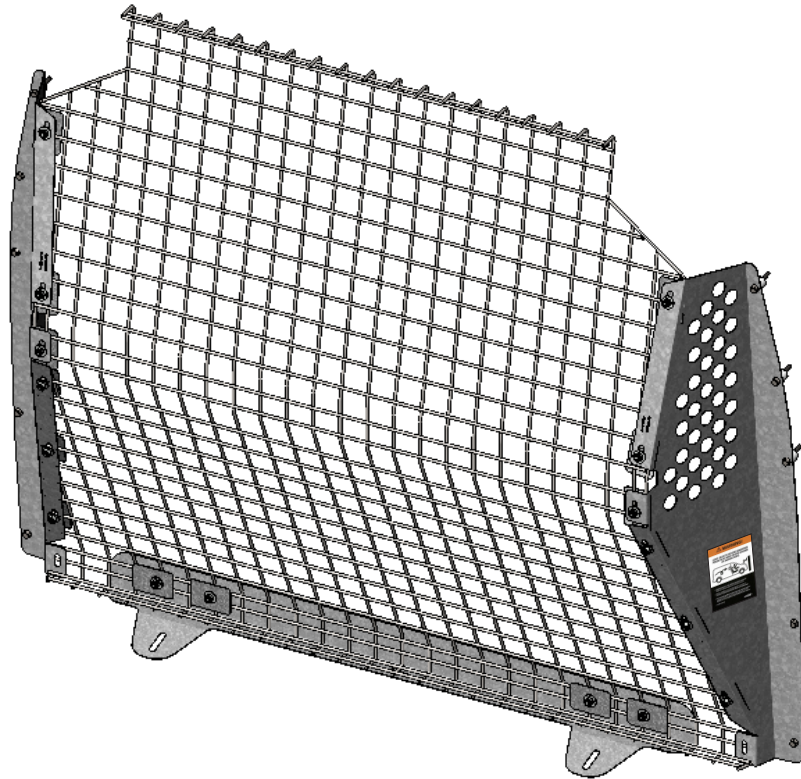

QUICK START GUIDE


Phase 1 - Assembly

❑ 1.1 Setup.....	3 - 4
❑ 1.2 Partition Assembly.....	5

Phase 2 - Installation

❑ 2.1 Vehicle Preparation.....	6
❑ 2.2 Wire Mesh Partition Installation.....	7 - 9

REQUIRED ITEMS

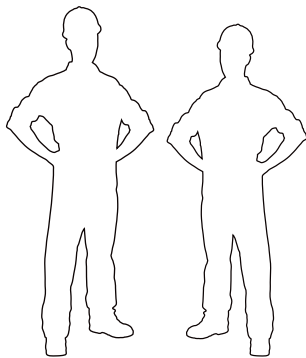


**2
PERSONS**

- ❑ Cordless Impact
- ❑ Cordless Drill
- ❑ Knife
- ❑ 1/2" Socket
- ❑ 10mm Socket
- ❑ T50 Torque Bit
- ❑ 1/2" Wrench

PHASE 1 – ASSEMBLY

1.1 SETUP

1.1.1 Unpack components; compare with the bill of materials.

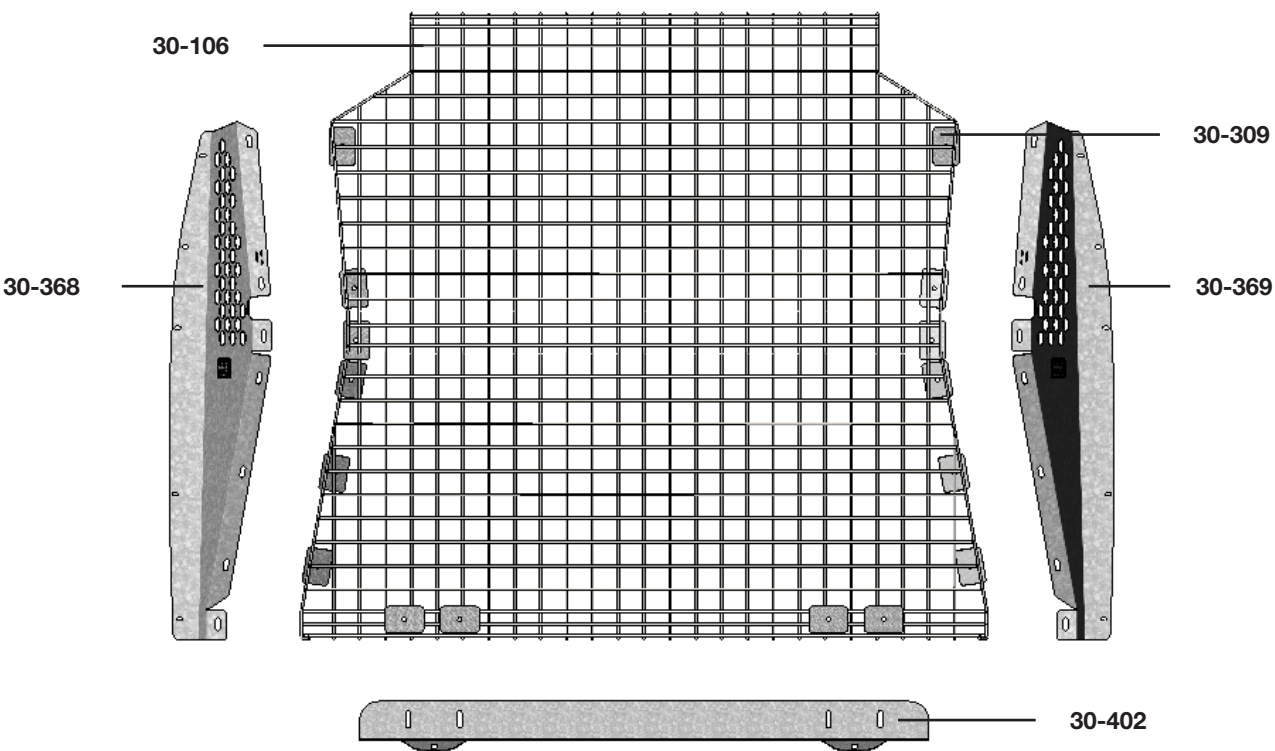

1.1.2 Verify all parts are present

Item No.	Description	Qty.
30-106	Wire Mesh Panel	1
30-309	Fastening Clip	16
30-368	Driver Side Bracket	1
30-369	Passenger Side Bracket	1
30-402	Floor Bracket	1
79-932	Warning Label (Bilingual)	1
94-3030	Assembly Fastener Bag	1
96-3003	Installation Fastener Bag	1

1.1.3 Identify the **94-3030** and **96-3003** fastener bags.

94-3030 Fastener Kit

16x



90-208

Hex Bolt
5/16"-18 x 1"
GR-5 ZINC

16x



94-110

Locknut
5/16"-18
ZINC

32x



98-116

Flat Washer
5/16", 7/8" OD
ZINC

Fastener Assembly

16x



#90-208 Hex Bolt 5/16" x 1"



#98-116 Flat Washer



#98-116 Flat Washer



#94-110 Locknut

96-3003 Fastener Kit

10x



90-971

Hex Bolt
M6-1.0 x 20mm
1022 BO

Fastener Assembly

10x



#90-971 Hex Bolt M6-1.0 x 20mm

RANGER
DESIGN



For technical support, contact us at 1-800-565-5321

C13-E Installation Guide | REV. F4 | Page 4

PHASE 1 – ASSEMBLY

1.2 PARTITION ASSEMBLY

1.2.1 Remove all the PVC from all the parts, then attach the side brackets to the wire mesh partition using 12 fastening clips.

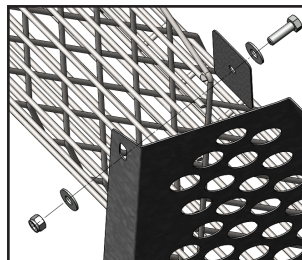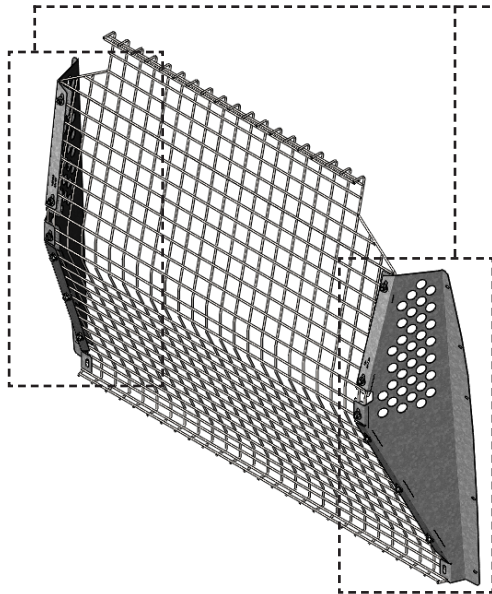

TOOLS

- ☐ Cordless Impact
- ☐ Knife
- ☐ 1/2" Socket
- ☐ 1/2" Wrench

HARDWARE USED

12x



#90-208 Hex Bolt 5/16" x 1"



#98-116 Flat Washer





#98-116 Flat Washer



#94-110 Locknut

1.2.2 Attach floor bracket to the wire mesh partition using 4 fastening clips.

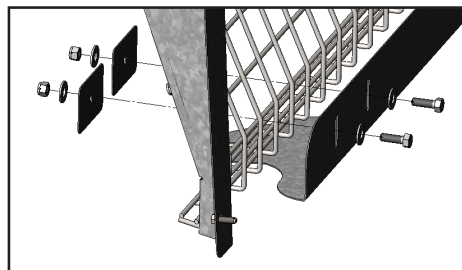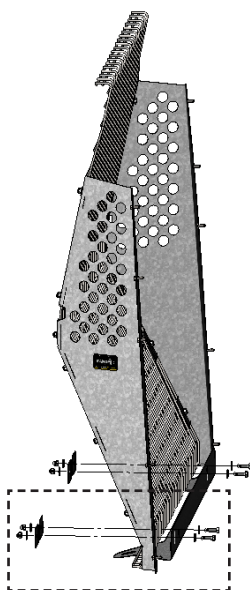

TOOLS

- ☐ Cordless Impact
- ☐ 1/2" Socket

HARDWARE USED

4x HAND-TIGHTEN THE NUTS.



#90-208 Hex Bolt 5/16" x 1"



#98-116 Flat Washer



#98-116 Flat Washer




#94-110 Locknut

PHASE 2 – INSTALLATION

2.1 VEHICLE PREPARATION

2.1.1 Floor preparation.

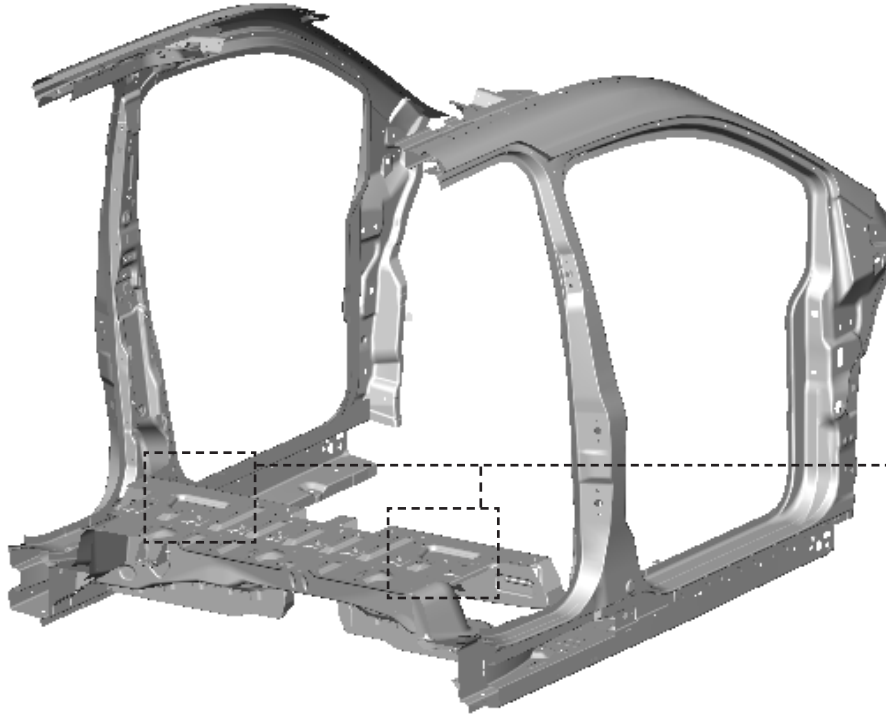

Remove the 2 D-rings,
for re-use.

TOOLS



- ☐ Cordless Impact
- ☐ T50 Torque Bit

PHASE 2 – INSTALLATION

2.2 WIRE MESH PARTITION INSTALLATION

2.2.1 Lift the partition inside the van and put it in place, then bolt both brackets to the van.

NOTE: Be careful not to overtighten.

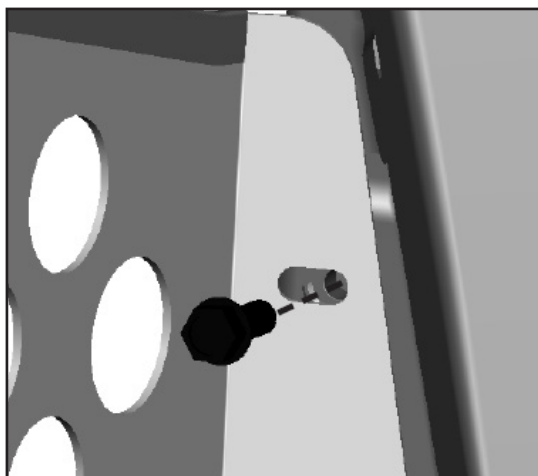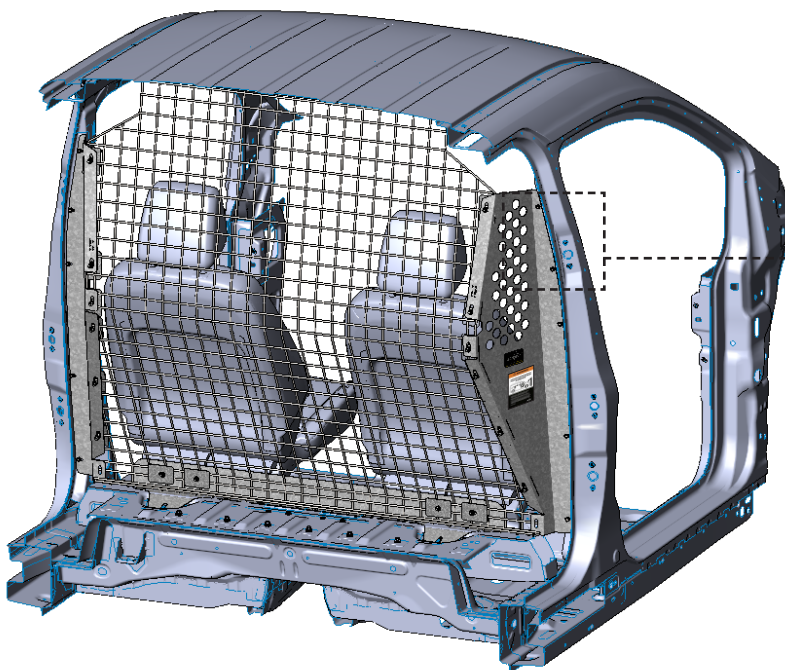

TOOLS

- Cordless Drill
- 10mm Socket


HARDWARE USED

10x



#90-971 Hex Bolt M6-1.0 x 20mm

2.2.2 Attach the floor bracket to the van using 2 D-rings, then tighten the bolts that attach the floor bracket and lower panel.

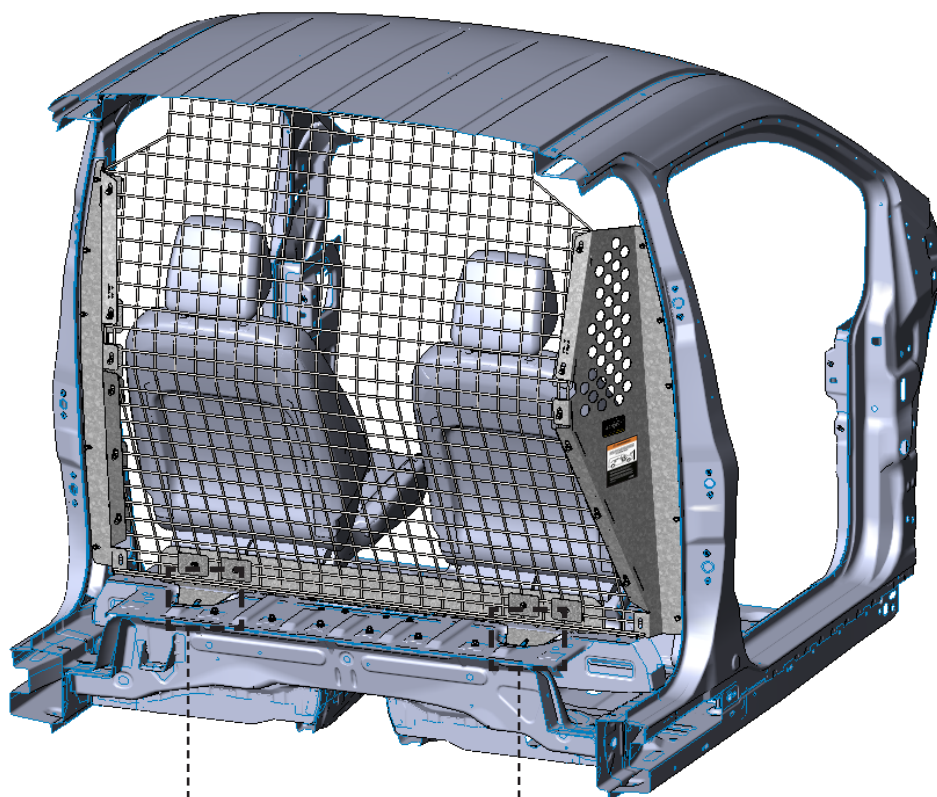

TOOLS



- Cordless Impact
- T50 Torque Bit

HARDWARE USED


2x

Use the D-ring bolt

2.2.3 Apply the warning label on the passenger side bracket.

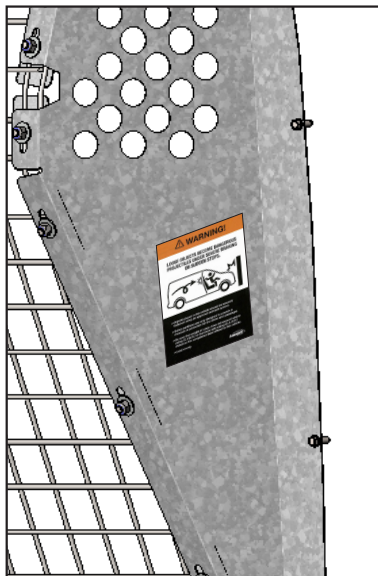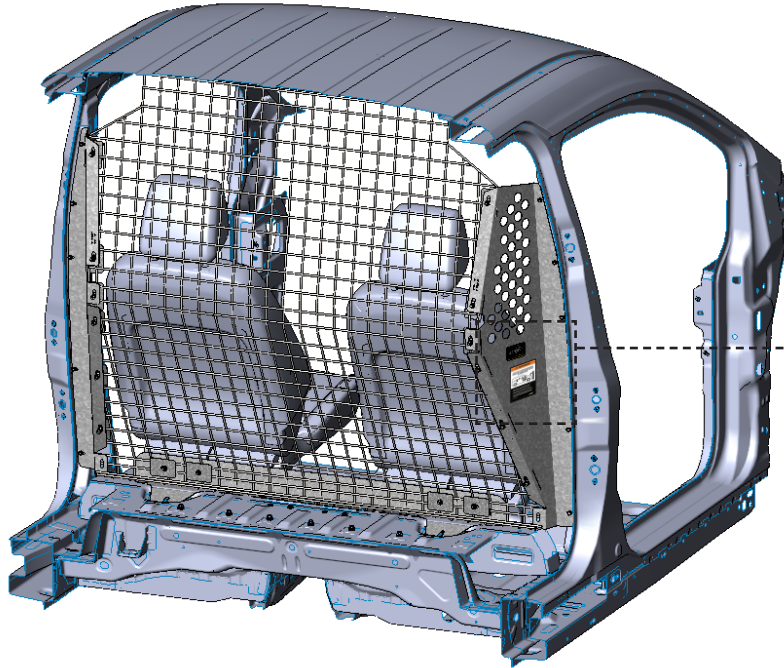

NOTE: The english warning label is already attached to the passenger side panel.

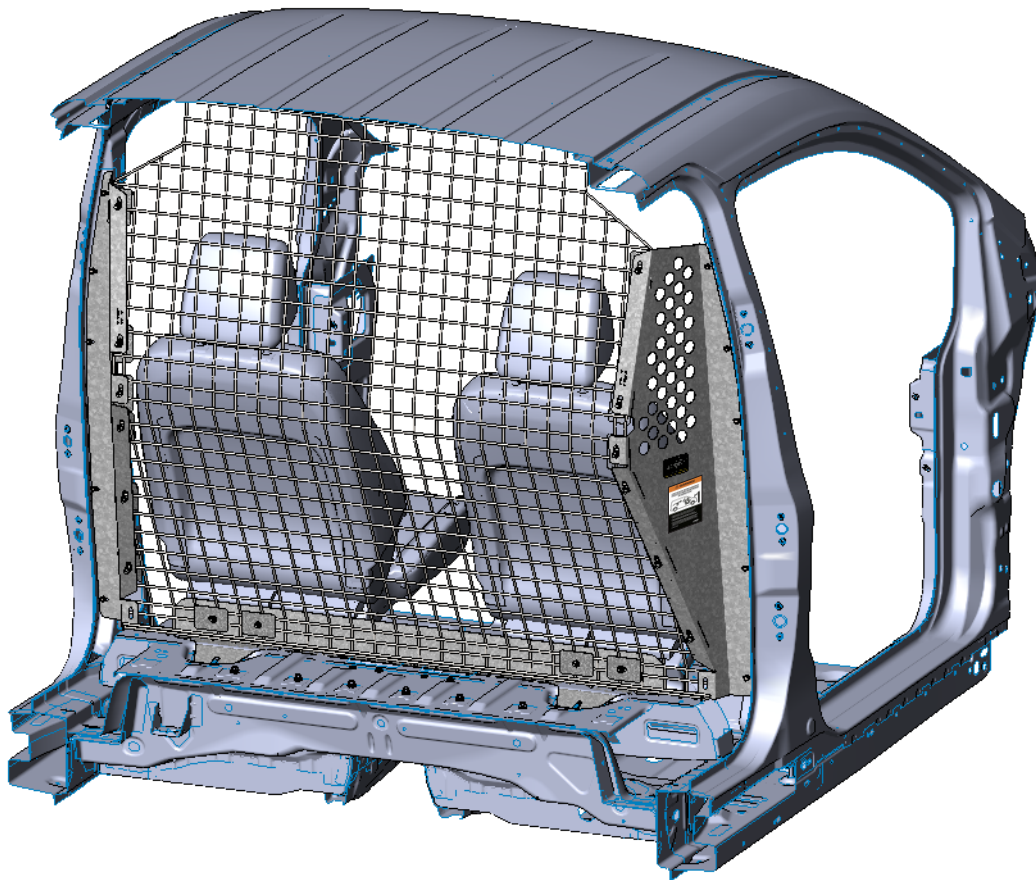

**“Congratulations, you have successfully installed your
C13-E Partition!”**

Thank you for doing business with us.”

For any feedback or suggestions you may have, please contact: [**cs@rangerdesign.com**](mailto:cs@rangerdesign.com)

