





MERCEDES BENZ METRIS FULL SIZE WALL LINERS

INSTALLATION INSTRUCTIONS

NOTES:

1. Before commencing, remove all wall liners already installed in the vehicle.
2. Consult layout PDF and compare vehicle layout
3. Prepare hardware shown below and have them ready for installation.
4. Wall liners will be installed in the order shown in the instructions.
5. A drill with a Phillips driver is required to install (**C**) #8 Screws) shown below.

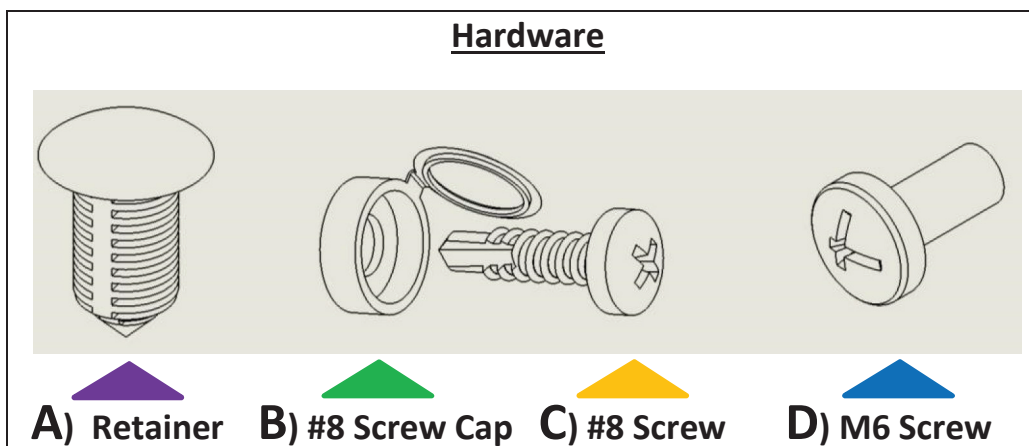


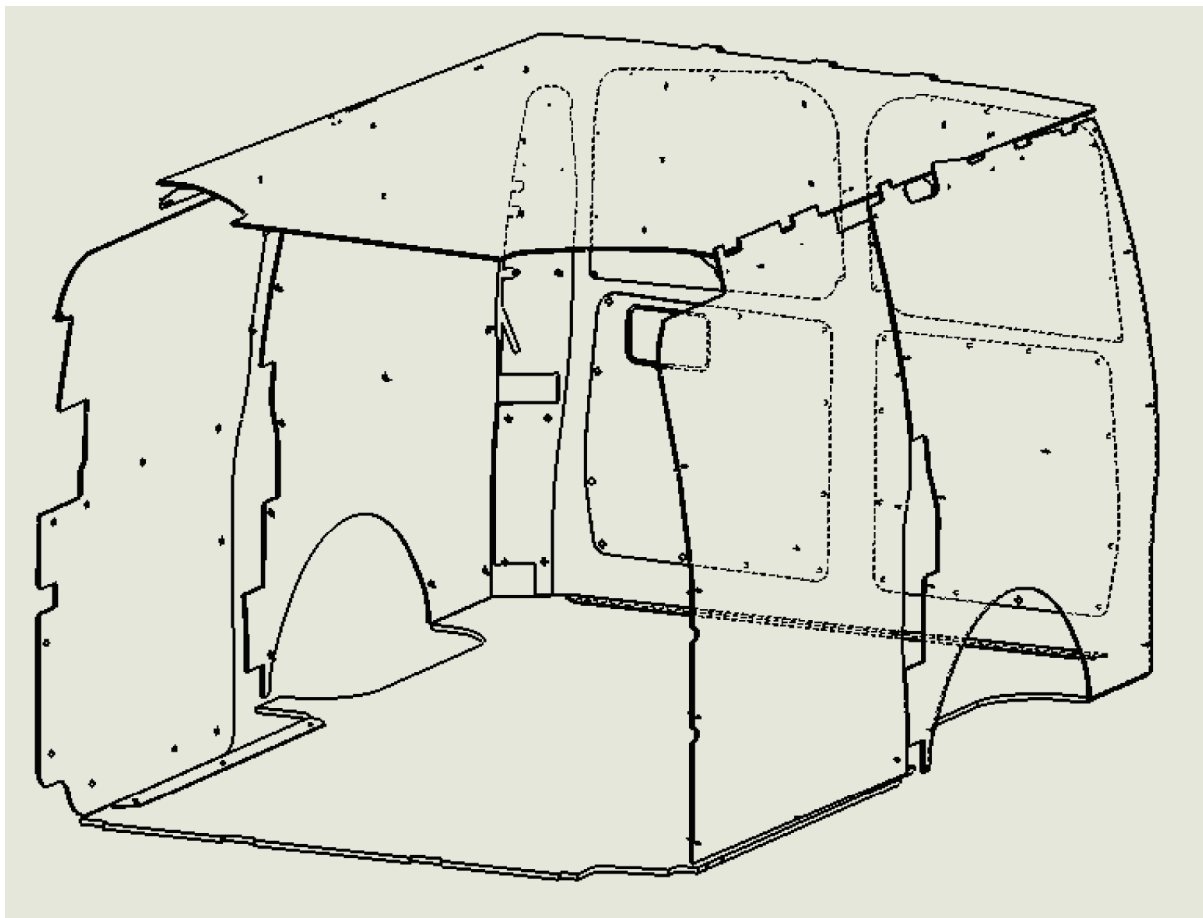

ITEM NO.
1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18
19
20

DESCRIPTION	QTY.
CEILING PANEL - METRIS - GREY	1
SILL - DRIVER SIDE - METRIS	1
SILL - PASSENGER SIDE - METRIS	1
METRIS FLOOR	1
REAR PASSENGERS SIDE PANEL - METRIS - GREY	1
SLIDING DOOR PASSENGERS SIDE PANEL - METRIS - GREY	1
LOWER DOOR DRIVERS SIDE PANEL - METRIS - GREY	1
LOWER DOOR PASSENGERS SIDE PANEL - METRIS - GREY	1
UPPER DOOR DRIVERS SIDE PANEL - METRIS - GREY	1
UPPER DOOR PASSENGERS SIDE PANEL - METRIS - GREY	1
REAR DRIVERS SIDE PANEL - METRIS - GREY	1
REAR CORNER DRIVERS SIDE PANEL - METRIS - GREY	1
FRONT DRIVERS SIDE PANEL - METRIS - GREY	1
REAR CORNER PASSENGERS SIDE PANEL - METRIS - GREY	1
FLOOR SILL 40"- METRIS	1
FLOOR SILL 53"- METRIS	1
SCREW - PHIL. PAN HD #8X.75 SELF DRILLING	110
RETAINER- BLACK NYLON	37
SCREW CAP	104
SCREW M6x1.0x13 PHIL PAN HD ZINC	2

Driver Side Wall Liner Installation

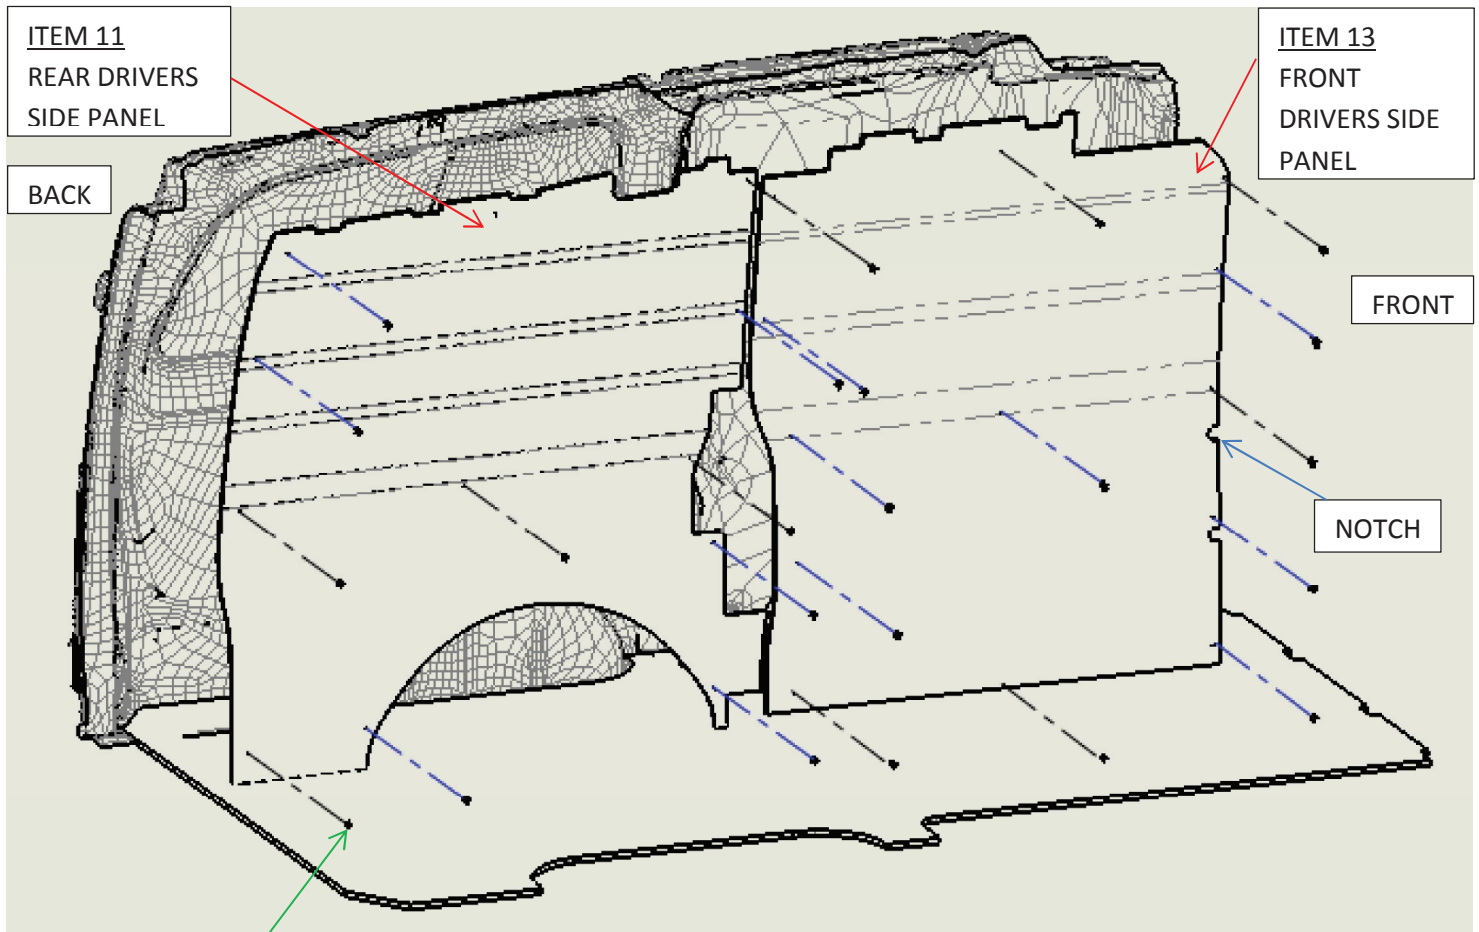


1: Install Item 13, Front Driver Side Panel.

- Align notch and edge of panel with the feature on the vehicle driver side front then align opposite side of panel edge with the contour features.
- Install hardware (B, C), in the holes provided, on the bottom of the panel first, working your way up the panel to the top.

2: Install Item 11, Rear Driver Side Panel.

- Align wheel well edge of the panel with the feature on the vehicle, position the contour of the panel to the vehicle wall.
- Install hardware (B, C), in the holes provided, on the bottom of the panel first, working your way up the panel to the top.

Installation completed

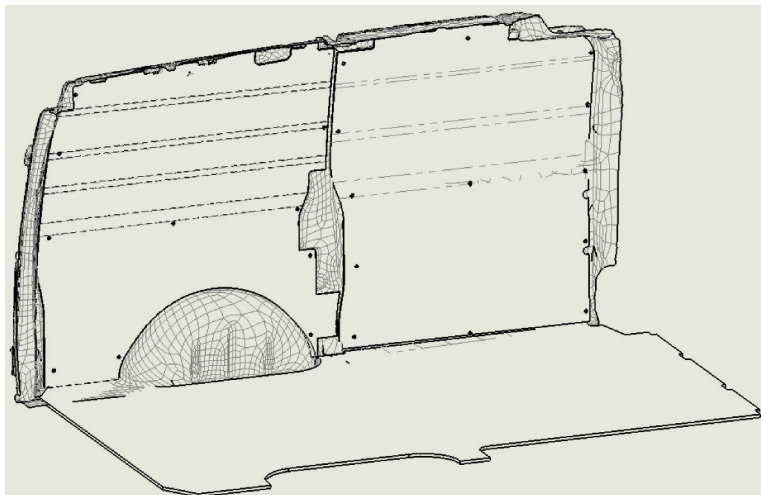


Back Door Wall Liner Installation

ITEM 10
UPPER DOOR
PASSENGER SIDE
PANEL

ITEM 9
UPPER DOOR
DRIVERS SIDE
PANEL

ITEM 8
LOWER DOOR
PASSENGER
SIDE PANEL

ITEM 7
LOWER DOOR
DRIVERS SIDE
PANEL

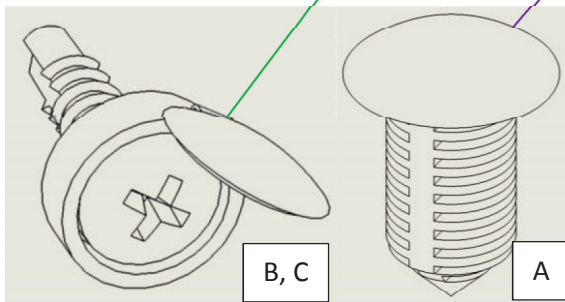



3: Install Item 9 and 10, Upper door panels,

- Install hardware (A) in the center top hole on each panel and on the corresponding hole at the top center of each door.
- Align the Upper panels with the door contours.
- Install hardware (B, C), in the holes provided, on the bottom of the panel first, working your way up the panel to the top.




4: Remove the door handle Bezel prior to installing the bottom passenger side panel. The bezel must be pulled off of the handle unclipping the edge of the Bezel all around the handle frame.

- Install Item 7 and 8, Lower door panels, with hardware (A) all around the panels in the holes provided on the panel as well as on the doors.
- Align the Lower panels with the door contours, install hardware (A).
- Reinstall the handle Bezel by aligning it and pushing it back into place.

Installation completed

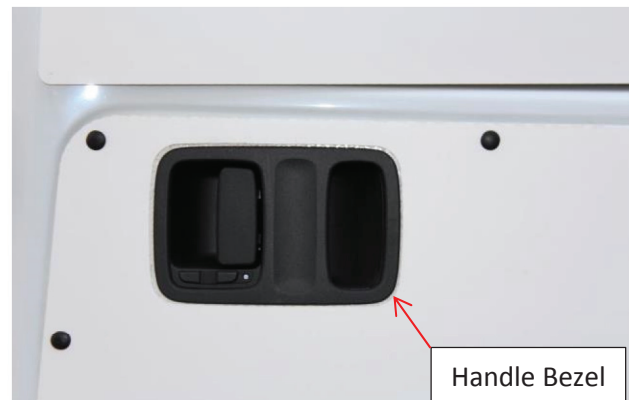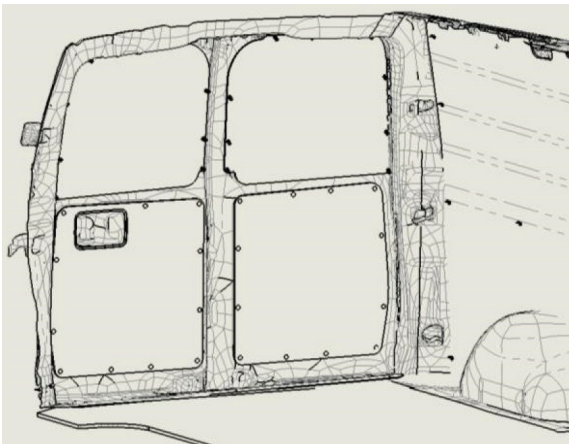

Passenger Side Wall Liner Installation

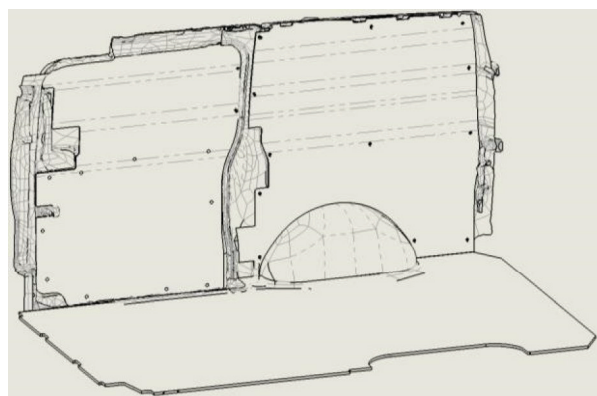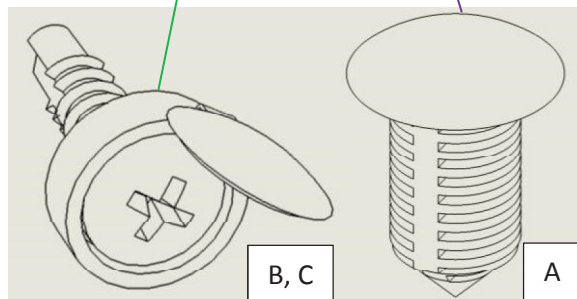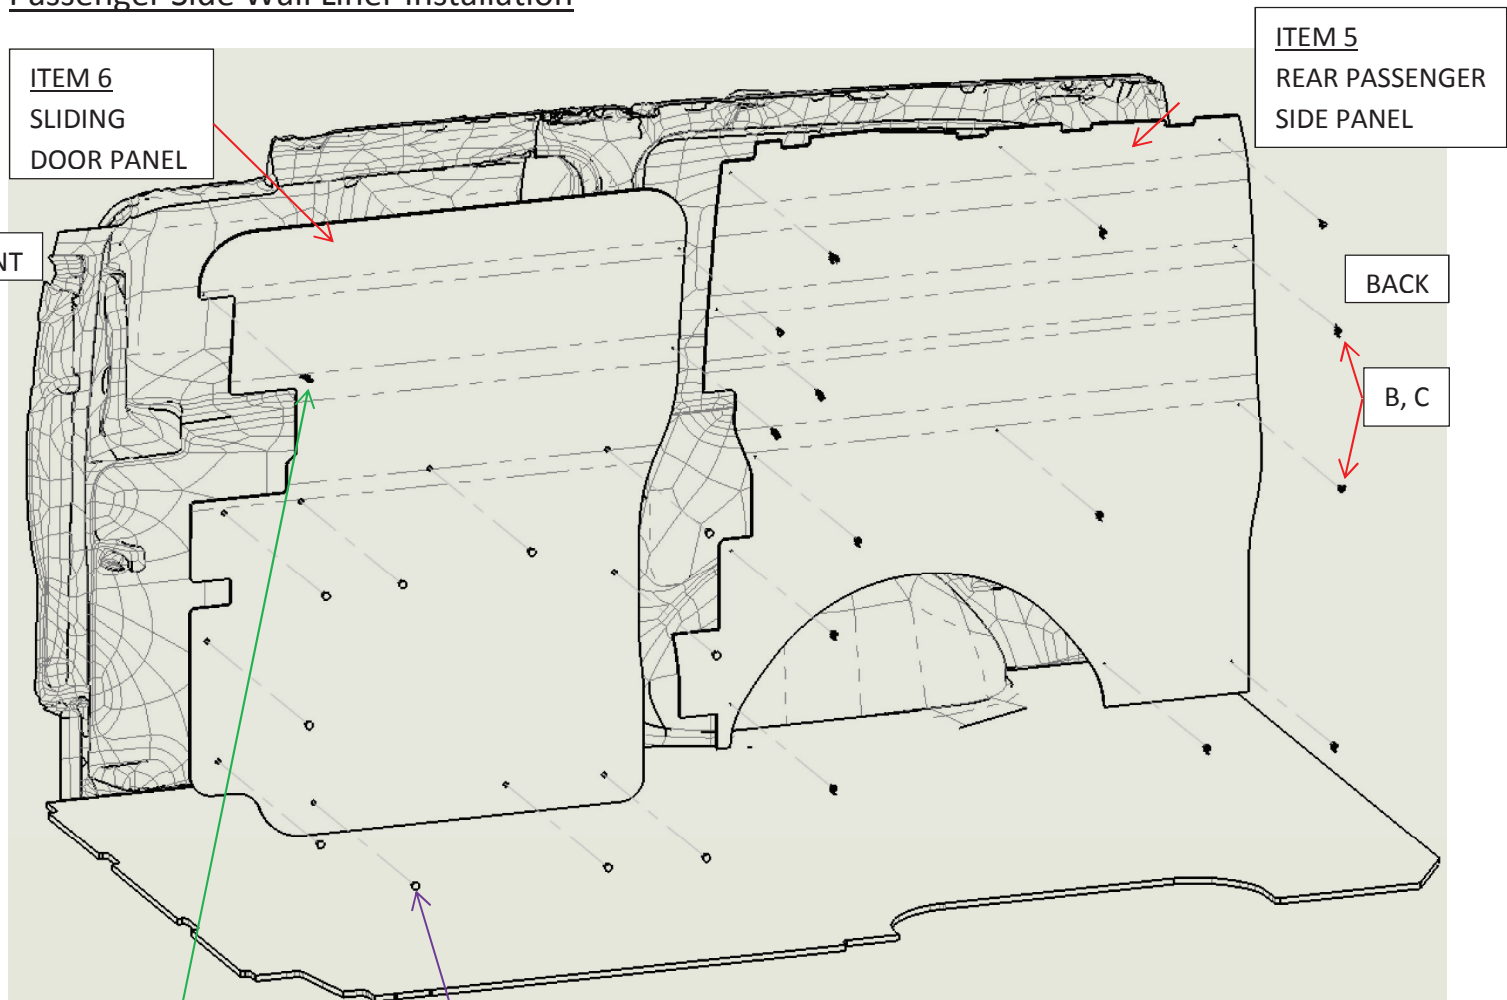

Installation completed

ITEM 5
REAR PASSENGER
SIDE PANEL

ITEM 6
SLIDING
DOOR PANEL

FRONT

BACK

B, C

5: Install Item 5, Rear Passenger Side Panel.

- Align wheel well edge of the panel with the feature on the vehicle; position the contour of the panel to the vehicle wall.
- Install hardware (B, C), in the holes provided, on the bottom of the panel first, working your way up the panel to the top.

6: Install Item 6, Sliding Door Panel.

- Note: Sliding door must be closed to install panel;
- Insert panel into the sliding door sill cavity, align holes at the bottom half of the panel to the one on the door and insert Retainer (A) in all of the holes. Install hardware (B, C) in the holes provided on the top part of the panel.