




PROMASTER 136" WB LOW ROOF WALL LINERS

INSTALLATION INSTRUCTIONS




NOTES:

1. Before commencing, remove all wall liners and "D" Rings already installed in the vehicle.
2. Consult layout PDF and compare vehicle layout
3. Prepare hardware shown below and have them ready for installation.
4. Wall liners will be installed in the order shown in the instructions.
5. A drill with a Phillips driver is required to install hardware (**C**) #8 Screws, shown below.
6. Reinstall all "D" Rings once the wall liner kit installation is completed.

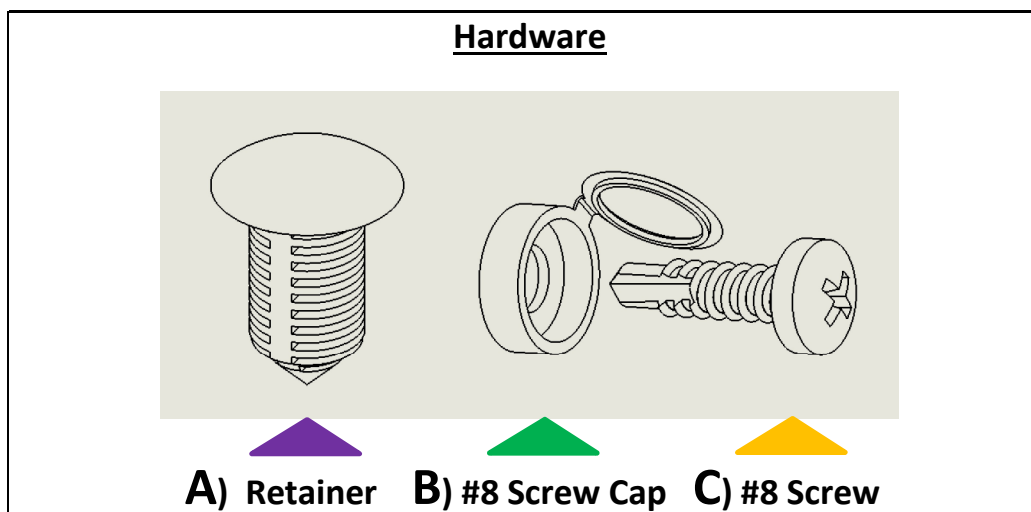

PROMASTER 136" WB LOW ROOF WALL LINERS

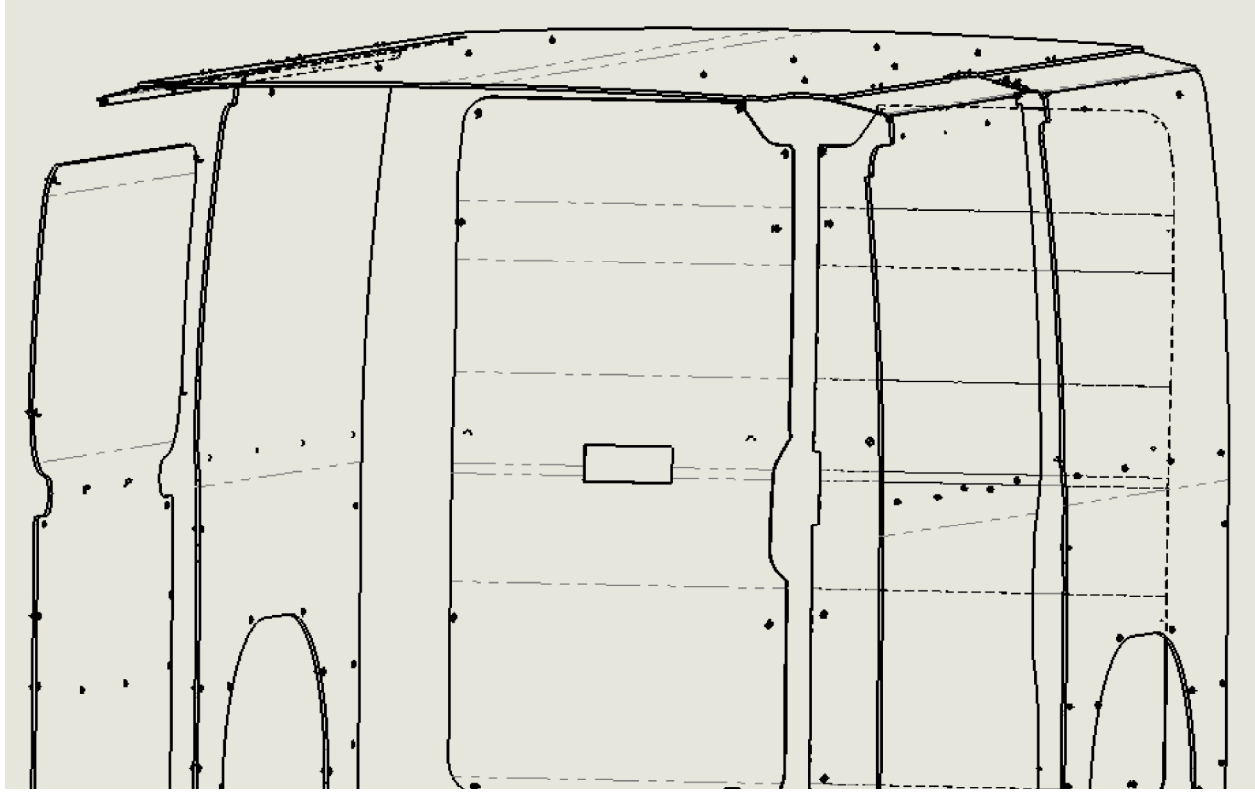

ERROR: stackunderflow
OFFENDING COMMAND: ~

STACK: