




## PROMASTER 159" WB HIGH ROOF WALL LINERS

### INSTALLATION INSTRUCTIONS




#### NOTES:

1. Before commencing, remove all wall liners and "D" Rings already installed in the vehicle.
2. Consult layout PDF and compare vehicle layout
3. Prepare hardware shown below and have them ready for installation.
4. Wall liners will be installed in the order shown in the instructions.
5. A drill with a Phillips driver is required to install hardware ( **C** ) #8 Screws, shown below.
6. Reinstall all "D" Rings once the wall liner kit installation is completed.

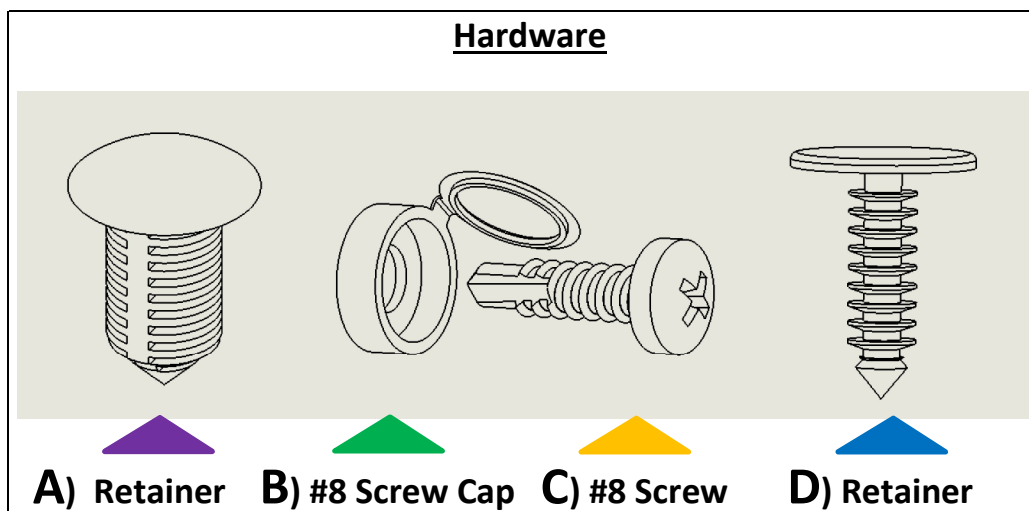

# PROMASTER 159" WB HIGH ROOF WALL LINERS



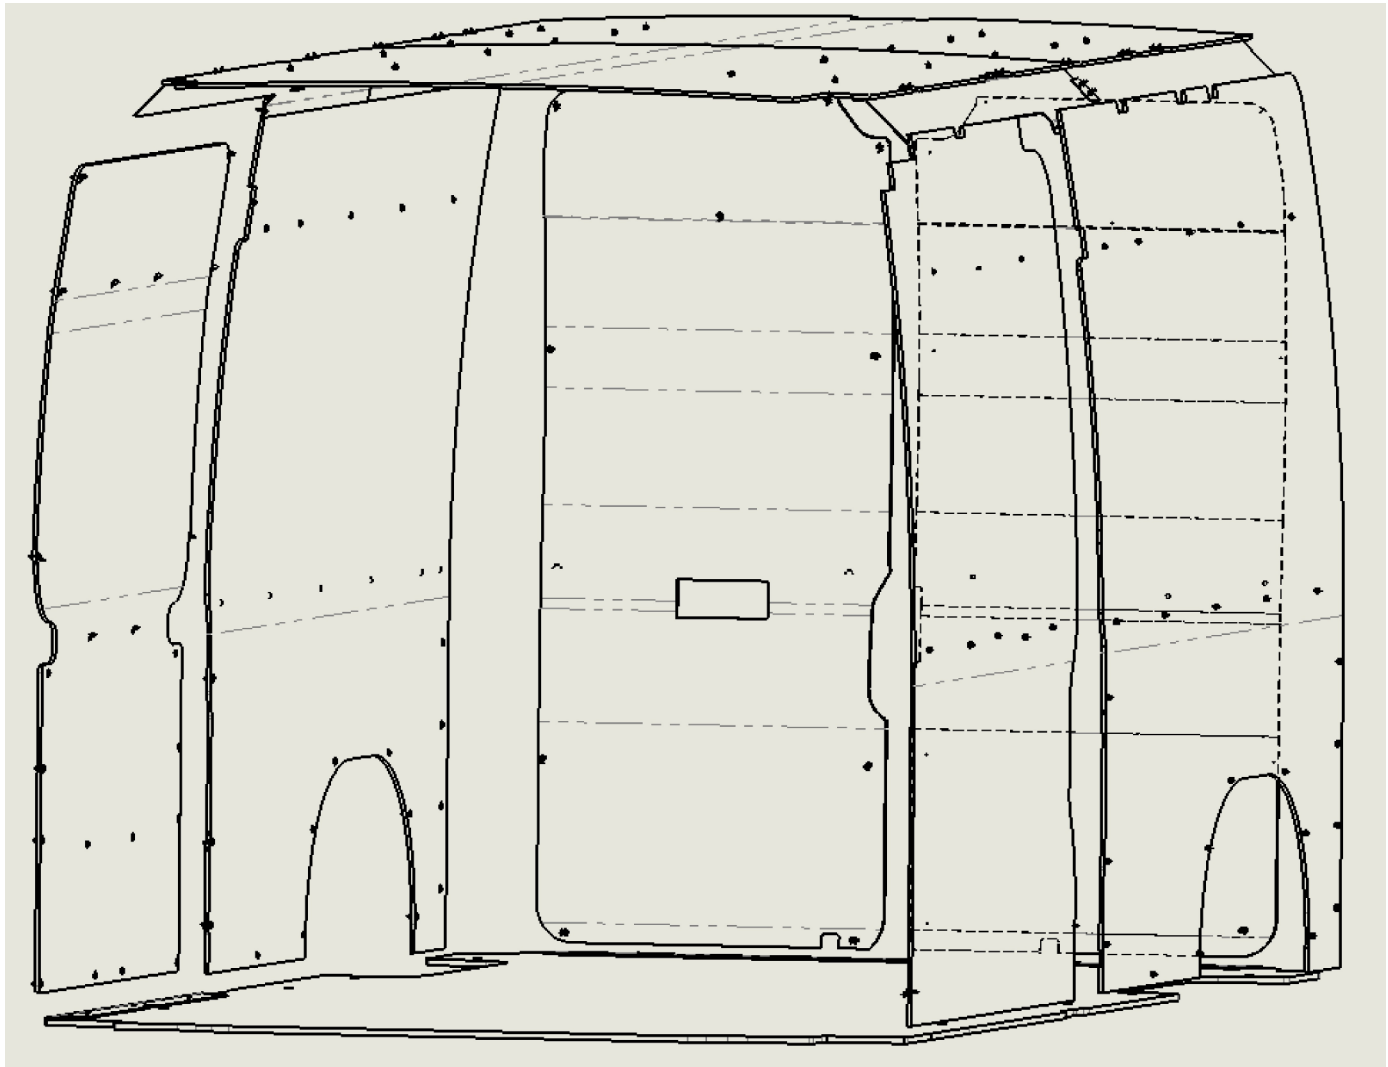


ITEM NO.	DESCRIPTION	QTY.
1	GREY CEILING FRONT PANEL PROMASTER 159" WB	1
2	GREY CEILING REAR PANEL PROMASTER 159" WB	1
3	RETAINER- BLACK NYLON	92
4	GREY SLIDING DOOR PANEL PROMASTER 159" WB HR	1
5	SCREW CAP	33
6	SCREW - PHIL. PAN HD #8X.75 SELF DRILLING	69
7	GREY REAR WALL PANEL DRIVER SIDE PROMASTER 159" WB HR	1
8	GREY FRONT WALL PANEL DRIVER SIDE PROMASTER 159" WB HR	1
9	FRONT CEILING SILL DRIVER SIDE PROMASTER 159" WB HR	1
10	REAR CEILING SILL DRIVER SIDE PROMASTER 159" WB HR	1
11	CEILING SILL JOINER PLATE	2
12	GREY REAR WALL PANEL PASSENGER SIDE PROMASTER 159" WB HR	1
13	FRONT CEILING SILL PASSENGER SIDE PROMASTER 159" WB HR	1
14	REAR CEILING SILL PASSENGER SIDE PROMASTER 159" WB HR	1
15	GREY REAR DOOR PANEL PASSENGER SIDE PROMASTER 159" WB HR	1
16	GREY REAR DOOR PANEL DRIVER SIDE PROMASTER 159" WB HR	1
17	FLOOR - PROMASTER 159 WB	1
18	REAR DOOR FLOOR SILL PROMASTER 159 WB	1
19	SIDE DOOR FLOOR SILL PROMASTER 159 WB	1


## Driver Side Wall Liner Installation

**ITEM 7**  
REAR DRIVERS SIDE PANEL

**ITEM 8**  
FRONT  
DRIVERS SIDE  
PANEL

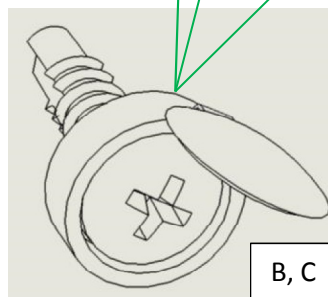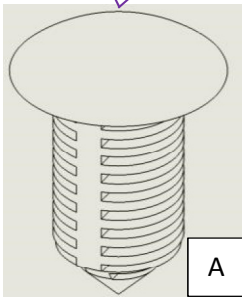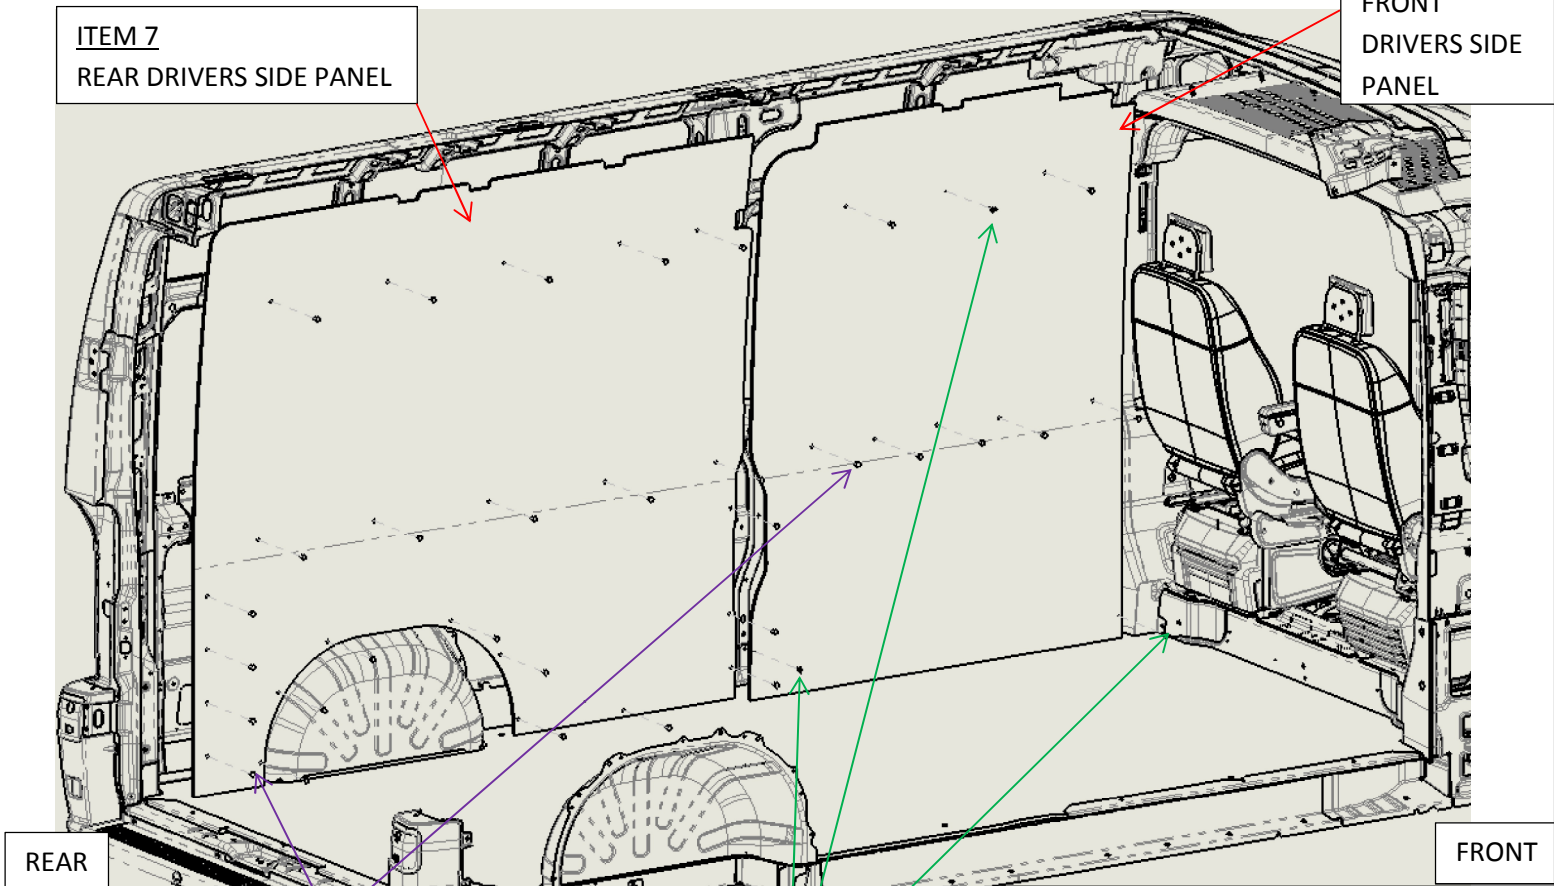

### Installation completed

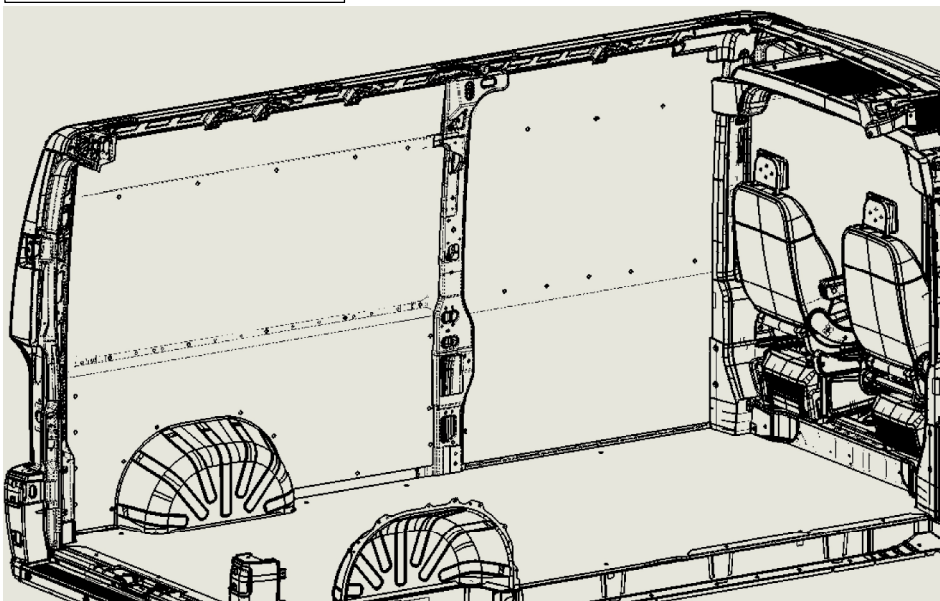

**1:** Install Item 8, Front Driver Side Panel.

- Align notch and edge of panel with the feature on the vehicle driver side front then align opposite side of panel edge with the contour features.

- Install hardware (A) and (B,C), in the holes provided, on the bottom of the panel first, working your way up the panel to the top.



**2:** Install Item 7, Rear Driver Side Panels.

- Align wheel well edge of the panel with the feature on the vehicle; position the contour of the panel to the vehicle wall.
- Install hardware (A), in the holes provided, on the bottom of the panel first, working your way up the panel to the top.

## Back Door Wall Liner Installation

ITEM 15  
REAR DOOR  
PASSENGER SIDE  
PANEL

ITEM 16  
REAR DOOR  
DRIVERS SIDE  
PANEL

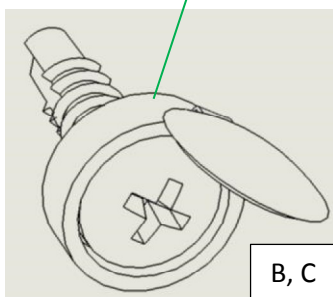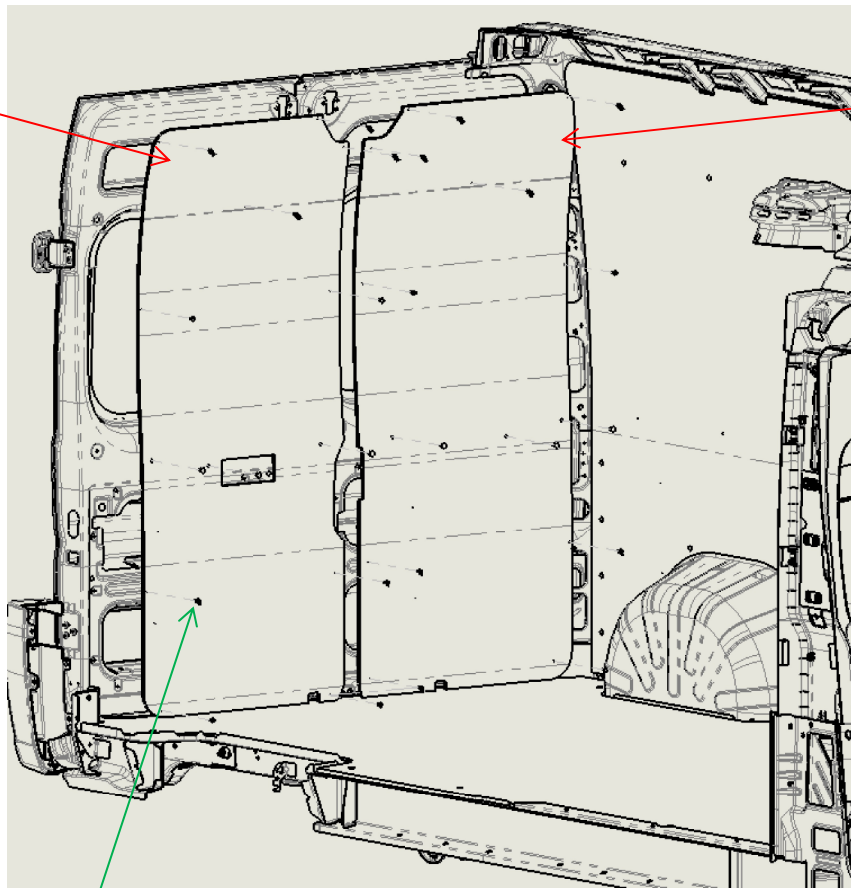


**3:** Install Item 15 and 16, Upper door panels,

**Note:** Rear doors must be closed when installing door panels.

- Align the panels with the upper door contours, do not mount tight against the door seals.
- Install hardware (B, C), in the holes provided, on the top of the panel first, working your way down the panel to the bottom.

Installation completed


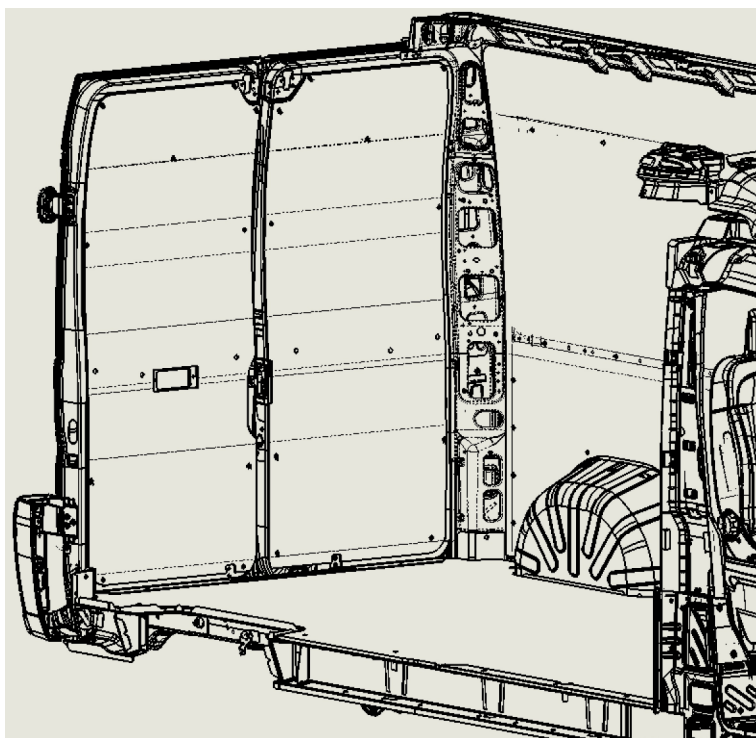




## Passenger Side Wall Liner Installation

**ITEM 4**  
SLIDING DOOR  
PANEL

**ITEM 12**  
REAR PASSENGER  
SIDE PANEL

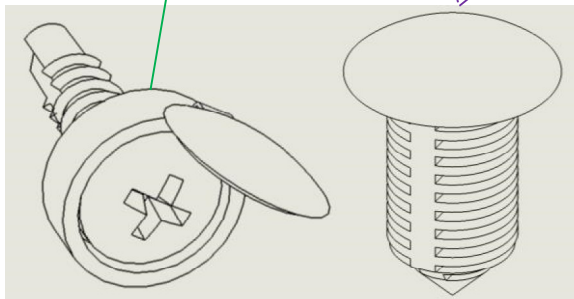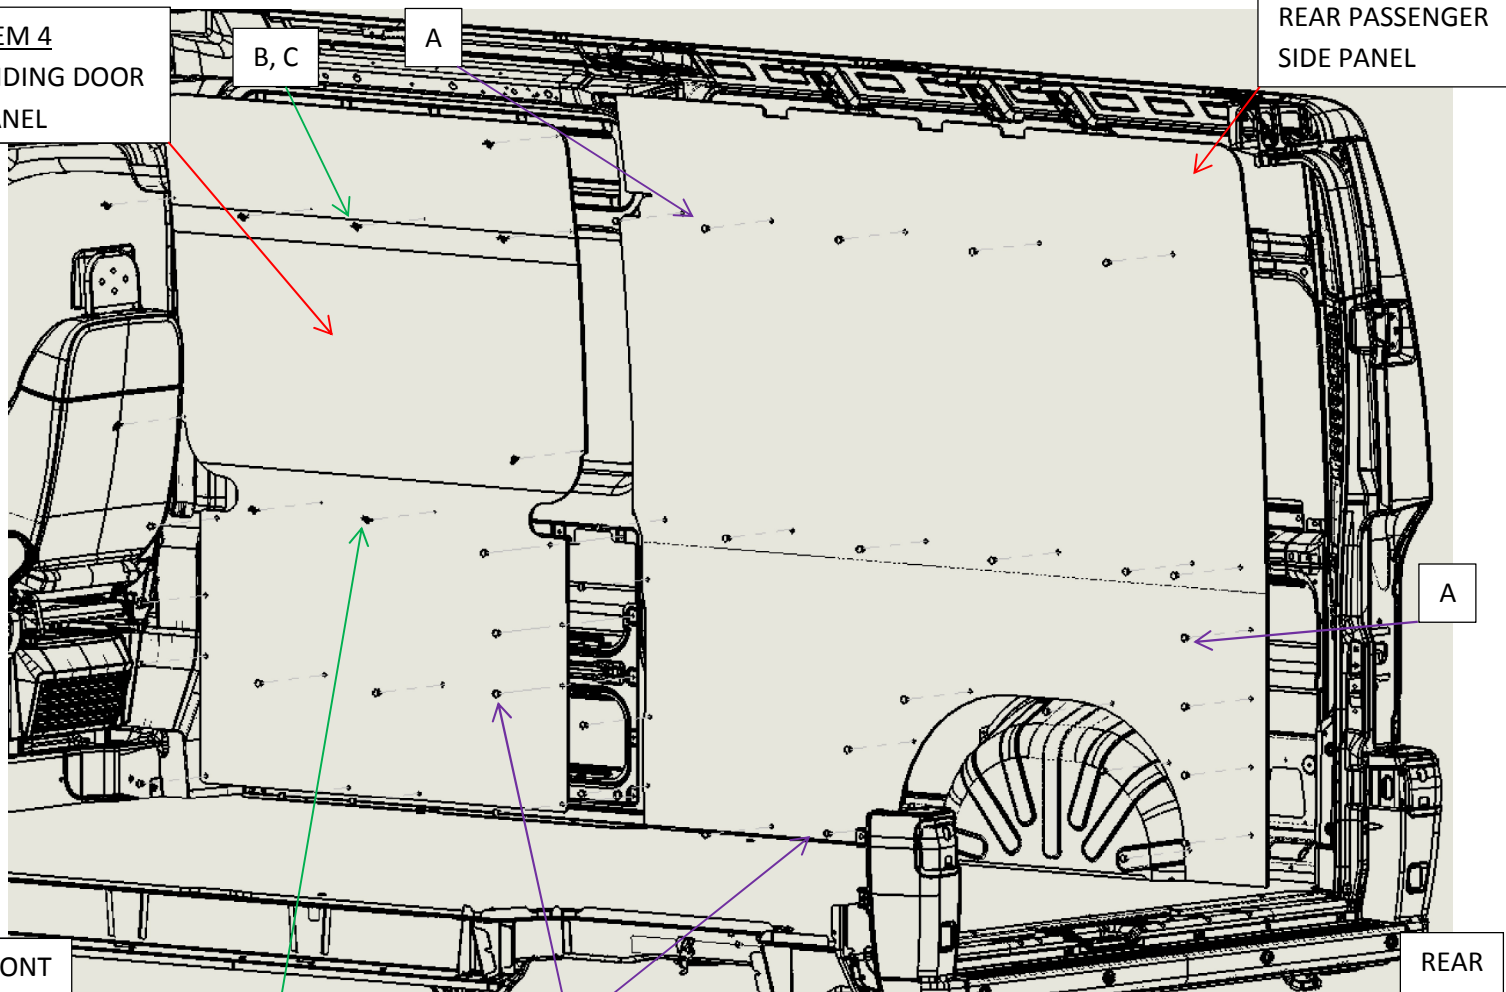

### **4:** Install Item 12, Rear Passenger Side Panel.

- Align wheel well edge of the panel with the feature on the vehicle; position the contour of the panel to the vehicle wall.
- Install hardware (A), in the holes provided, on the bottom of the panel first, working your way up the panel to the top.
- Install Item 4, Sliding Door Panel.
- Install hardware (A), in the holes.

### **5:** Install Item 4, Sliding Door Panel.

First remove OEM bottom panel.

Note: Sliding door must be closed to install panel;

- Insert panel into the sliding door sill cavity, align holes at the bottom half of the panel to the one on the door and insert hardware (A) in all of the holes provided.
- Install hardware (B, C) in the holes provided in the middle to the top part of the panel; make sure the panel does not interfere with the door seal..

