



## PROMASTER CITY WALL LINERS


### INSTALLATION INSTRUCTIONS




#### NOTES:

1. Before commencing, remove all wall liners and “D” Rings already installed in the vehicle.
2. Consult layout PDF and compare vehicle layout
3. Prepare hardware shown below and have them ready for installation.
4. Wall liners will be installed in the order shown in the instructions.
5. A drill with a Phillips driver is required to install hardware ( **C** ) #8 Screws, shown below.
6. Reinstall all “D” Rings once the wall liner kit installation is completed.

#### Hardware

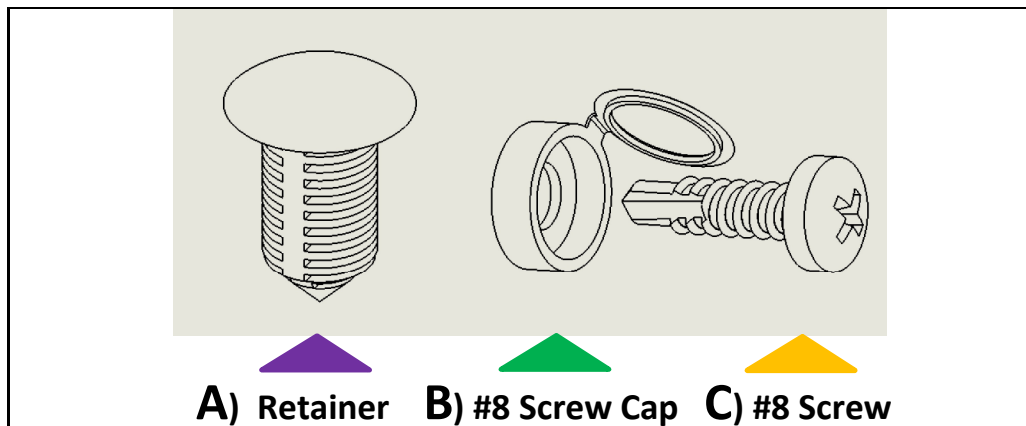

# PROMASTER CITY WALL LINERS

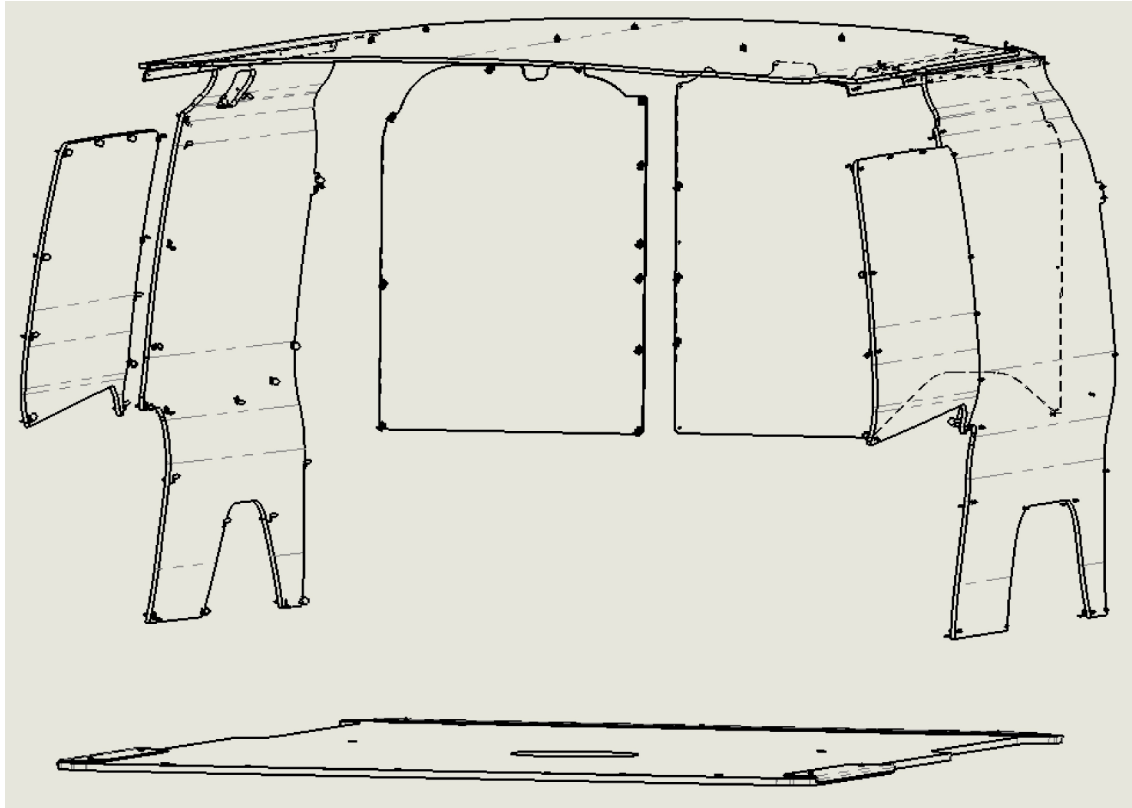

ITEM NO.	DESCRIPTION	QTY.
1	FLOOR - PROMASTER CITY	1
2	GREY SLIDING DOOR PANEL DRIVER SIDE PROMASTER CITY	1
3	GREY SLIDING DOOR PANEL PASSENGER SIDE PROMASTER CITY	1
4	SCREW CAP	84
5	SCREW - PHIL. PAN HD #8X.75 SELF DRILLING	123
6	GREY REAR PANEL DRIVER SIDE PROMASTER CITY	1
7	CEILING PANEL CDN OEM PARTITION PROMASTER CITY	1
8	GREY DOOR PANEL DRIVER SIDE PROMASTER CITY	1
9	GREY DOOR PANEL PASSENGER SIDE PROMASTER CITY	1
10	SILL- FLOOR- REAR DOOR PROMASTER CITY	1
11	SILL- FLOOR- SIDE DOOR PROMASTER CITY	2
12	GREY REAR PANEL PASSENGER SIDE PROMASTER CITY	1
13	CEILING SILL "B" REAR DRIVER SIDE PROMASTER CITY	1
14	CEILING SILL "A" REAR PASSENGER SIDE PROMASTER CITY	1
15	JOINER PLATE- CEILING SILL	2
16	CEILING SILL "A-1" FRONT PASSENGER SIDE PROMASTER CITY	1
17	CEILING SILL "B-1" FRONT DRIVER SIDE PROMASTER CITY	1
18	RETAINER- BLACK NYLON	6

## Note:

Model may differ depending if the vehicle purchased came with an OEM partition or not and if it is a US or Canadian model.

## Driver Side Wall Liner Installation

### ITEM 6

#### REAR DRIVERS SIDE PANEL

TAB\*

### ITEM 2


#### SLIDING DOOR

#### PANEL


#### DRIVERS SIDE

REAR

FRONT

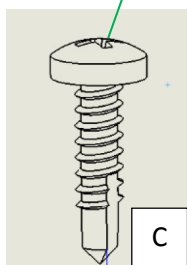


C

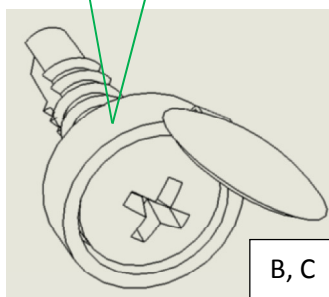

B, C

### Installation completed

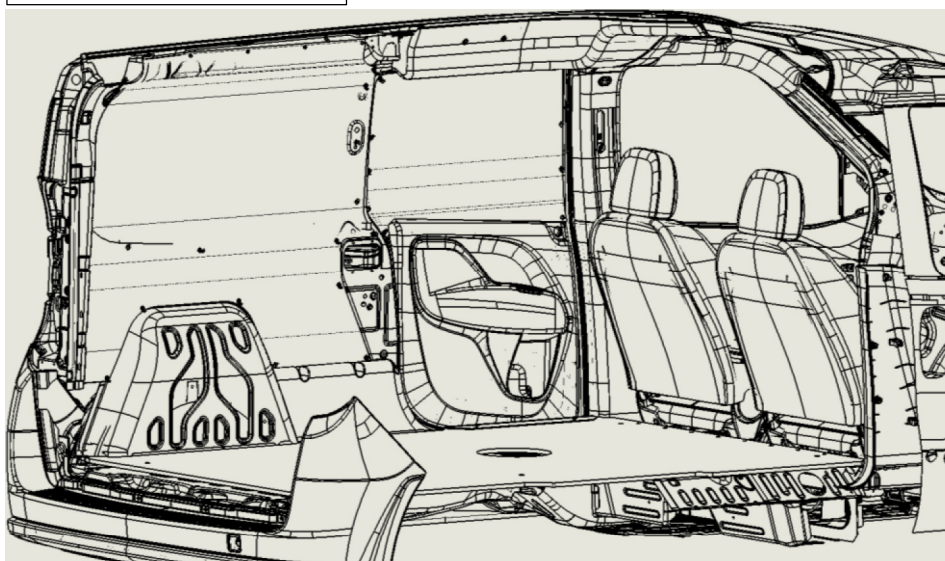

**1:** Install Item 2, Sliding door Driver Side Panel.

- Align notch and edge of panel with the feature on the vehicle driver side sliding door then align opposite side of panel edge with the contour features.
- Install hardware (B,C), in the holes provided, on the bottom of the panel first, working your way up the panel to the top.

**2:** Install Item 6, Rear Driver Side Panels.



- Align wheel well edge of the panel with the feature on the vehicle; position the contour of the panel to the vehicle wall.
- Install hardware (C), in the holes provided at the top of the panel only then Install hardware (B,C), on the bottom of the panel, working your way up the panel up each side.
- \* Push the rear middle section of the panel into the wall cavity the Install hardware (B,C) into the tab holes provided, identified on the top picture left side.



## Back Door Wall Liner Installation

ITEM 9  
REAR DOOR  
PASSENGER SIDE  
PANEL

ITEM 8  
REAR DOOR  
DRIVERS SIDE  
PANEL

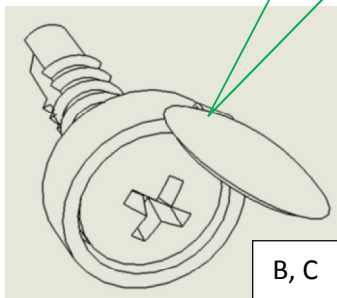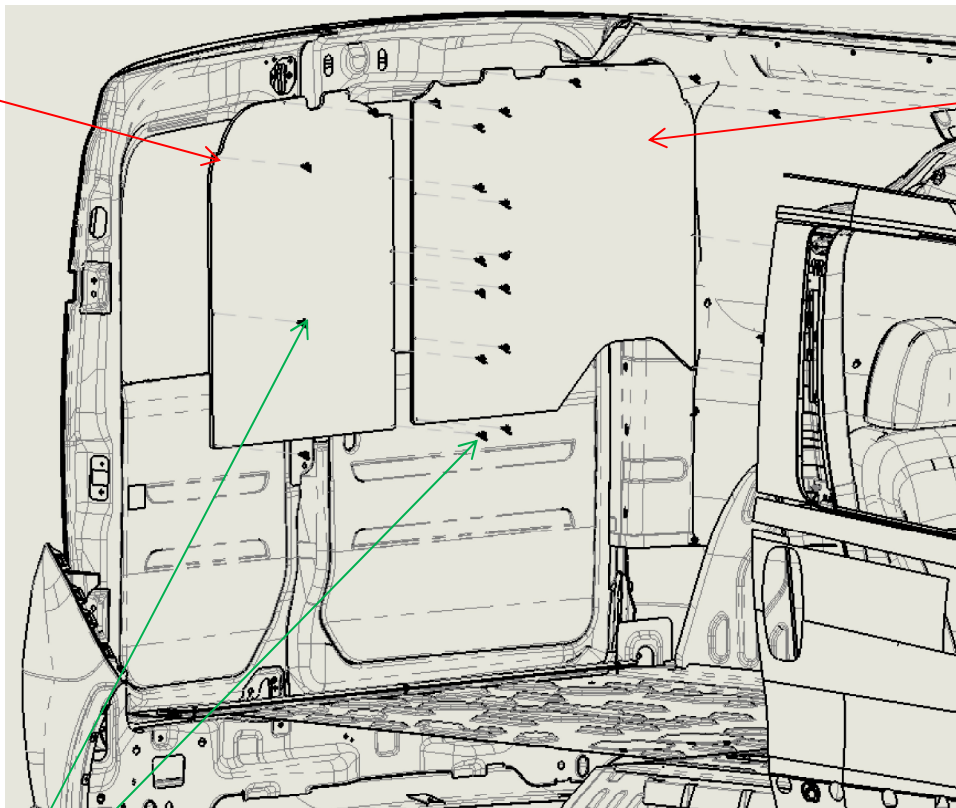


**3:** Install Item 8 and 9, Rear door panels,

**Note:** Rear doors must be closed when installing door panels.

- Align the panels with the upper door contours, do not mount tight against the door seals.
- Install hardware (B, C) on the top of the panel first, working your way down the panel to the bottom.

Installation completed

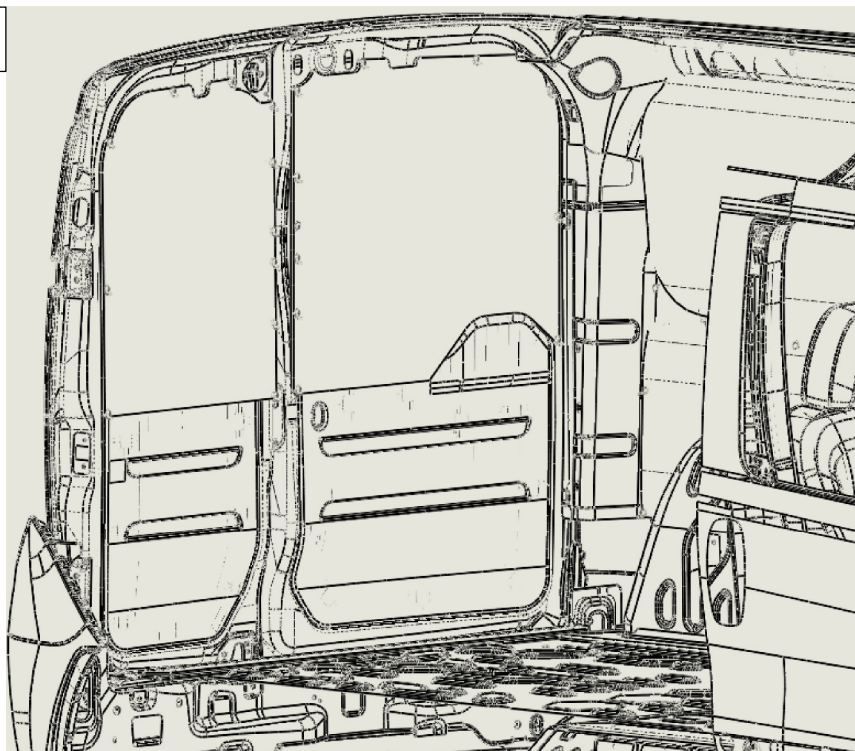

## Passenger Side Wall Liner Installation

ITEM 3  
SLIDING DOOR  
PANEL


B, C

C

ITEM 12  
REAR PASSENGER  
SIDE PANEL

FRONT

REAR

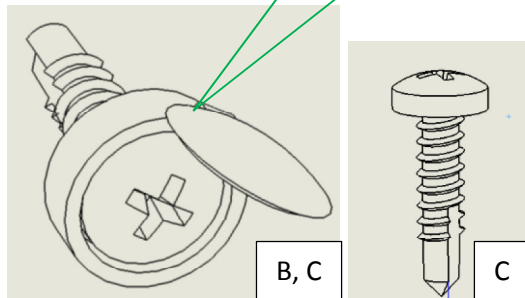

**4:** Install Item 12, Rear Passenger Side Panel.

- Align wheel well edge of the panel with the feature on the vehicle as well as the light opening; position the contour of the panel to the vehicle wall.
- Install hardware (C), in the holes provided at the top of the panel only then Install hardware (B,C), on the bottom of the panel, working your way up the panel up each side.
- \* Push the rear middle section of the panel into the wall cavity the Install hardware (B,C) into the tab holes provided, identified on the top picture left side.

**5:** Install Item 3, Sliding Door Panel.

First remove OEM bottom panel.

Note: Sliding door must be closed to install panel;

- Align notch and edge of panel with the feature on the vehicle driver side sliding door then align opposite side of panel edge with the contour features.
- Install hardware (B,C), in the holes provided, on the bottom of the panel first, working your way up the panel to the top.

Installation completed

