



GM REGULAR SAVANA/EXPRESS

WALL LINER INSTALLATION


INSTRUCTIONS



NOTES:

1. Before commencing, remove all wall liners and "D" Rings already installed in the vehicle.
2. Consult layout PDF and compare vehicle layout
3. Prepare hardware shown below and have them ready for installation.
4. Wall liners will be installed in the order shown in the instructions.
5. A drill with a Phillips driver is required to install hardware (**C**) #8 Screws, shown below.
6. Reinstall all "D" Rings once the wall liner kit installation is completed.

Hardware

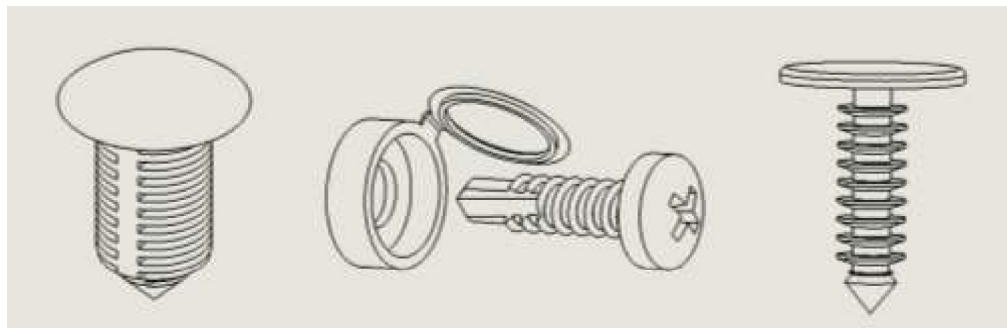


A) 3/8" Retainer

B) #8 Screw Cap

C) #8 Screw

D) 1/4" Retainer

GM REGULAR SAVANA/EXPRESS ROOF WALL LINERS

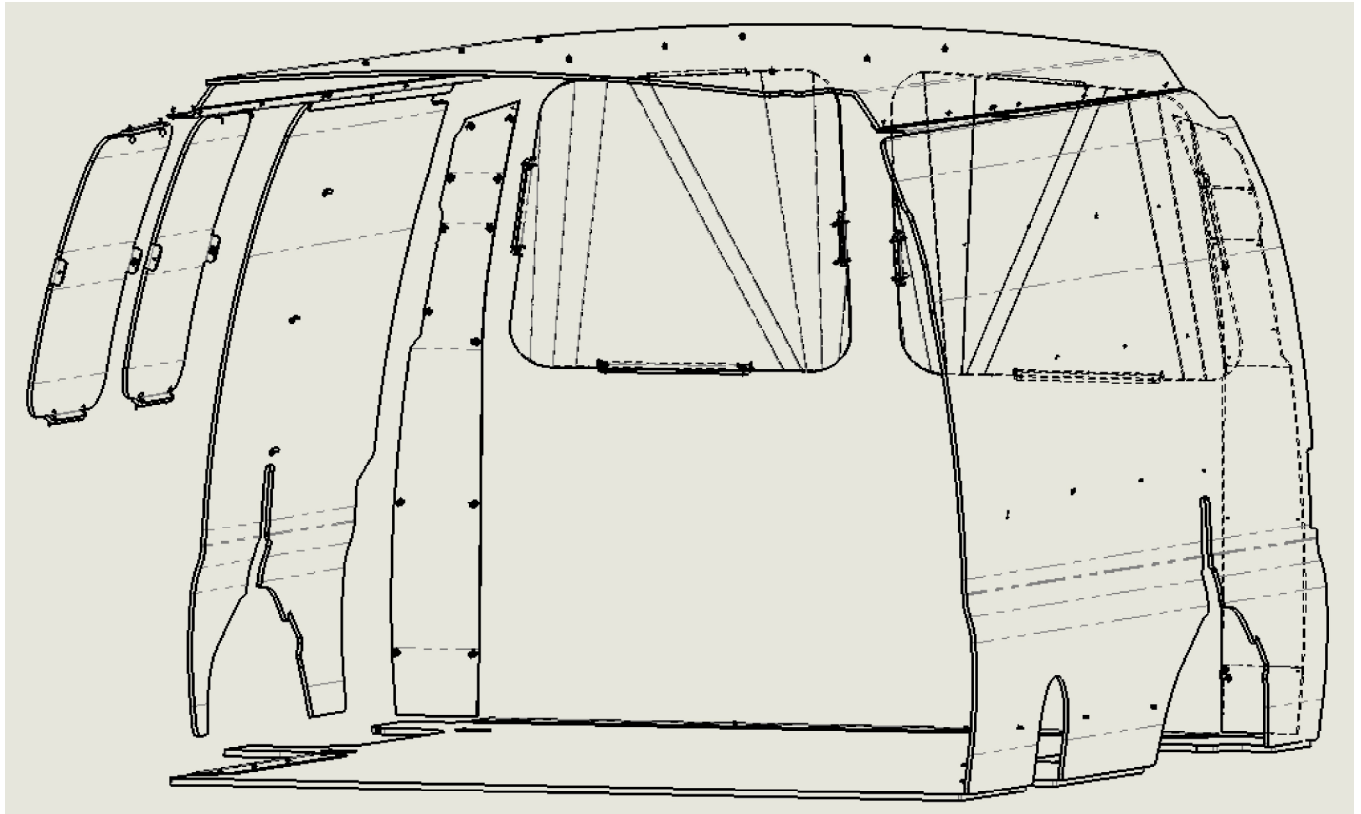

ITEM NO.	DESCRIPTION	QTY.
1	GREY CEILING PANEL STD. SAVANA - EXPRESS SIDE BARN DOORS	1
2	GREY DRIVER SIDE PANEL GM SAVANA/EXPRESS	1
3	GREY PASSENGER SIDE PANEL GM SAVANA/EXPRESS	1
4	CEILING SILL A - GM SAVANA/EXPRESS	1
5	SILL B - GM SAVANA/EXPRESS	1
6	CEILING SILL C - GM SAVANA/EXPRESS	1
7	CEILING SILL A-1 - GM SAVANA/EXPRESS	1
8	FLOOR - REGULAR GM SAVANA/EXPRESS	1
9	REAR FLOOR SILL GM SAVANA/EXPRESS	1
10	SCREW - PHIL. PAN HD #8X.75 SELF DRILLING	106
11	SCREW CAP	74
12	GREY DRIVER SIDE REAR DOOR PILAR PANEL - GM SAVANA-EXPRESS	1
13	GREY PASSENGER SIDE REAR DOOR PILAR PANEL - GM SAVANA-EXPRESS	1
14	3/8" RETAINER- BLACK NYLON	9
15	FLOOR SILL SIDE DOOR NISSAN NV	1
16	GREY REAR PASSENGER SIDE WINDOW PANEL GM SAVANA-EXPRESS	1
17	GREY REAR DRIVER SIDE WINDOW PANEL GM SAVANA - EXPRESS	1
18	GREY SIDE BARN DOOR PANEL CARGO SIDE GM SAVANA/EXPRESS	1
19	GREY SIDE BARN DOOR PANEL CABIN SIDE GM SAVANA/EXPRESS	1

Note:



Model may differ depending on the vehicle purchased.

Driver Side Wall Liner Installation

ITEM 2
DRIVERS
SIDE PANEL

FRONT


REAR

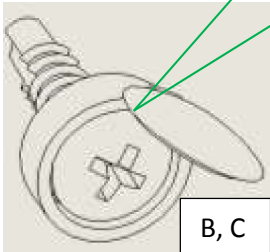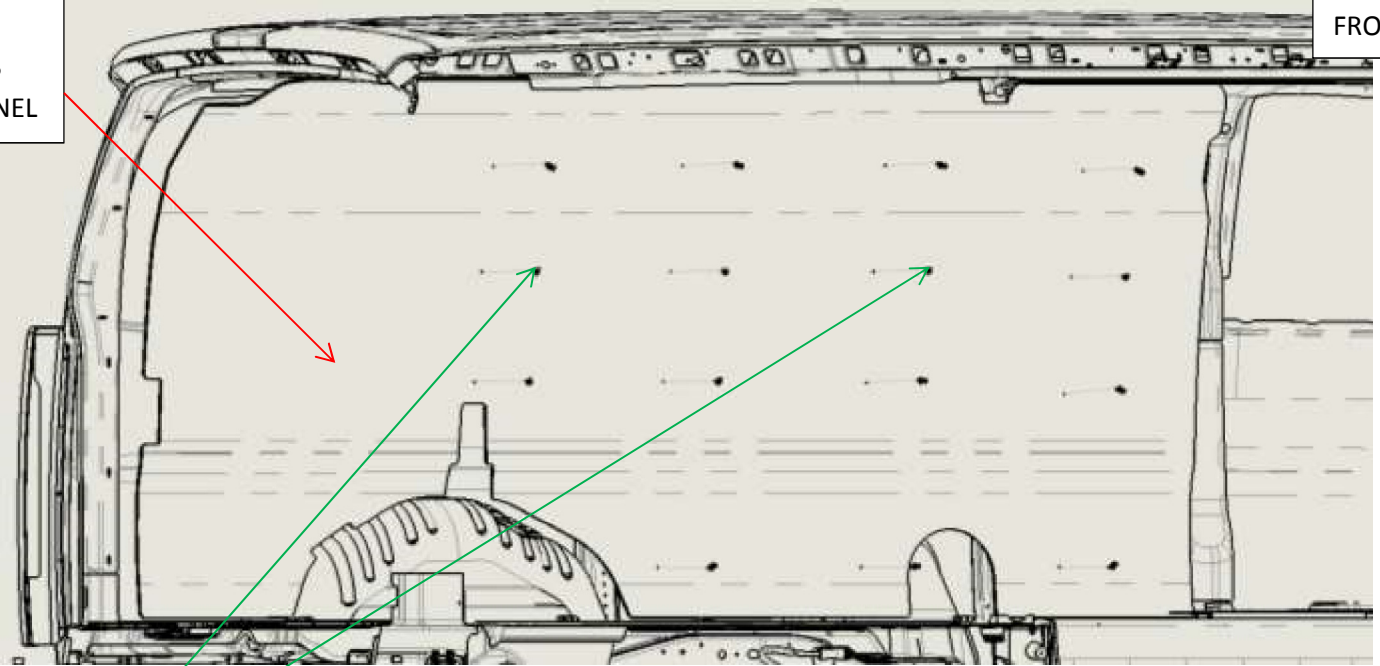

1: Install Item 2, Driver Side Panels.

- Align wheel well edge of the panel with the feature on the vehicle; position the contour of the panel to the vehicle wall.
- Install hardware (B,C) in the holes provided, on the TOP of the panel first, working your way down the panel to the BOTTOM.



Installation completed

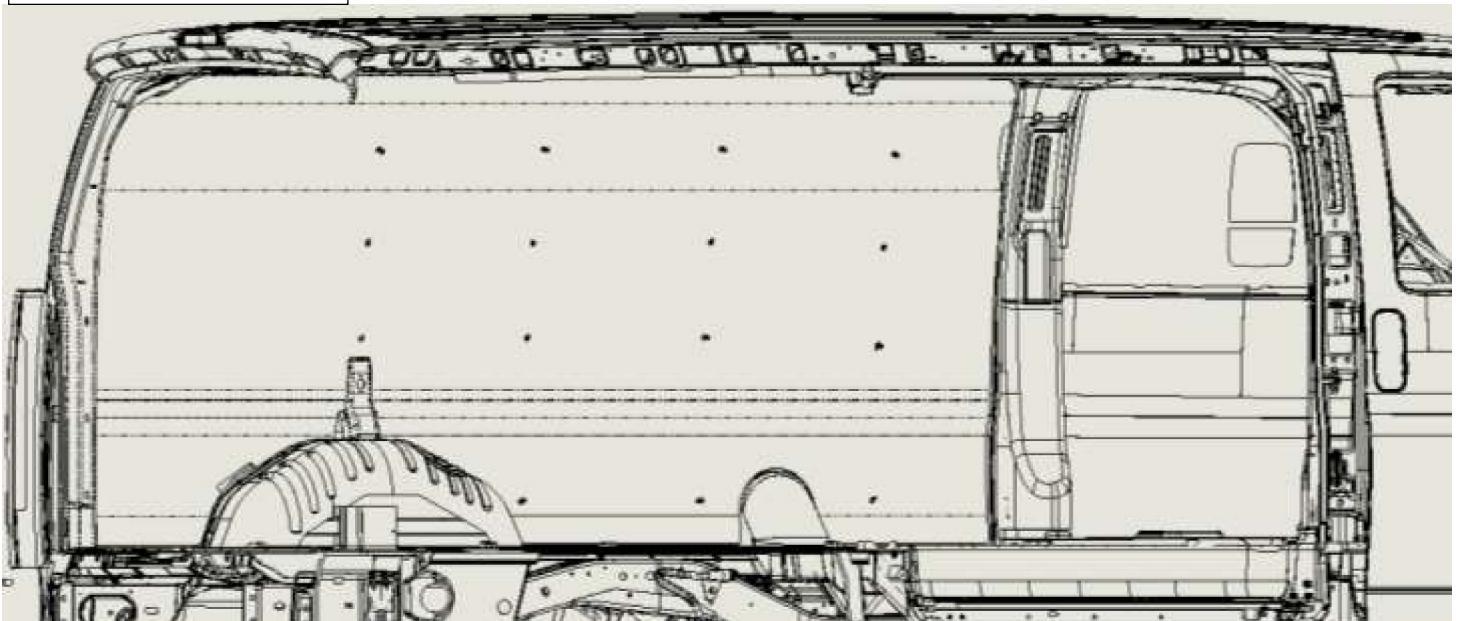

Back Door Wall Liner Installation

ITEM 16
REAR DOOR
PASSENGER SIDE
WINDOW PANEL

ITEM 17
REAR DOOR
DRIVERS SIDE
WINDOW PANEL

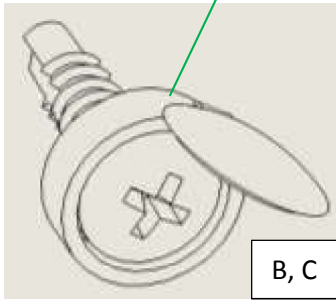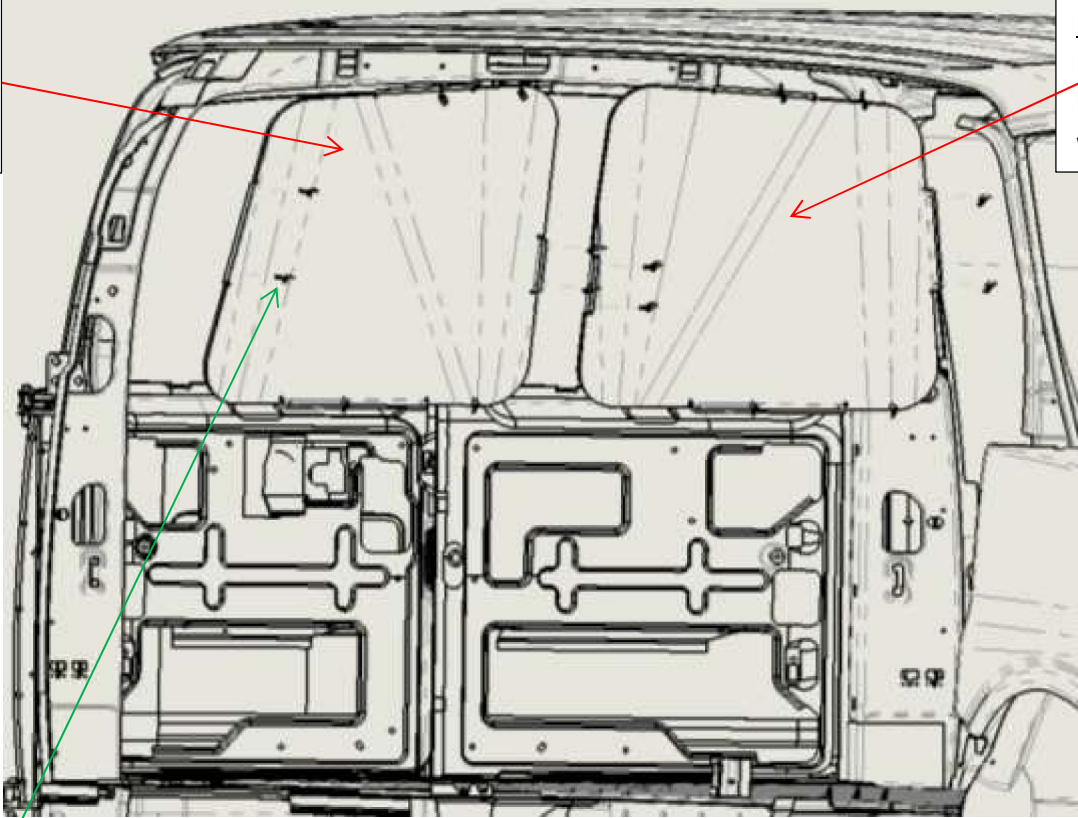


B, C

2: Install Item 16 and 17, Rear door window panels,

Note: Rear doors must be closed when installing door panels.

- Align the panels with the rear doors window contours; pre bend the tabs on all four sides of the panels and push the panel in the door window cavity.
- In the middle section push the panel towards the doors until it sits in the door cavity and install the hardware. Install hardware (B, C) on the bottom of the panel first, working your way up the panel to the top.



Installation completed

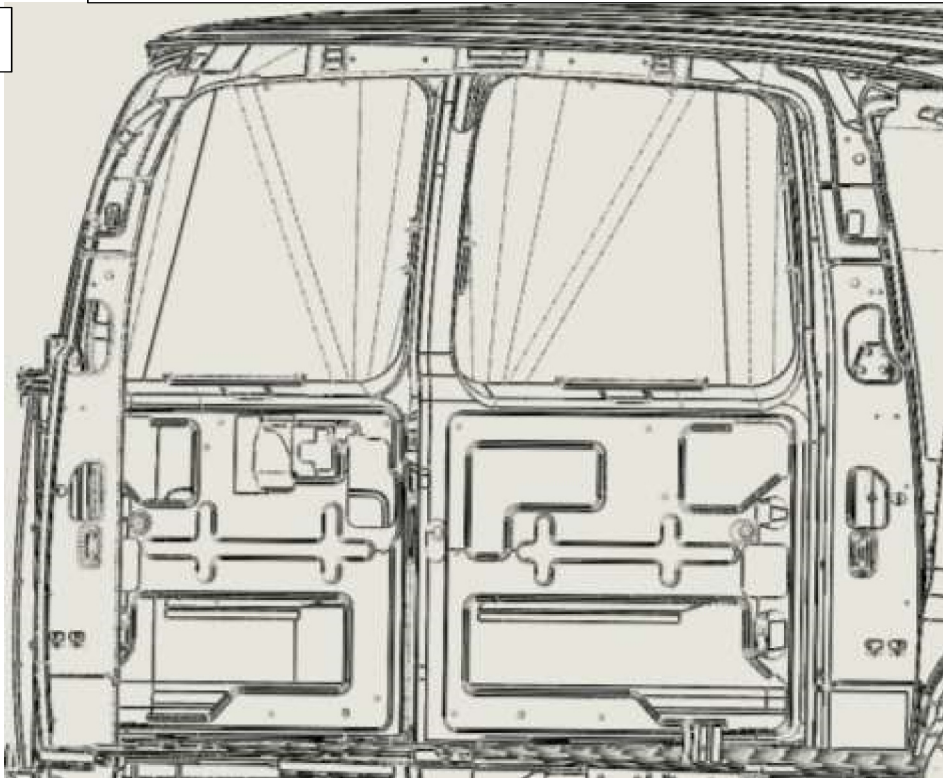

Rear Door Pilar Liner Installation

ITEM 13
REAR DOOR
PASSENGER SIDE
PILAR PANEL


ITEM 12
REAR DOOR
DRIVERS SIDE
PILAR PANEL

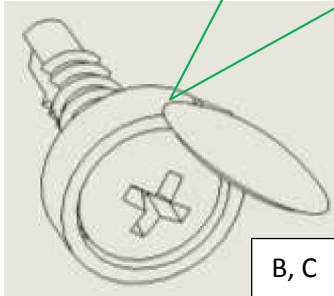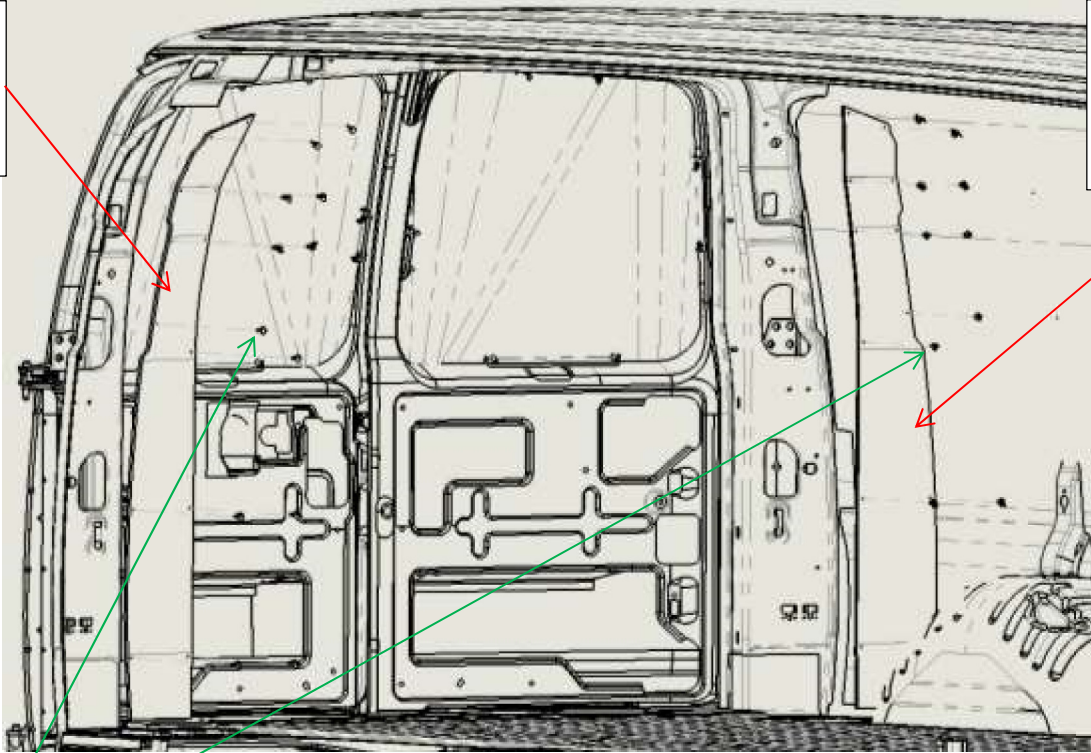

2: Install Item 12 and 13, Rear Door Pilar Panels,

- Align the panels with the rear doors Pilar contours;
- Install hardware (B, C) on the bottom of the panel first, working your way up the panel to the top.


Installation completed

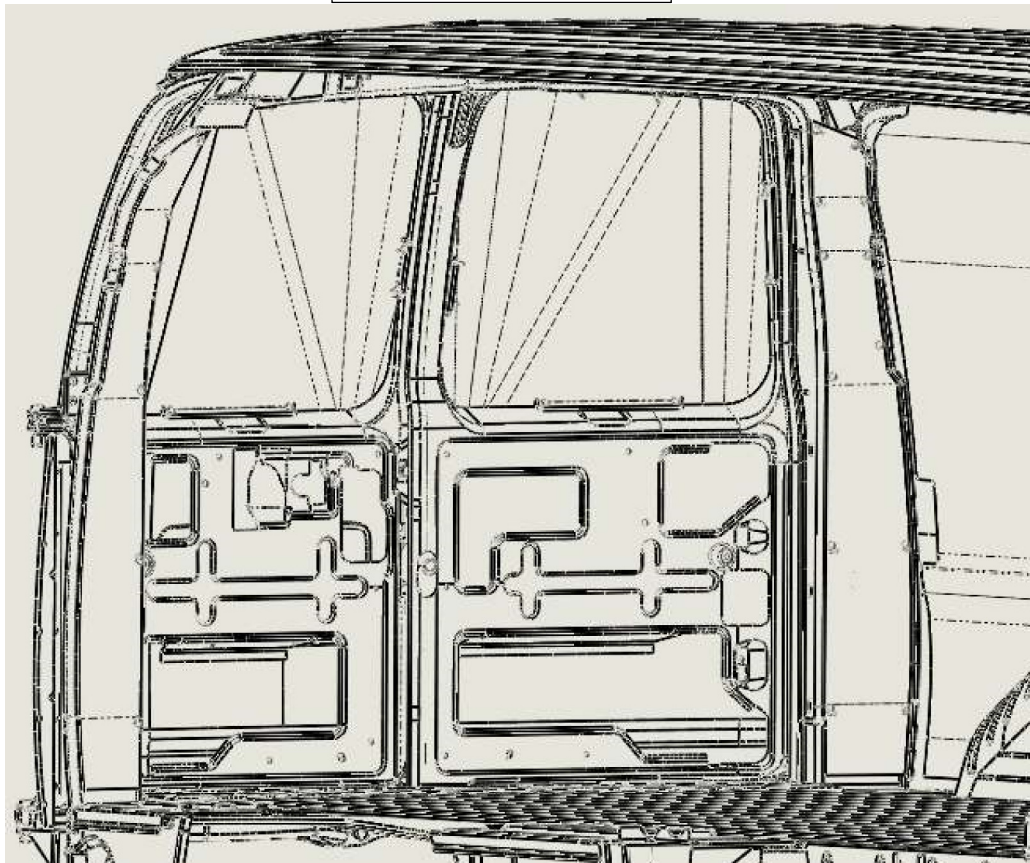


Sliding Door Wall Liner Installation

ITEM 18
SLIDING
DOOR
PANEL

FRONT

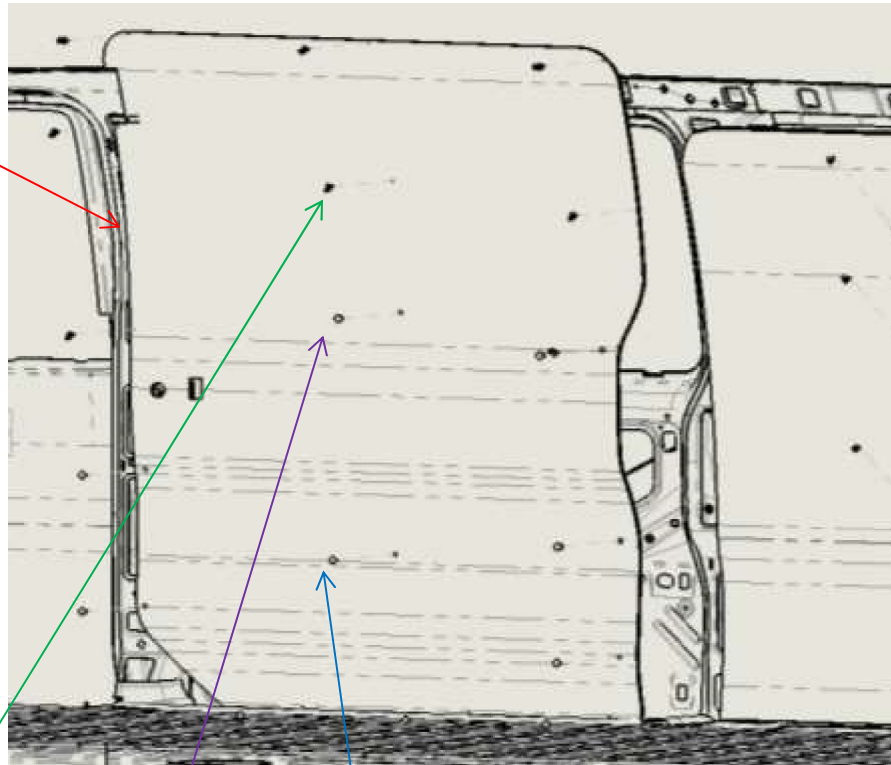


REAR

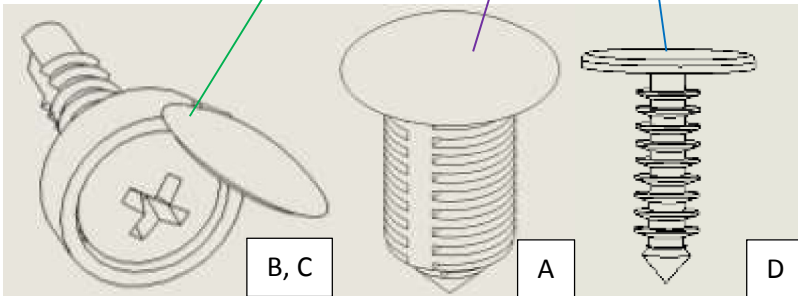

Installation completed

- **3: Install Item 18, Sliding Door Panel.**
First remove OEM bottom panel.
Note: Sliding door must be closed to install panel;
- Insert panel into the sliding door sill cavity, align holes at the bottom panel to the one on the door and insert hardware (A), 3/8 Retainer, in all of the holes 3/8 holes provided.
- Install hardware (D), 1/4 Retainers, in all of the 1/4 holes provided on the bottom half of the panel.
- Install hardware (B, C) first in the holes provided in the middle part of the upper section of the panel

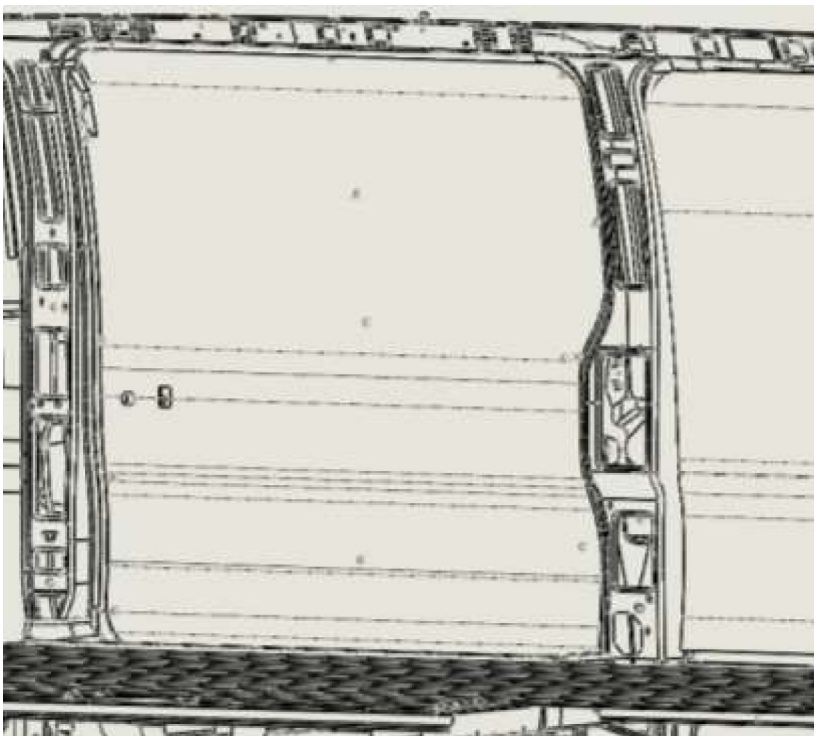

Passenger Side and Barn Door Wall Liner Installation



ITEM 19
SIDE BARN
DOOR
WINDOW
PANEL
CABIN SIDE

ITEM 18
SIDE BARN
DOOR
WINDOW
PANEL
CARGO SIDE

FRONT

B, C

REAR

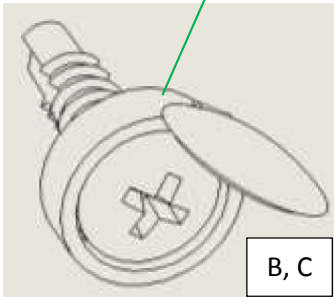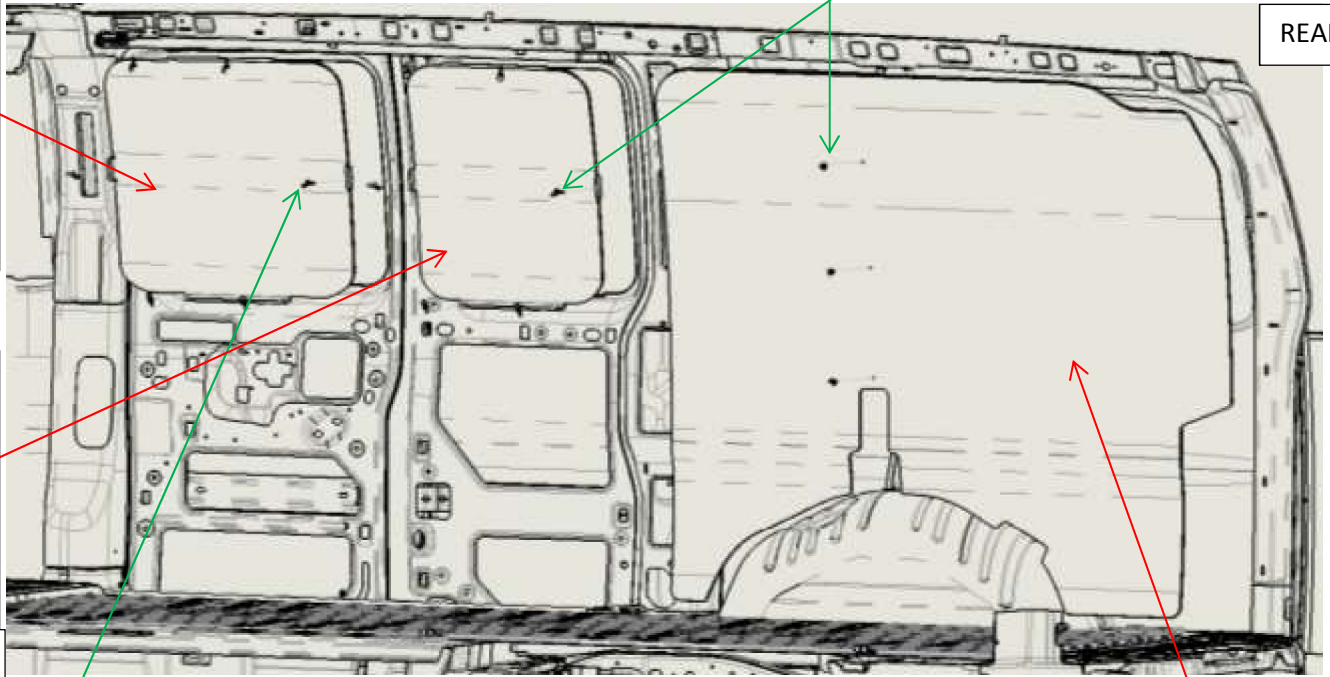

B, C

ITEM 3 PASSENGER SIDE
PANEL

4: Install Item 3, Passenger Side Panel.

- Align wheel well edge of the panel with the feature on the vehicle; position the contour of the panel to the vehicle wall.
- Install hardware (B,C), in the holes provided, on the bottom of the panel first, working your way up the panel to the top.
- **Install Item 18, 19, Side Barn Door Window Panels.**
- Align the panels with the side doors window contours; pre bend the tabs on all four sides of the panels and push the panel in the door window cavity.
- In the middle section push the panel towards the doors until it sits in the door cavity and install the hardware. Install hardware (B, C) on the bottom of the panel first, working your way up the panel to the top.

Installation completed

