



## SPRINTER 144" WB HIGH ROOF WALL LINERS


### INSTALLATION INSTRUCTIONS



#### NOTES:


1. Before commencing, remove all wall liners and "D" Rings already installed in the vehicle.
2. Consult layout PDF and compare vehicle layout
3. Prepare hardware shown below and have them ready for installation.
4. Wall liners will be installed in the order shown in the instructions.
5. A drill with a Phillips driver is required to install hardware ( **C** ) #8 Screws, shown below.
6. Reinstall all "D" Rings once the wall liner kit installation is completed.

#### Hardware

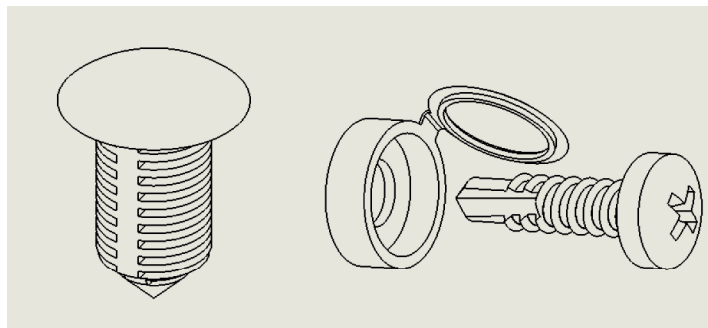

**A) Retainer**   **B) #8 Screw Cap**   **C) #8 Screw**

# SPRINTER 144" WB HIGH ROOF WALL LINERS

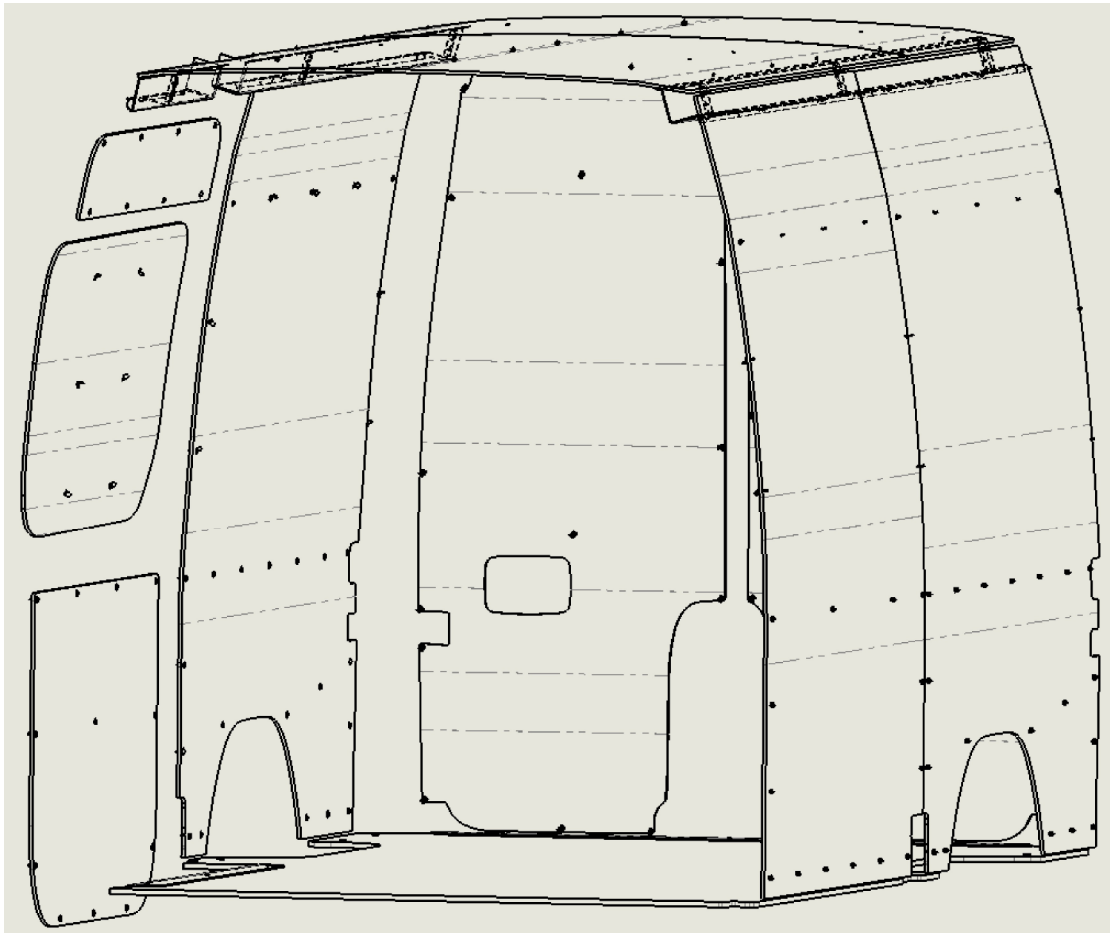

ITEM NO.	DESCRIPTION	QTY.
1	GREY UPPER PANEL SLIDING DOOR SPRINTER HR	1
2	GREY MIDDLE DOOR PANEL SLIDING GOOR SPRINTER HR	1
3	GREY BOTTOM PANEL SLIDING DOOR SPRINTER HR	1
4	RETAINER- BLACK NYLON	92
5	SCREW CAP	58
6	SCREW - PHIL. PAN HD #8X.75 SELF DRILLING	116
7	GREY FRONT A DRIVER SIDE PANEL SPRINTER 144" WB HR	1
8	GREY REAR DRIVER SIDE PANEL SPRINTER 144" WB LR	1
9	GREY REAR PASSENGER SIDE PANEL SPRINTER 144 WB HR	1
10	GREY CEILING FRONT PANEL SPRINTER 144" WB HR	1
11	GREY CEILING REAR PANEL SPRINTER 144" WB HR	1
12	GREY REAR DOOR PANEL DRIVER SIDE SPRINTER HR	1
13	GREY REAR DOOR PANEL PASSENGER SIDE SPRINTER HR	1
14	SILL-B SPRINTER 144" WB HR	1
15	SILL-D SPRINTER 144" WB HR	1
16	SILL-D-1 SPRINTER 144" WB HR	1
17	SILL-E SPRINTER 144" WB HR	1
18	SILL-F SPRINTER 144" WB HR	1
19	SILL-A-1 SPRINTER 144" WB HR	1
20	SILL-A SPRINTER 144" WB HR	1
21	SILL-C SPRINTER 170" EXT WB HR	1
22	SILL-C-1 SPRINTER 144 WB HR	1
23	FLOOR - SPRINTER 144"	1
24	SILL - FLOOR- REAR - SPRINTER	1
25	SILL - FLOOR - SIDE DOOR - SPRINTER	1
26	TOP SILL JOINER PLATE SPRINTER 144" WB HR	6

Note: Model may differ depending if the vehicle purchased came with an OEM partition or not.

## Driver Side Wall Liner Installation

### ITEM 8


REAR DRIVERS  
SIDE PANEL

### ITEM 7


FRONT  
DRIVERS SIDE  
PANEL

REAR

FRONT

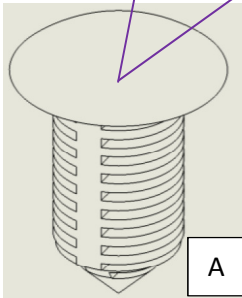

A

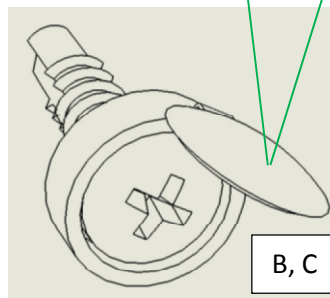

B, C

### Installation completed

Note: If a rear view camera option is installed, bend and

break downwards at the break lines the top section of all the wall panels so they fit under the plastic tubing. This can also be cut off if desired.


**1:** Install Item 7, Front Driver Side Panel.

- Align notch and edge of panel with the feature on the vehicle driver side front then align opposite side of panel edge with the contour features.
- Install hardware (A) and (B,C), in the holes provided, on the bottom of the panel first, working your way up the panel to the top.

**2:** Install Item 8, Rear Driver Side Panels.

- Align wheel well edge of the panel with the feature on the vehicle; position the contour of the panel to the vehicle wall.
- Install hardware (A) and (B,C), in the holes provided, on the bottom of the panel first, working your way up the panel to the top.



**NOTE: DO NOT INSTALL HARDWARE IN THE HOLES AT THE TOP OF THE PANELS, THESE ARE USED FOR THE SILL INSTALLATION**

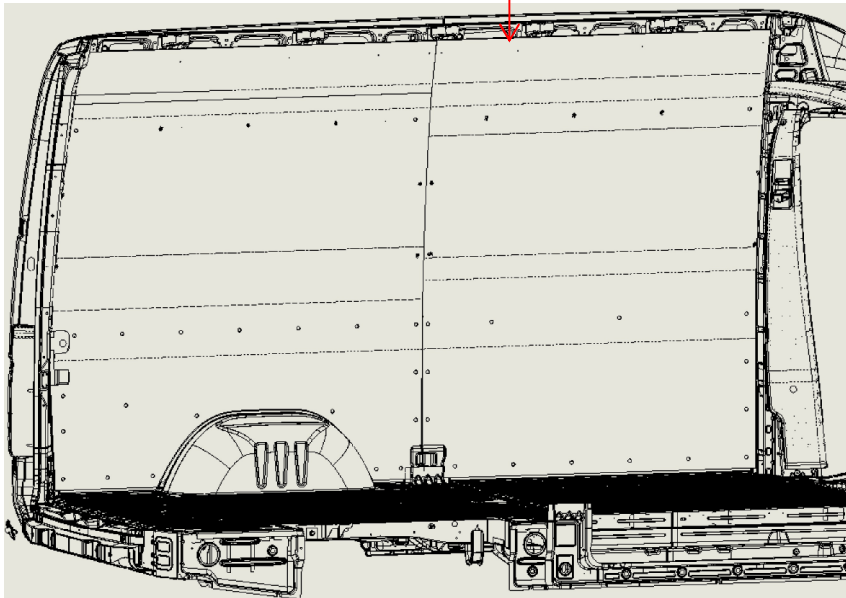

## Back Door Wall Liner Installation

ITEM 13  
REAR DOOR  
PASSENGER SIDE  
PANEL

ITEM 12  
REAR DOOR  
DRIVERS SIDE  
PANEL

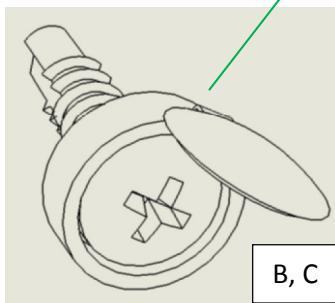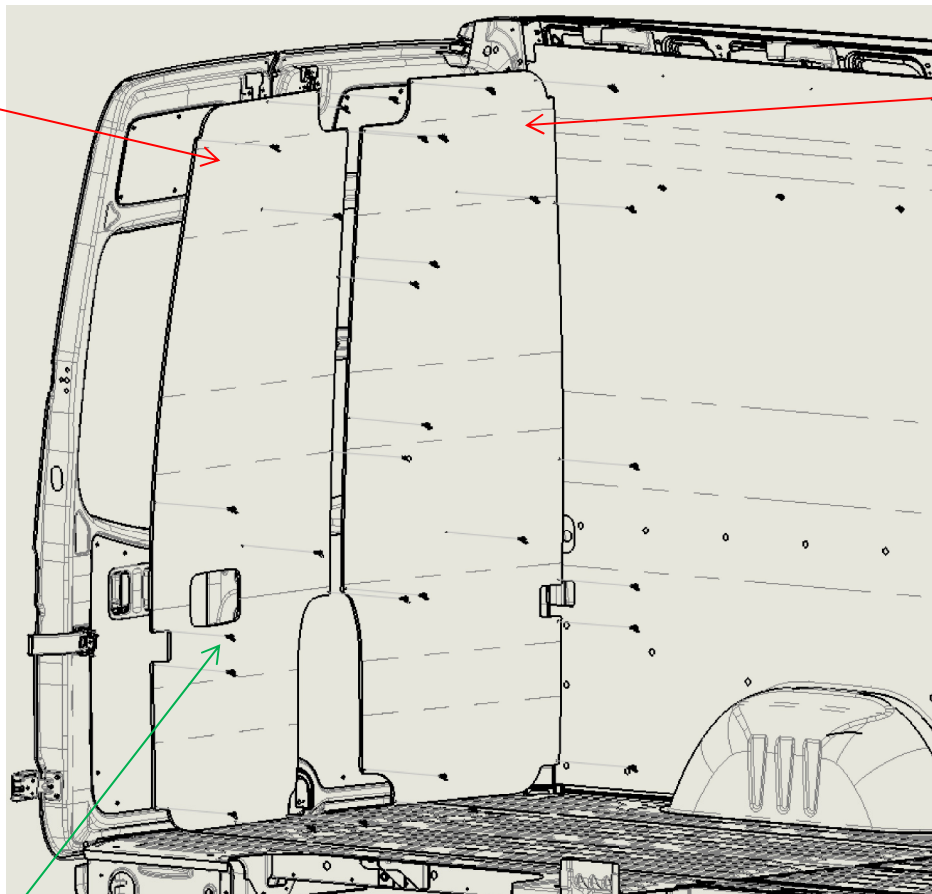


B, C

**3:** Install Item 12 and 13, Rear door panels,

**Note:** Rear doors must be closed when installing door panels.

- Align the panels with the door contour; **do not mount tight against the door seals.**
- Install hardware (B, C) on the bottom of the panel first, working your way up the panel to the top.

Installation completed

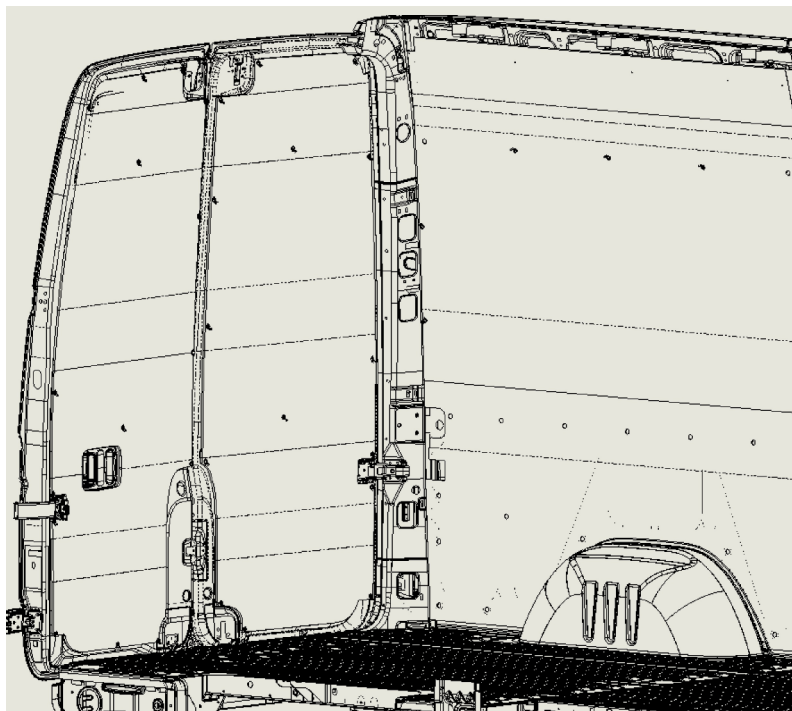



## Passenger Side Wall Liner Installation

**ITEM 1**  
UPPER  
SLIDING DOOR  
PANEL

**ITEM 2**  
MIDDLE  
SLIDING DOOR  
PANEL

**ITEM 3**  
BOTTOM  
SLIDING DOOR  
PANEL

**\*DOOR RIBS**

B, C



A

**ITEM 9** REAR PASSENGER  
SIDE PANEL

REAR

FRONT


A

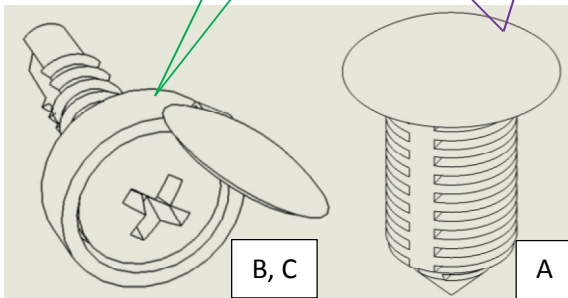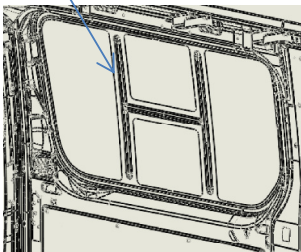

**NOTE: DO NOT INSTALL HARDWARE IN THE HOLES AT THE TOP OF THE PANES; THESE ARE USED FOR THE SILL INTALLATION.**

**\*FOR ITEM 2, MIDDLE SLIDING DOOR PANEL, ALIGN HOLES IN THE PANEL TO THE RIBS OF THE DOOR TO ENSURE PROPER SCREW INSTALLATION.**

**Installation completed**

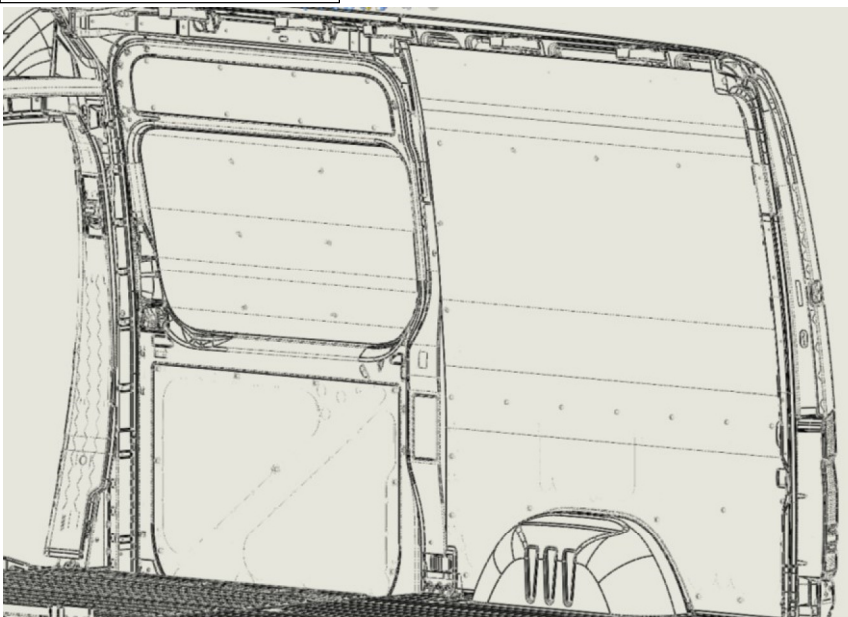

**4:** Install Item 9, Rear Passenger Side Panel.

- Align wheel well edge of the panel with the feature on the vehicle; position the contour of the panel to the vehicle wall.
- Install hardware (A), in the holes provided, on the bottom of the panel first, working your way up the panel to the top. Install hardware (B, C) in the holes provided in the middle to the top part of the panel

**5:** Install Item 1, 2, 3, Sliding Door Panel.

First remove OEM bottom panel.  
Note: Sliding door must be closed to install panel;

- Item 1 and 3, Insert panel into the sliding door sill cavity, align holes at the bottom half of the panel to the one on the door and insert hardware (A) in all of the holes provided.
- Item 2, Install hardware (B, C) in the holes provided, make sure holes align with the center of the ribs in the door.