



## TRANSIT 130" MEDIUM ROOF WALL LINERS INSTALLATION INSTRUCTIONS

### NOTES:

1. Before commencing, remove all wall liners and "D" Rings already installed in the vehicle.
2. Consult layout PDF and compare vehicle layout allocated Legend.
3. Prepare hardware shown below and have them ready for installation.
4. Wall liners will be installed in the order shown in the instructions.
5. A drill with a Phillips driver is required to install ( **C**) #8 Screws) shown below.
6. Reinstall all "D" Rings once the wall liner kit installation is completed.

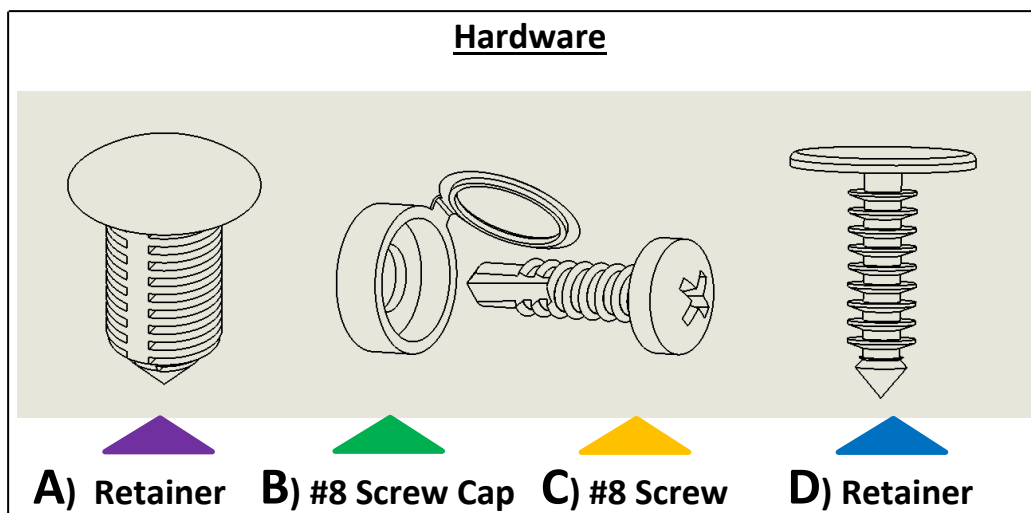

# TRANSIT 130" MEDIUM ROOF WALL LINERS

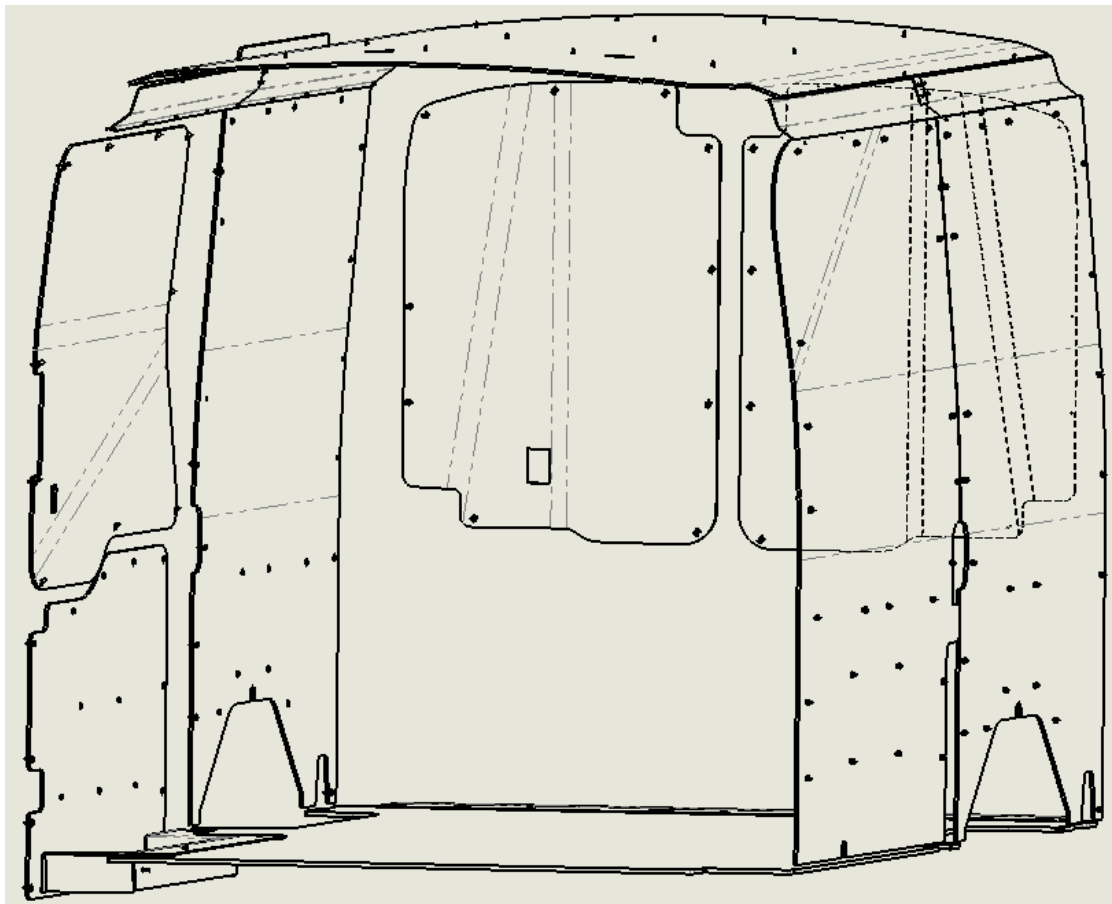

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	734-114-2613.MR	GREY FRONT PANEL DRIVER SIDE TRANSIT 130" MR	1
2	734-114-2613.MR	GREY REAR PANEL DRIVER SIDE TRANSIT 130" MR	1
3	734-114-2613.MR	GREY REAR PANEL PASSENGER SIDE 130" MR	1
4	735-114-2613.M	GREY CEILING FRONT PANEL TRANSIT 130" MR	1
5	SCREW	SCREW - PHIL. PAN HD #8X.75 SELF DRILLING	74
6	737-151-1010.M	CEILING SILL 1 TRANSIT 130" MR	2
7	737-151-1010.M	CEILING SILL 2 TRANSIT 130" MR	2
8	SCREW CAP	SCREW CAP	42
9	RETAINER	RETAINER- BLACK NYLON	91
10	706-151-1011	FLOOR SLIDING DOOR SILL 3 - TRANSIT	1
11	706-151-1011	FLOOR SLIDING SILL 1- TRANSIT	1
12	709-151-1011	FLOOR SLIDING DOOR SILL 2 - TRANSIT	1
13	708-151-1011	FLOOR REAR SILL- TRANSIT	1
14	RETAINER	RETAINER- BLACK NYLON 31163211	12
15	733-114-2613.MR	GREY REAR DOOR PANEL DRIVER SIDE TRANSIT 130" MR	1
16	733-114-2613.MR	GREY REAR DOOR PANEL PASSENGER SIDE TRANSIT 130" MR	1
17	733-114-2613.MR	GREY SIDE DOOR TOP PANEL TRANSIT 130" MR	1
18	733-114-2613.MR	GREY SIDE DOOR BOTTOM PANEL TRANSIT 130" MR	1
19	732-xxx-6641	FLOOR - TRANSIT 130" WB	1
20	737-151-1010.MR	SILL JOINER PLATE TRANSIT 130" MR	2

## Driver Side Wall Liner Installation

### ITEM 2


REAR DRIVERS  
SIDE PANEL

### ITEM 1

FRONT  
DRIVERS SIDE  
PANEL

REAR

FRONT

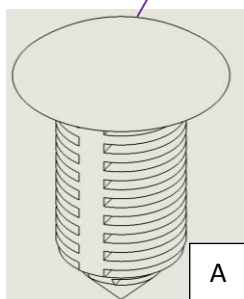

A


#### 1: Install Item 1, Front Driver Side Panel.

- Align notch and edge of panel with the feature on the vehicle driver side front then align opposite side of panel edge with the contour features.
- Install hardware (A), in the holes provided, on the bottom of the panel first, working your way up the panel to the top.

#### 2: Install Item 2, Rear Driver Side Panel.

- Align wheel well edge of the panel with the feature on the vehicle, position the contour of the panel to the vehicle wall.
- Install hardware (A), in the holes provided, on the bottom of the panel first, working your way up the panel to the top.



Installation completed

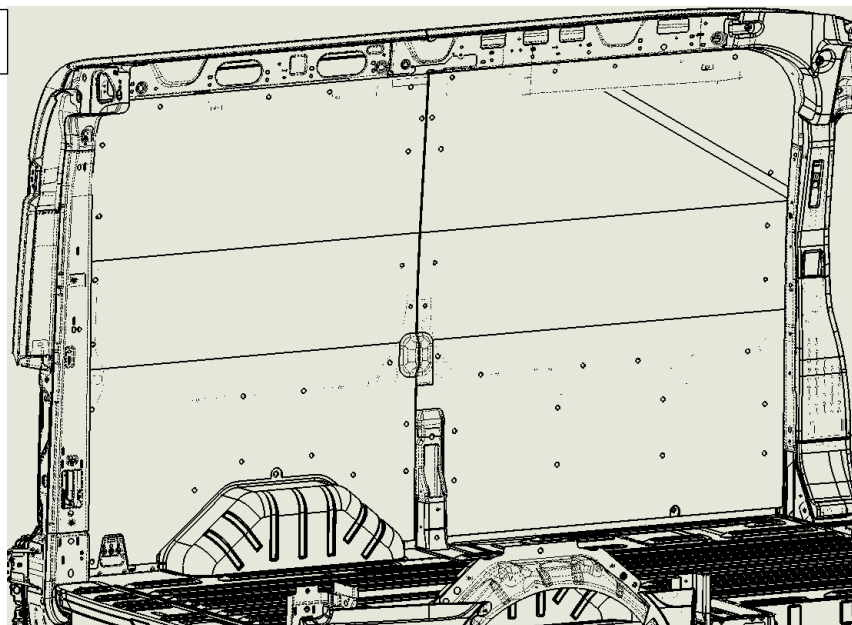

## Back Door Wall Liner Installation

**ITEM 16**  
UPPER DOOR  
PASSENGER SIDE  
PANEL

**ITEM 15**  
UPPER DOOR  
DRIVERS SIDE  
PANEL

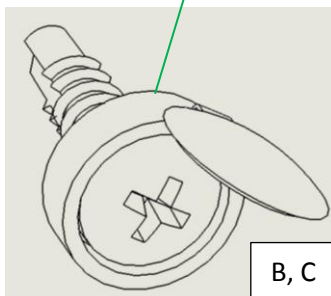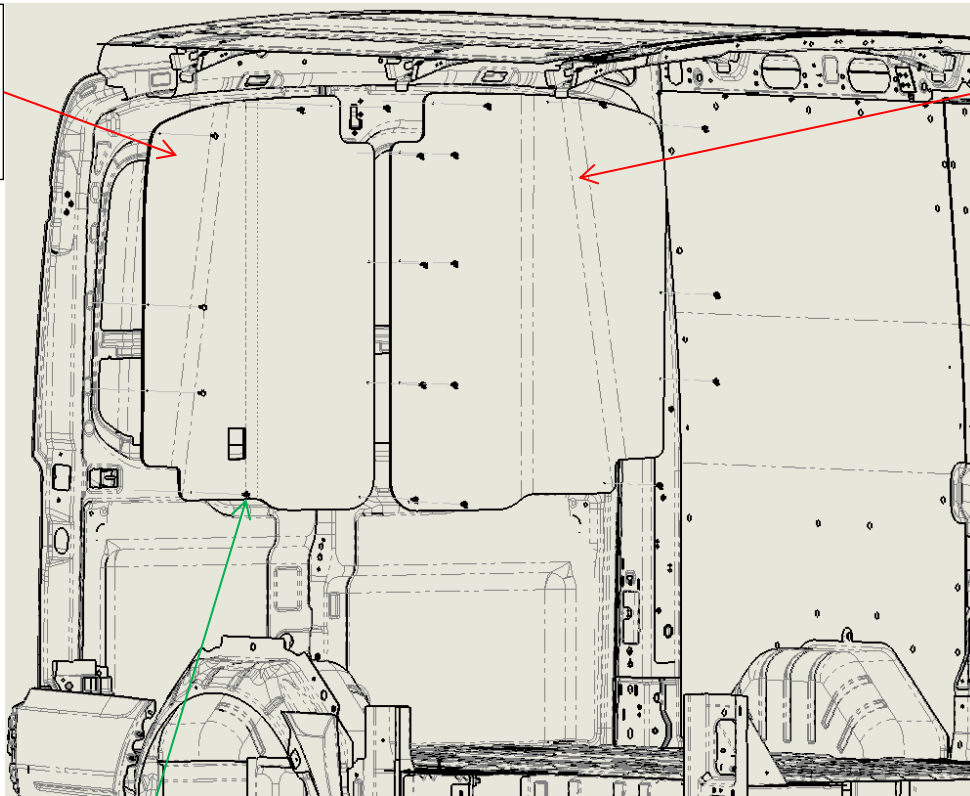


B, C

**3:** Install Item 15 and 16, Upper door panels,

- Align the Upper panels with the upper door contours as well as with the door lock opening.
- Install hardware (B, C), in the holes provided, on the top of the panel first, working your way down the panel to the bottom.

**Installation completed**

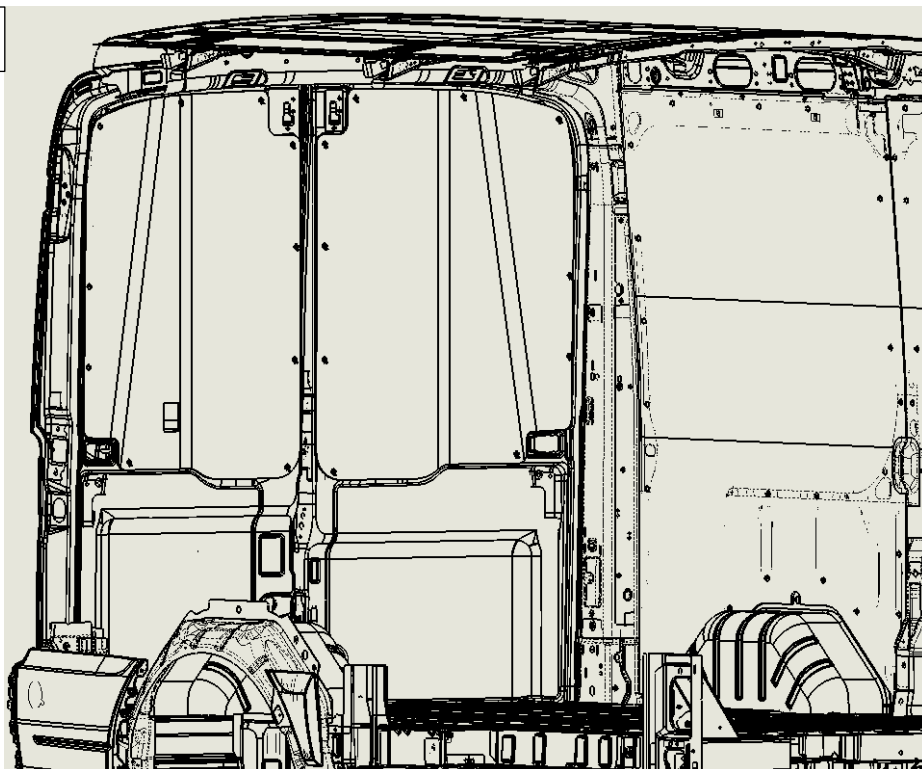

## Passenger Side Wall Liner Installation

ITEM 17  
SLIDING DOOR  
TOP PANEL

B, C

A


FRONT

REAR


A

ITEM 3  
REAR PASSENGER  
SIDE PANEL

ITEM 18  
SLIDING DOOR  
BOTTOM PANEL

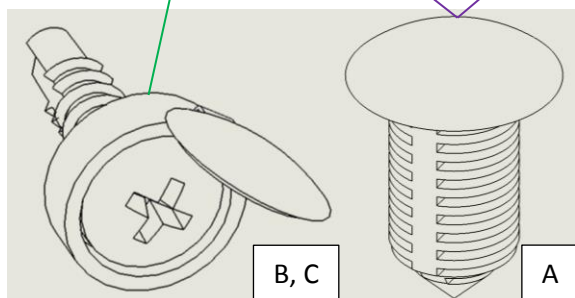

Installation completed

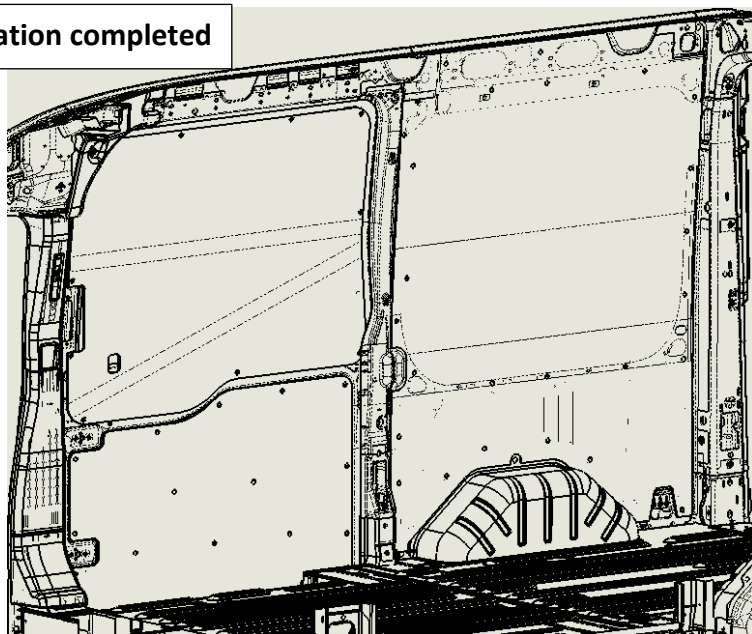

**4:** Install Item 3, Rear Passenger Side Panel.



- Align wheel well edge of the panel with the feature on the vehicle; position the contour of the panel to the vehicle wall.
- Install hardware (A), in the holes provided, on the bottom of the panel first, working your way up the panel to the top.
- Install hardware (A), in the holes provided.

**5:** Install Item 18, Bottom Sliding Door Panel.

First remove OEM bottom panel.

- Note: Sliding door must be closed to install panel;
- Insert panel into the sliding door sill cavity, align holes at the bottom half of the panel to the one on the door and insert hardware (A) in all of the holes.
- Install Item 17, Top Sliding Door Panel with hardware (B, C) in the holes provided, align the panel with the door seal leaving an equal space between the door seal and the panel, make sure the door lock opening is aligned with the door lock.

## Ceiling Liner Installation

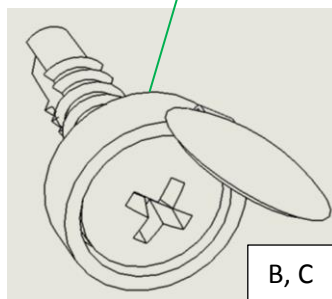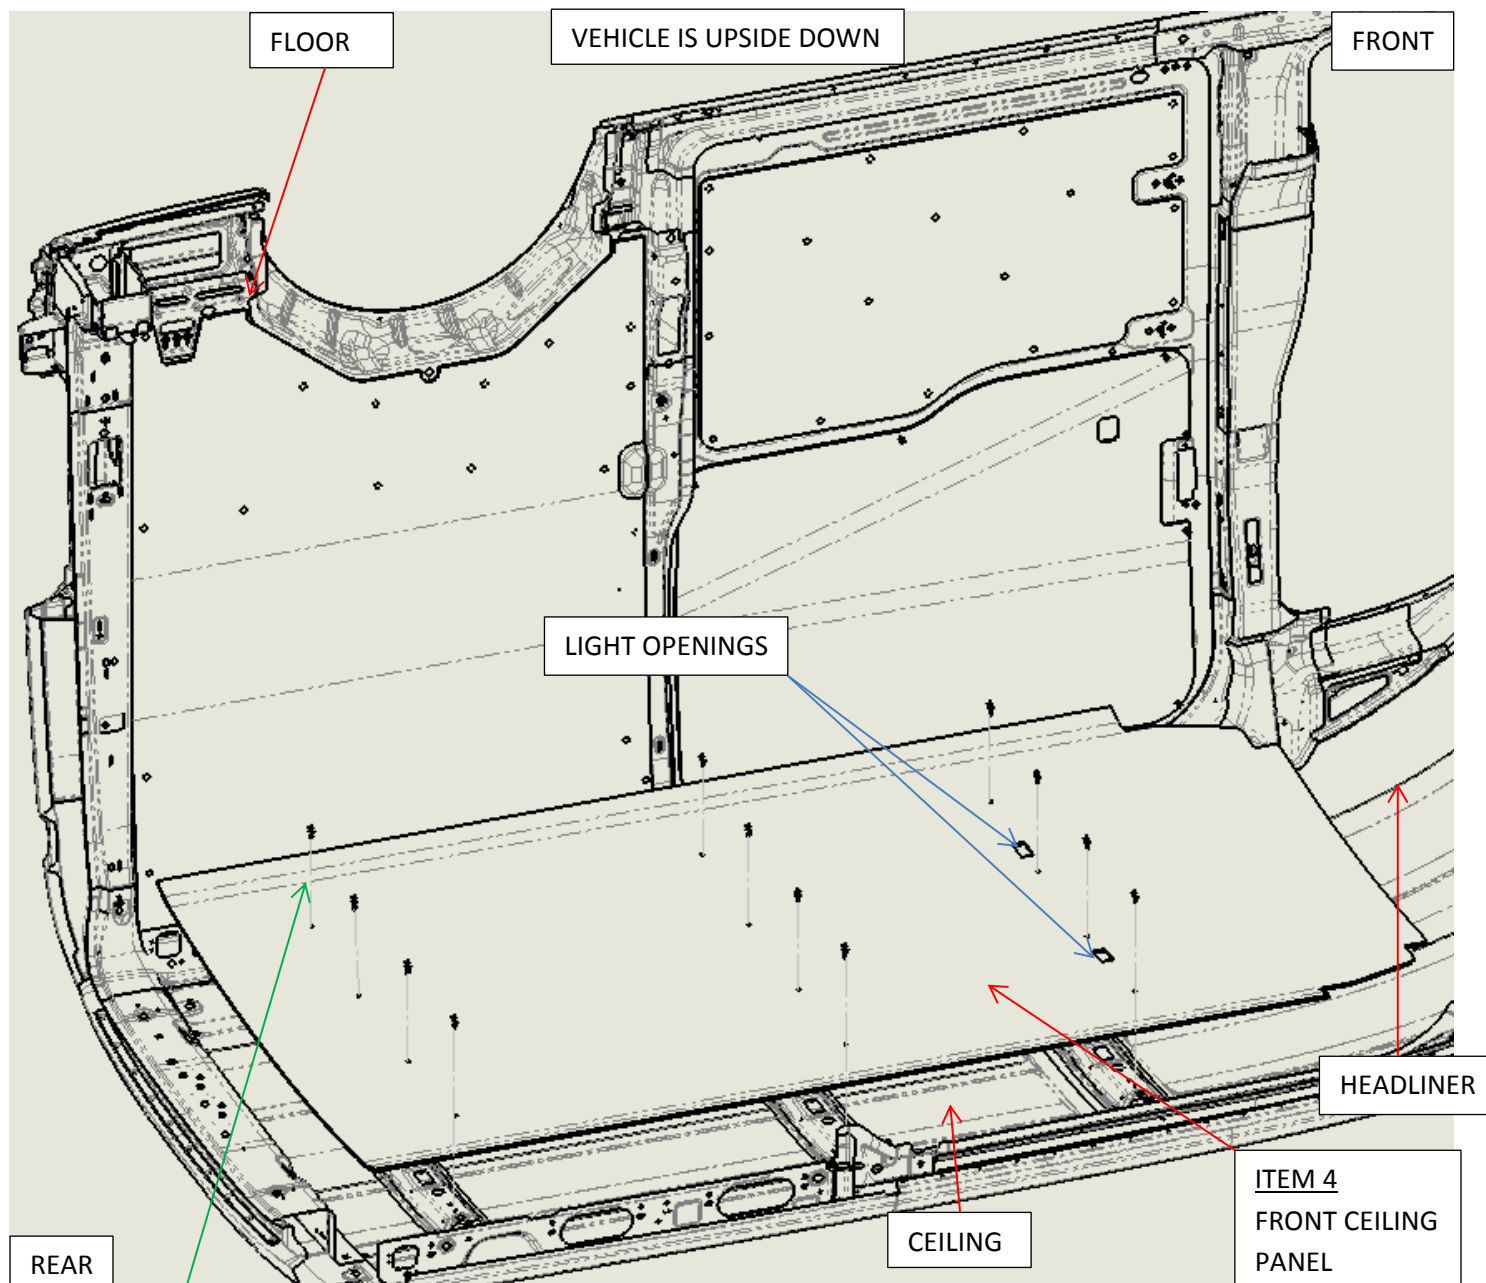

### 6: Install Item 4, Ceiling Panel.


- Align Ceiling panel with the feature on the vehicle in the front, insert the front of the panel between the headliner and the roof, and align the light openings to the lights on the ceiling.
- Align the outside holes at the center of the panel with the holes in the ceiling cross bows and install hardware (B,C) on each side; this will align the panel with the ceiling.
- Push the panel against the ceiling and install hardware (B,C), in the holes provided starting from the front working your way towards the rear.



## Ceiling Liner Installation

Installation completed

VEHICLE IS UPSIDE DOWN

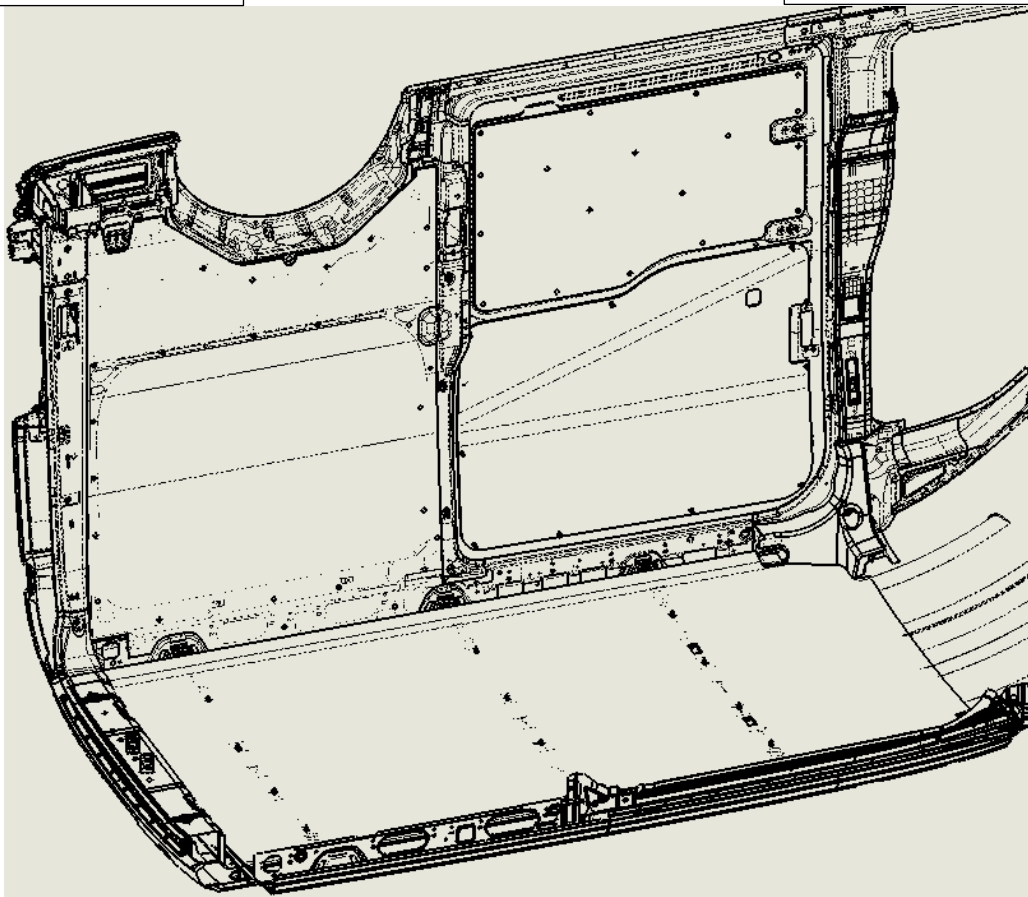

## Ceiling Sills Installation

FRONT



VEHICLE IS UPSIDE DOWN

ITEM 6  
CEILING SILL 1

PASSENGER SIDE

WALL


ITEM 7  
CEILING SILL 2

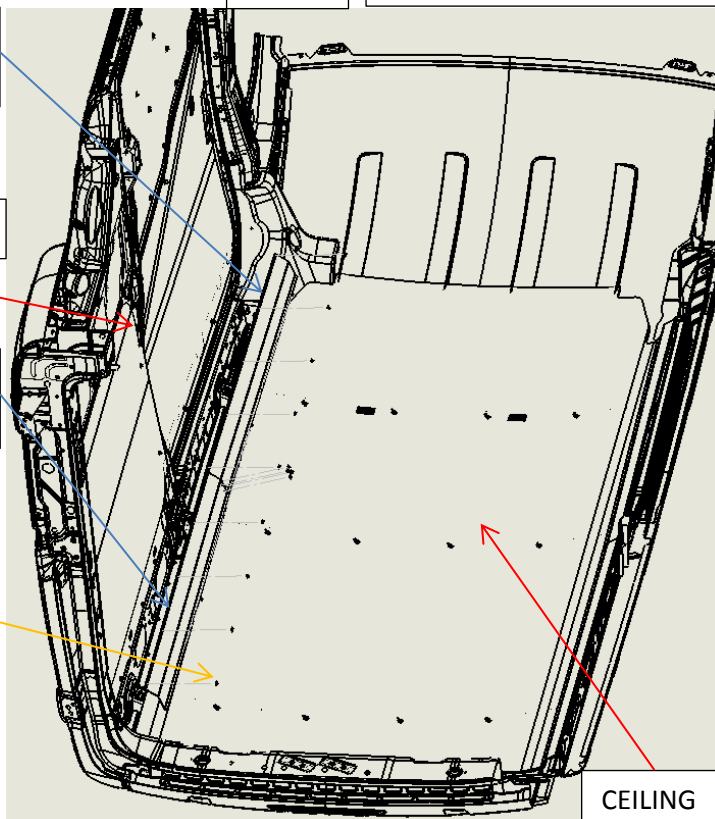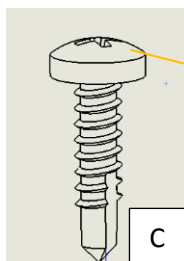



**7:** Assemble Item 6 and item 7 together with the Item 20, Sill Joining Plate (SHOWN BELOW), with hardware (C) in the holes provided.

- Install the Sill assemblies on the Driver side as well as on the Passenger side using hardware (C) in the holes provided on the Sills.
- First, Install the Sill assembly with hardware (C) on the wall, afterwards install hardware (C) only on the roof cross bows aligned with the retainers holding the ceiling panels.

ITEM 20 SILL JOINING PLATE

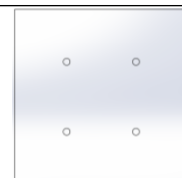


Ceiling Sills Installation Details

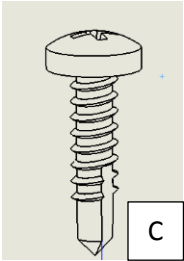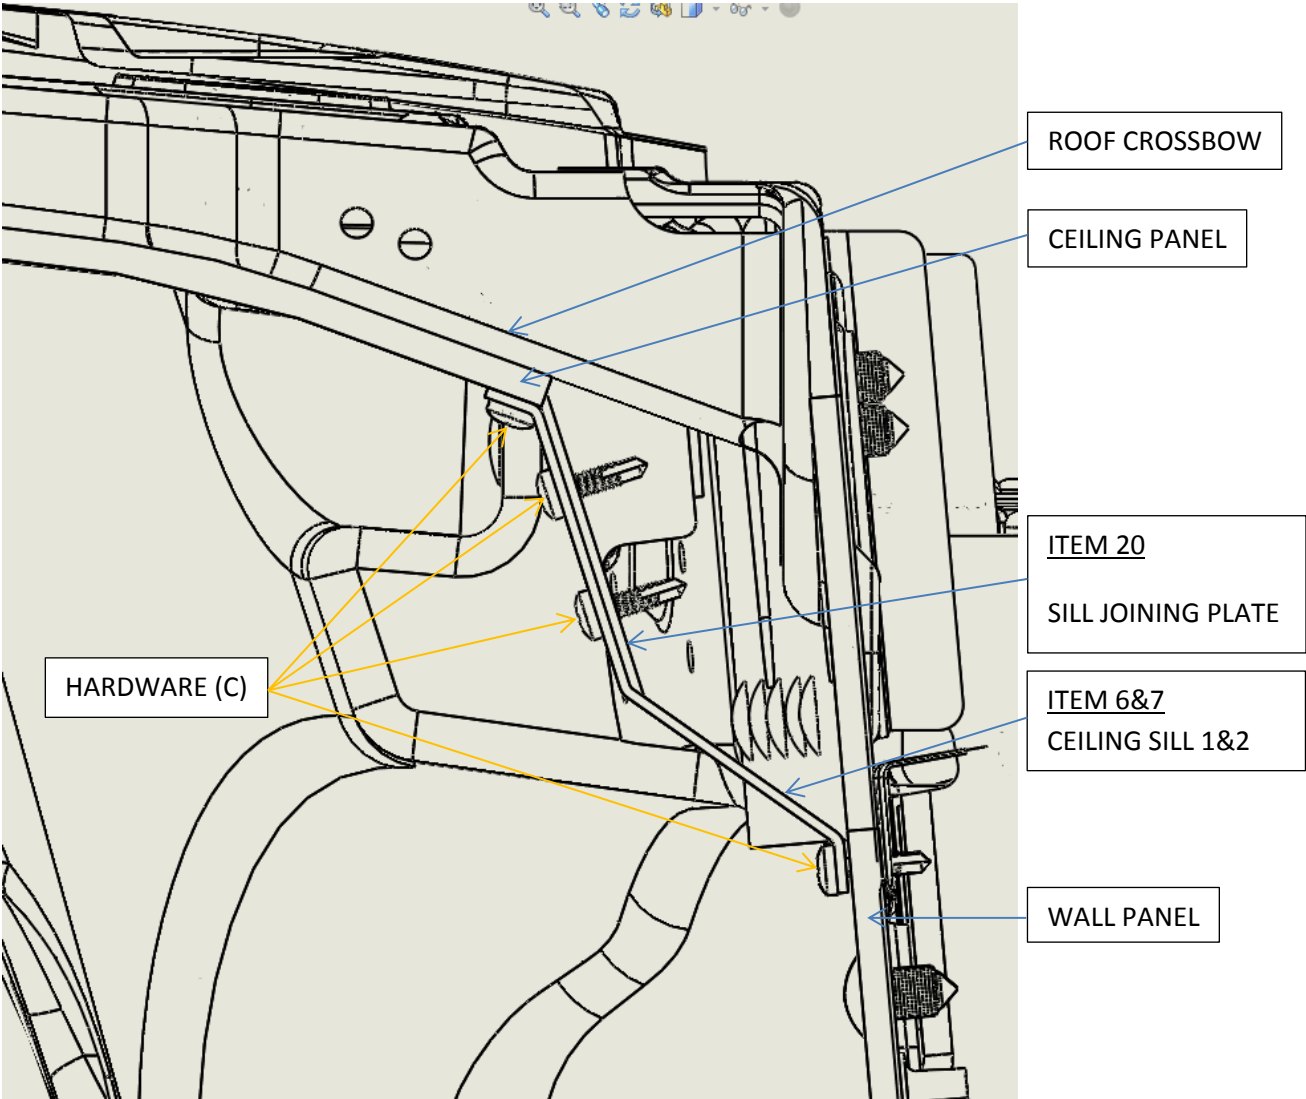




Installation completed

PASSENGER SIDE


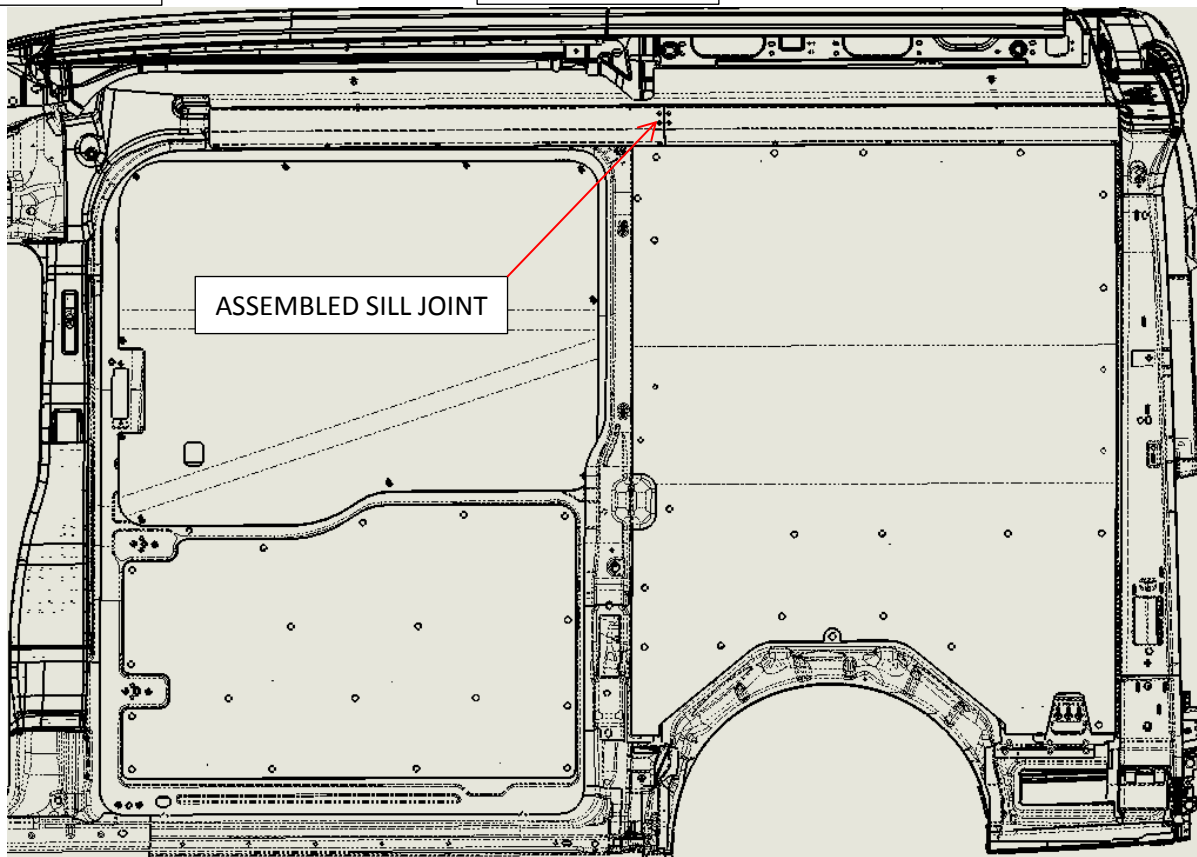


DRIVER SIDE

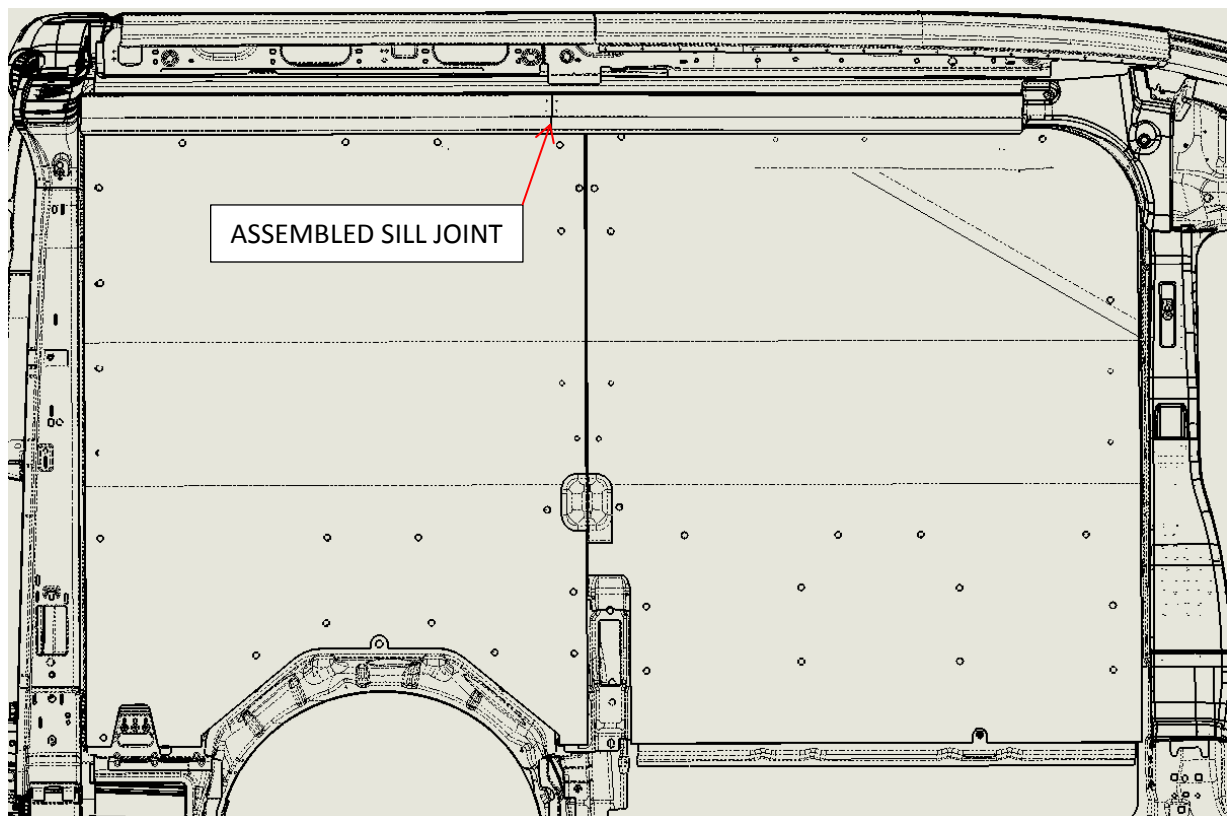

## Floor and Floor Sill Installation

DRIVER SIDE

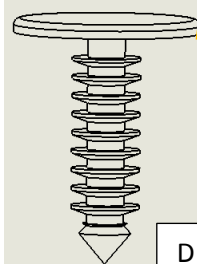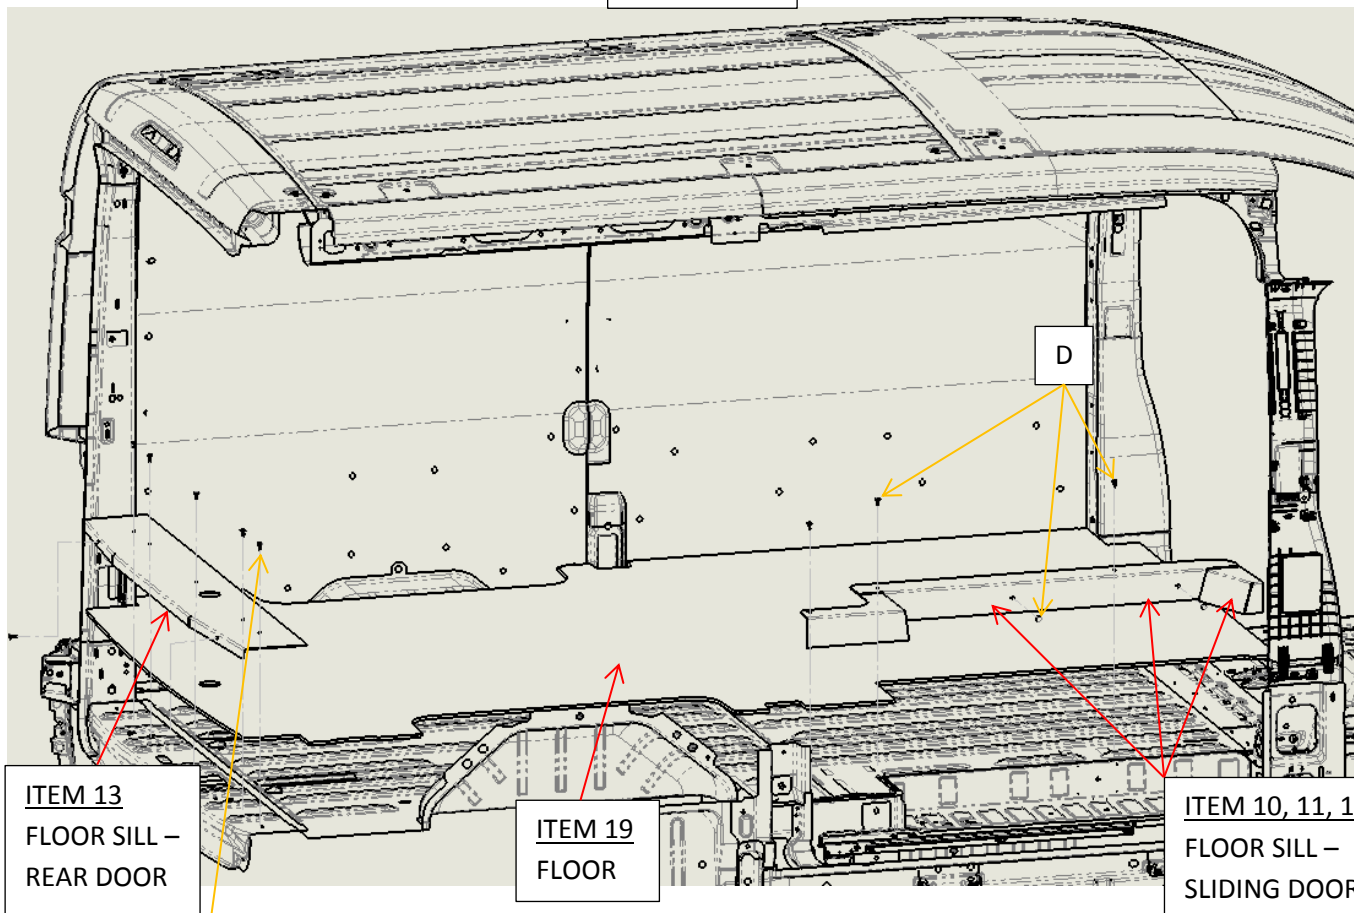

D

**8:** Install Items 19, FLOOR and Items 10, 11, 12, 13 FLOOR SILLS.

- Install floor inside the vehicle.
- Align the floor sills in their proper location with the floor edges and install hardware (D), in the holes provided, if there are no holes drill 6mm holes for each hardware (D).

**Installation completed**

