
# **INSTALLATION GUIDE**

### **REGULAR INSTALL**



### **INVERTED INSTALL**

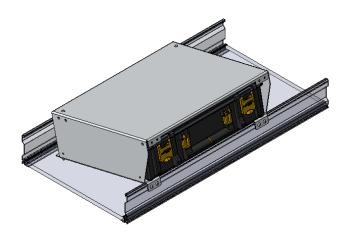

# 62-U5070 Partskeeper Carry Case (ALUMINUM)



# **QUICK START GUIDE**


## Phase 1 - Assembly

□ 1.1 Setup	3 - 4

### Phase 2 - Installation

□ 2.1 Regular Install	5
□ 2.2 Inverted Install.	6 - 7

# **REQUIRED ITEMS**

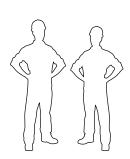


2 PERSONS

- □ Cordless Impact
- □ Cordless Drill
- □ Rivet Gun
- Tape Measure
- Marker
- ☐ 1/2" Socket
- ☐ 1/2" Drill Bit
- ☐ 3/16" Drill Bit
- ☐ 5/16" Driver Bit

# PHASE 1 - ASSEMBLY

### 1.1 SETUP

**1.1.1** Unpack components; compare with the bill of materials.

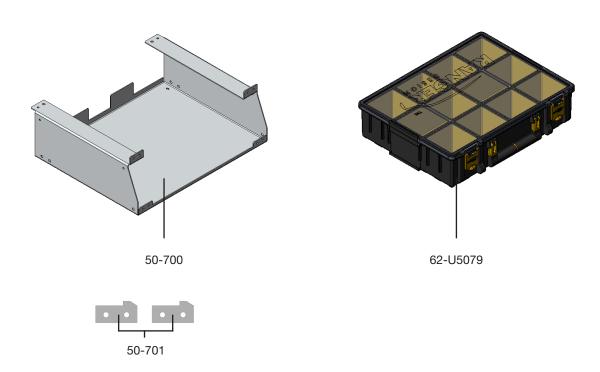

#### **1.1.2** Verify all parts are present.

#### **BILL OF MATERIALS**

Item No.	Description	Qty.
50-700	Partskeeper Holder	1
50-701	Slide For Parskeeper	2
62-U5079	Plastic Partskeeper Case	1
94-5011	Assembly Fastener Kit	1
96-5011	Install Fastener Kit	1

#### 1.1.3 Fastener kits.

#### 94 - 5011 Fastener Kit **Fastener Assembly** 2× FOR ANOTHER 50-700 Closed Rivet 2× # 96-201 3/16" × 1/8" ALUM/STEEL #96-201 Closed Rivet 4× FOR INVERTED INSTALL Closed Rivet 3/16" × 3/8" # 96-203 #96-203 Closed Rivet ALUM/STEEL 96 - 5011 Fastener Kit **Fastener Assembly** Carriage Bolt 4× FOR REGULAR INSTALL 2× # 90-495 5/16"-18 × 1 - 1/4" SS304 #96-201 Closed Rivet Screw HFH # 92-200 #10 - 16 × 3/4" ZINC 2× FOR REGULAR INSTALL #92-174 Screw #10 × 3/4" Screw #10 × 3/4" 2× # 92-174 ZINC 4× FOR INVERTED INSTALL Serrated Nut 2× 5/16"-18 # 94-116 #92-200 Screw #10 × 3/4" ZINC Closed Rivet 2× FOR INVERTED INSTALL 4× # 96-201 3/16" × 1/8" ALUM/STEEL #90-495 Carriage Bolts 1-1/4" #98-157 Spacer

2×

#94-116 Serrated Nut

# 98-157

Spacer


**NYLON** 

0.375" ID, × 1.0" OD × 0.25" LONG


# PHASE 2 - INSTALL


#### 2.1 REGULAR INSTALL

- 2.1.1 Place the partskeeper holder on top of 14" deep shelf or deeper.
  - Mark the holes from the partskeeper holder to the shelf extrusion, then drill the mark using 3/8" drill bit.

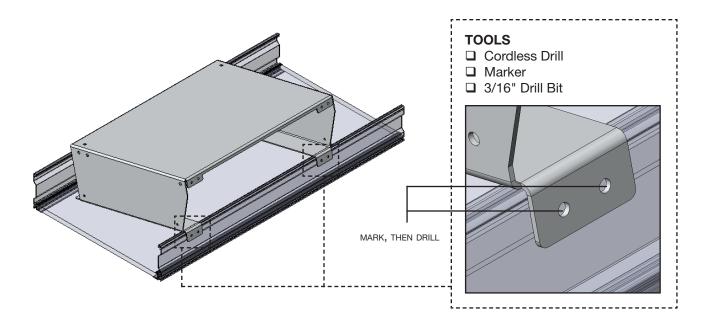

- 2.1.2 Install the partskeeper holder to the shelf tray by riveting and screwing the partskeeper holder.
  - After installing the partskeeper holder slide the partskeeper case inside the partskeeper holder.

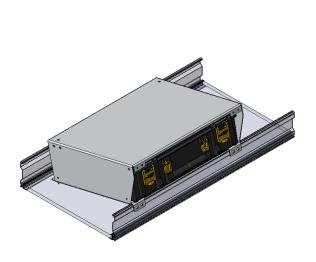


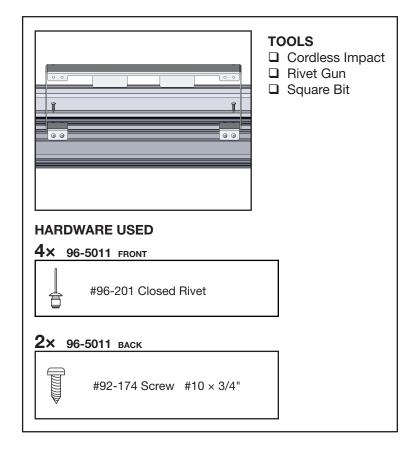


# PHASE 2 - INSTALL

#### 2.2 INVERTED INSTALL

**2.2.1** Attach the partskeeper slider to the partskeeper holder.

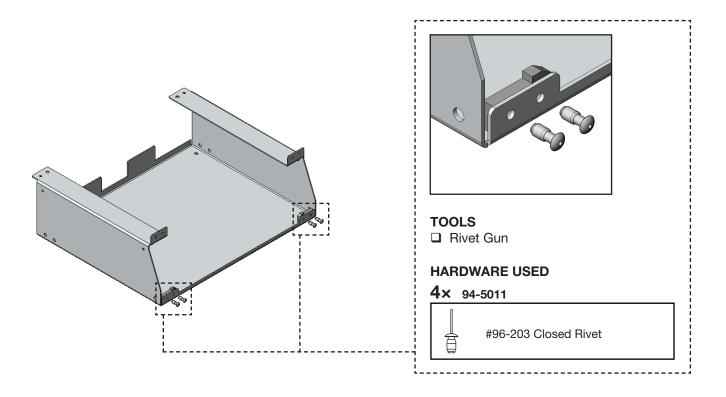


- 2.2.2 Place the partskeeper holder under the 14" deep shelf or deeper.
  - Mark the holes from the partskeeper holder to the shelf tray playwood, then drill the mark using 1/2" drill bit.

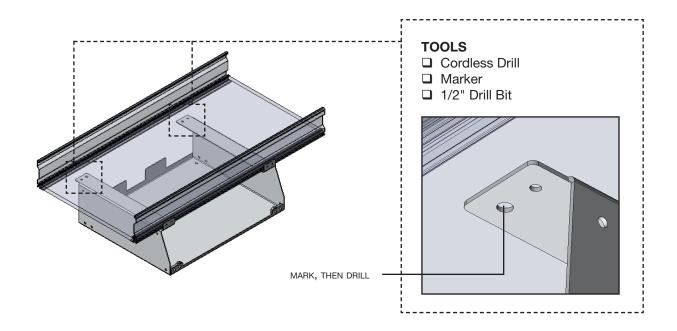

- **2.2.3** Install the partskeeper holder to the shelf tray by bolting ang screwing partskeeper holder to the shelf tray.
  - After installing the partskeeper holder slide the partskeeper case inside the partskeeper holder.



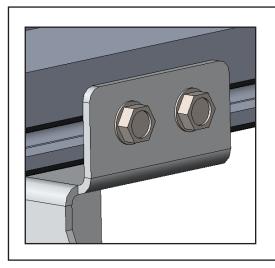

#### **TOOLS**


- □ Cordless Impact
- □ 5/16" Bit

#### **HARDWARE USED**

4× 96-5011 FRONT



#92-200 Screw #10 × 3/4"

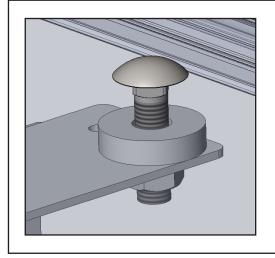

#### **TOOLS**

- □ Cordless Impact
- ☐ 1/2" Socket

#### **HARDWARE USED**

2× 96-5011 BACK



#90-495 Carriage Bolts 1-1/4"




#98-157 Spacer



#94-116 Serrated Nut

### **REGULAR INSTALL**

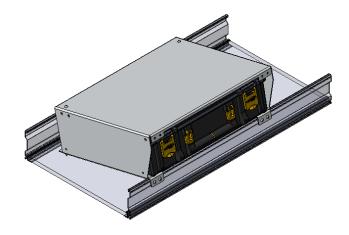

## **INVERTED INSTALL**



"You have successfully installed your 62-U5070

Thank you for doing business with us."

For any feedback or suggestions you may have, please contact: <a href="mailto:cs@rangerdesign.com">cs@rangerdesign.com</a>



